 





 
 
 

 


 


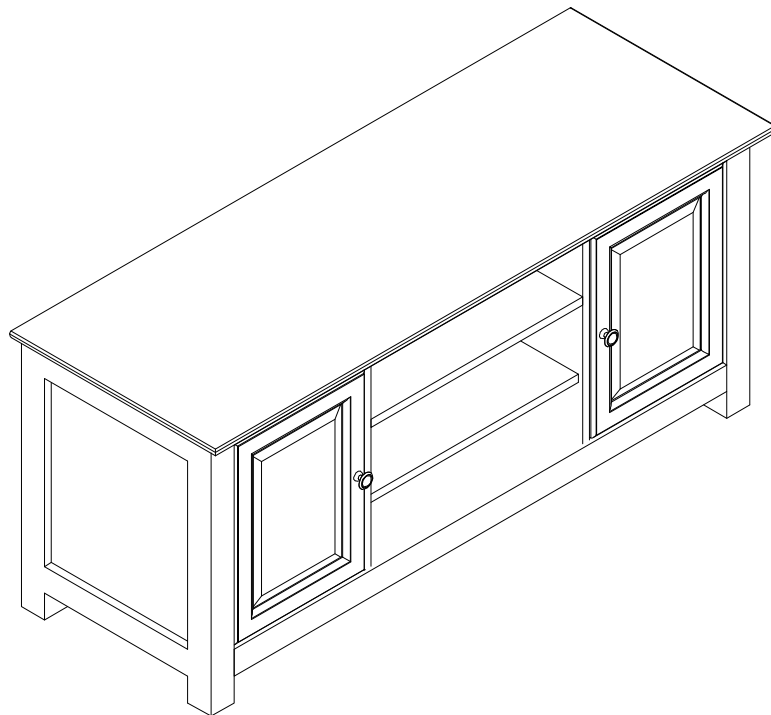

48 INCH LOW PROFILE TV STAND





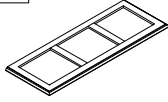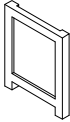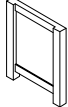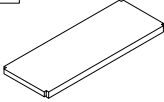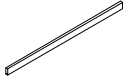


 








CF100448



Parts List

1 	2 	3 	4 	5 
Top panel 1 PC	Left side frame 1 PC	Right side frame 1 PC	Left partition panel 1 PC	Right partition panel 1 PC
6 	7 	8 	9 	10 
Fixed panel 1 PC	Base 1 PC	Back panel 1 PC	Front top rail 1 PC	Left side door 1 PC
11 	12 	13 		
Right side door 1 PC	Middle shelf panel 1 PC	L/R shelf panel 2 PCS		


Hardware List

A 	B 	C 	D 	E 
Cam Lock 14 PCS	Cam Bolt 14 PCS	Wooden Dowel 22 PCS	Knob 2 PCS	Long Allen Bolt 4 PCS
F 	G 	H 	I 	J 
Short Allen Bolt 4 PCS	Allen Wrench 1 PC	Magnet 2 PCS	Round Head Screw 24 PCS	Shelf Holder 12 PCS
K 	L 	M 	N 	O 
Round Head Bolt 2 PCS	Flat Head Screw 4 PCS	Flat Washer 4 PCS	Spring Washer 4 PCS	Barrel Nut 4 PCS
P 	<p>Tools needed: Allen Wrench(Part#G) Included. Phillips Head Screwdriver (Not included)</p>			
Sound Bar Stopper 2 PCS				

STEP 1



Insert Cam Bolts (B) into pre-drilled holes of parts 1, 2, 3, 4, 5 & 6 using a Phillips Head screwdriver. Insert Sound bar stoppers (P) into pre-drilled holes of Panel (6) by turning clockwise.

 Note: If you will not be using the AroundSound system with this stand, it is not necessary to insert the Sound Bar stoppers (P).

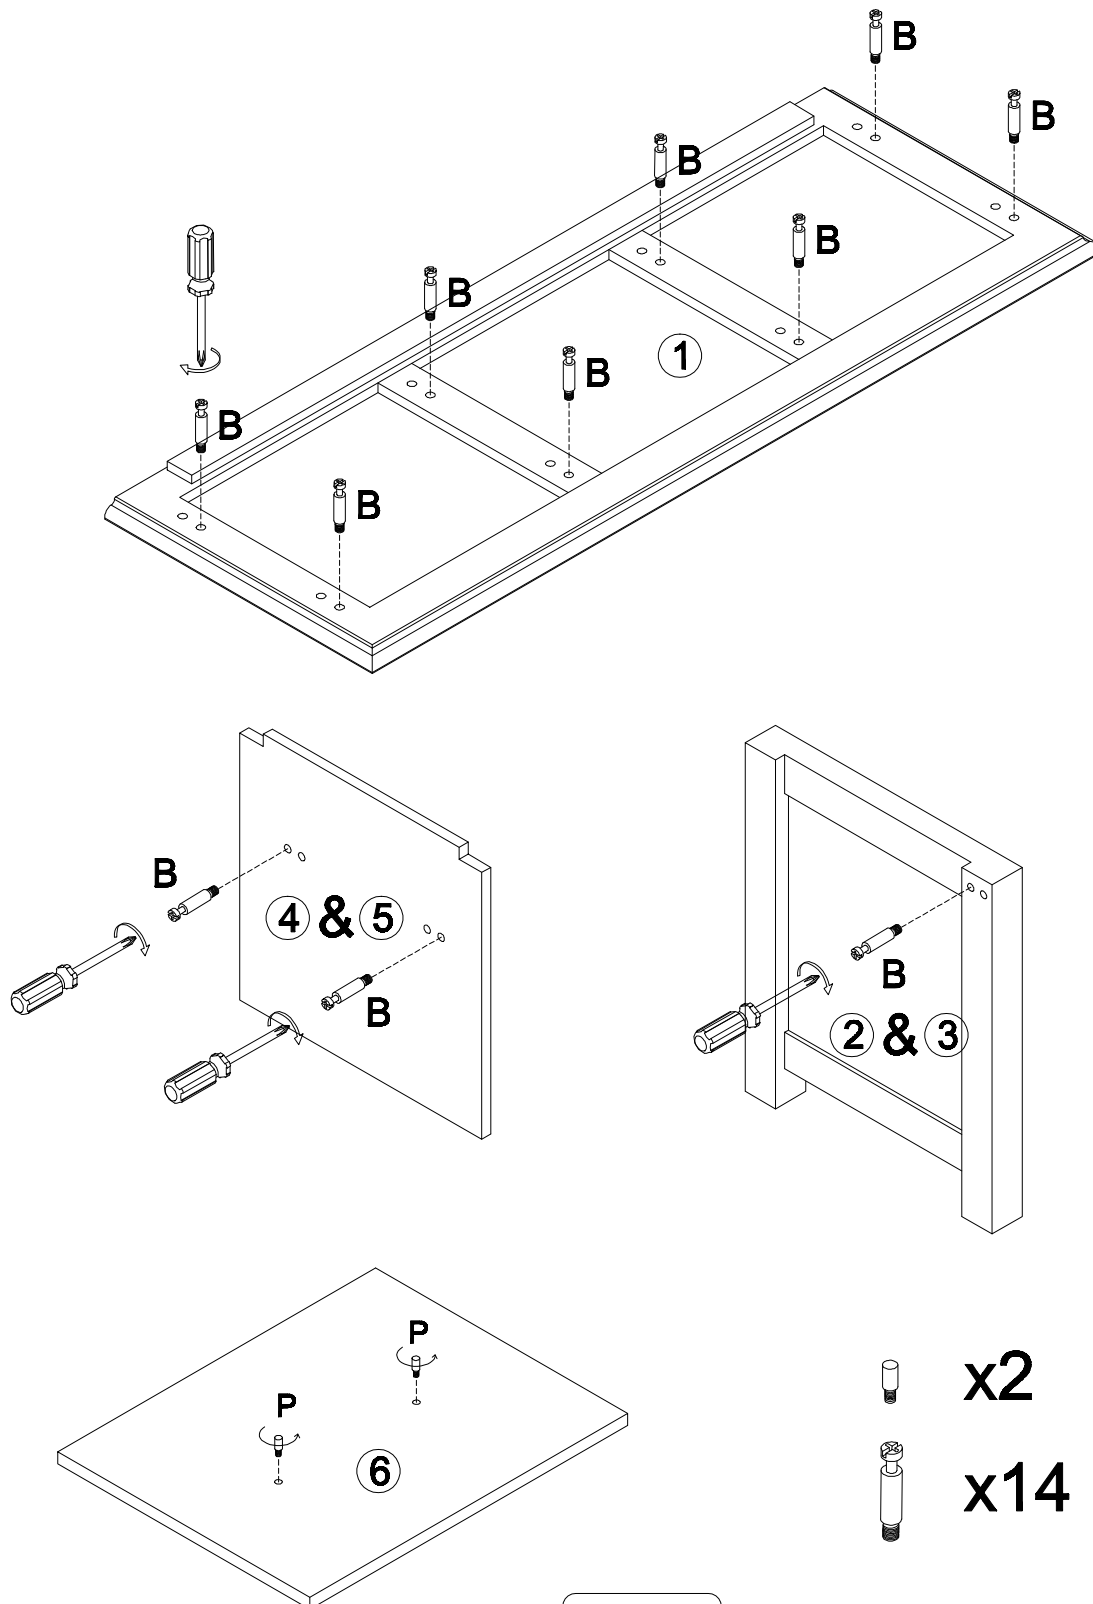




STEP 2

  Attach panels 4 & 5 to panel 6 using Cam locks (A) and wood dowels (C) as shown. Note: Sound bar stoppers in Panel (6) should be facing up toward the notched cutouts in Panels (5 & 6).

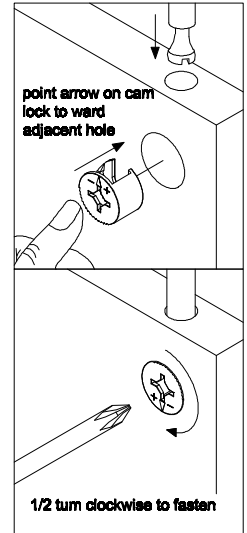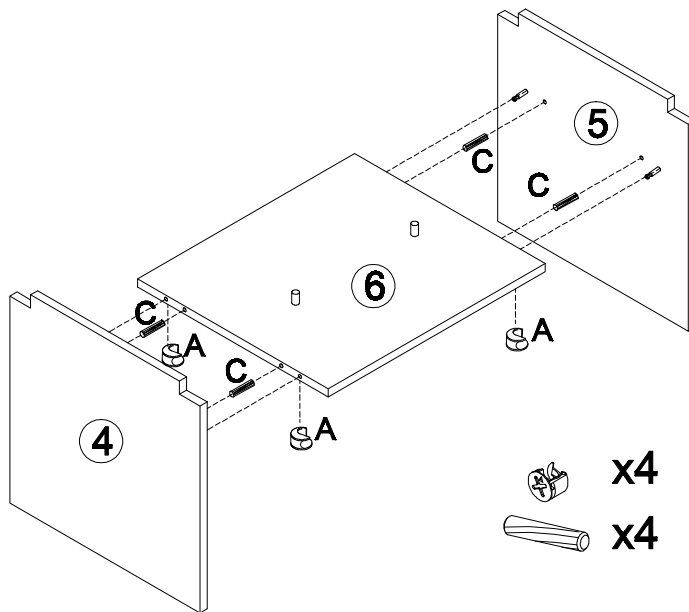



STEP 3

   Turn assembled Panels (4, 5 & 6) on their side on a flat surface. Attach Base (7) using Long Allen Bolt (E), Spring Washer (N), Flat Washer (M), Wood Dowels (C), and Barrel Nuts (O) as shown.

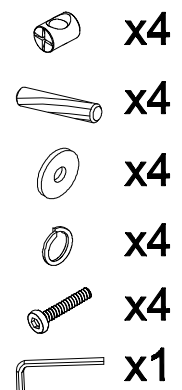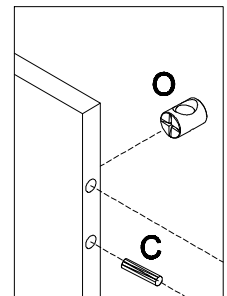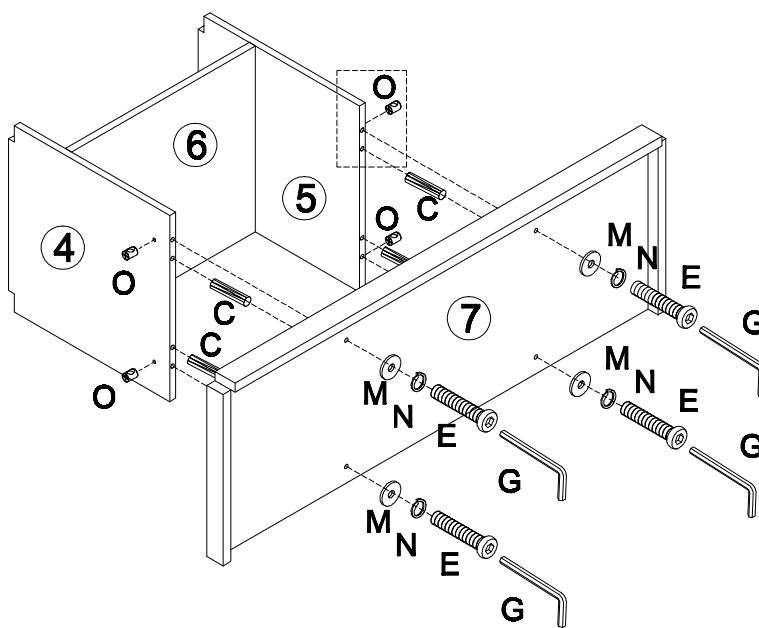



STEP 4

  Attach Front Top Rail (9) to Panels (4 & 5) using Flat Head Screws (L) into the pre-drilled holes. Attach Left & Right Side Frames (2 & 3) to Base (7) & Rail (9) using Cam Locks (A), Short Allen Bolts (F) & Wood Dowels (C) as shown.

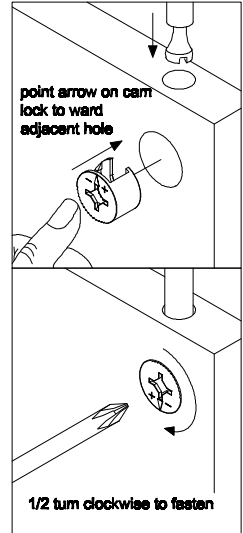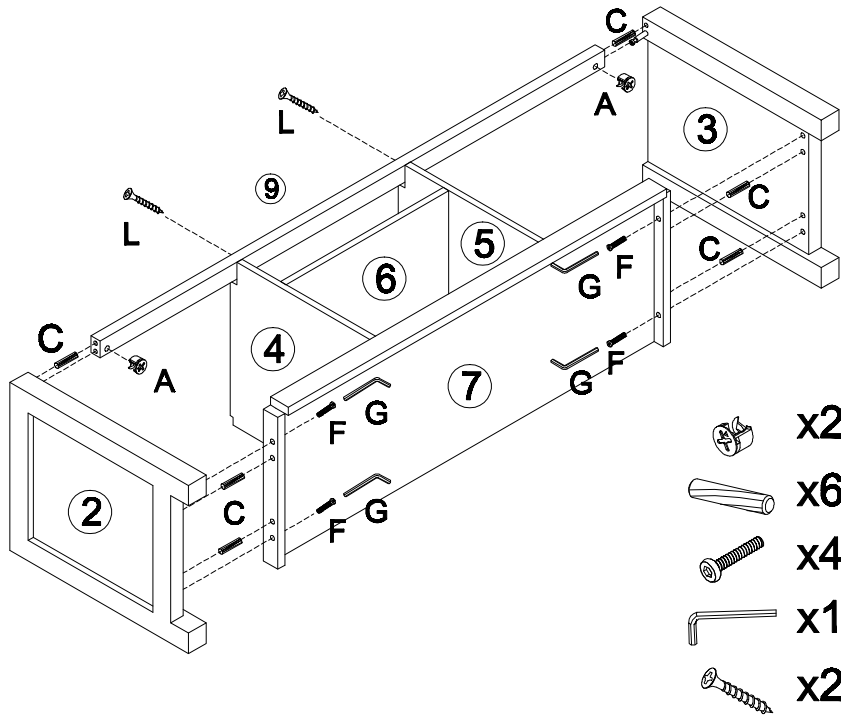


STEP 5

  Turn assembled parts upright on a flat level surface. Attach Top (1) to cabinet using Cam Locks (A) & Wood Dowels (C) as shown.

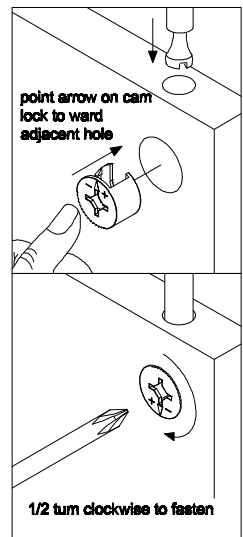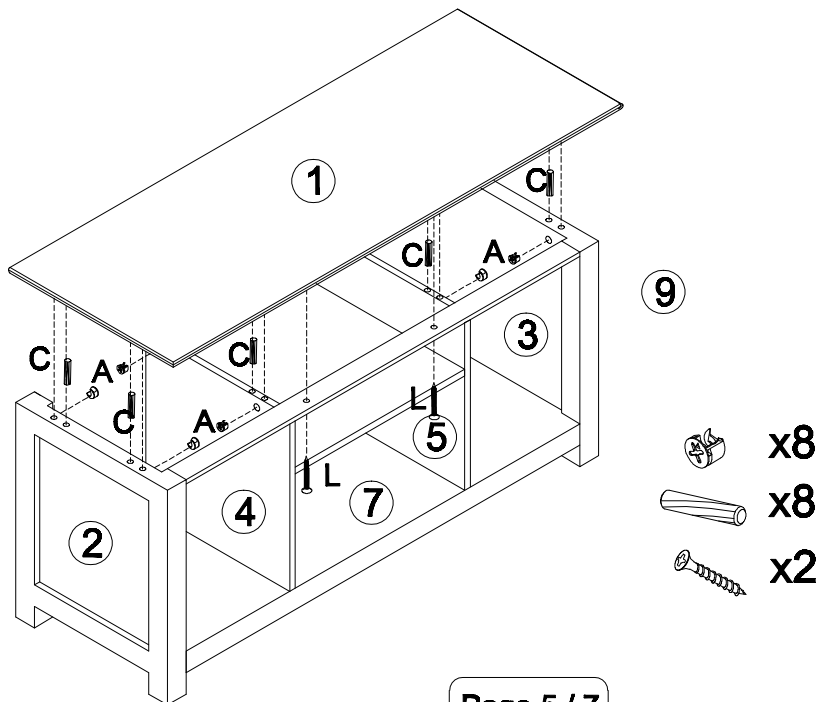


STEP 6

 Fit Back Panel (8) into place and attach to the cabinet using Round Head Screws (I) as shown. Note: Be sure that the cabinet is square and level before securing the back panel into place.

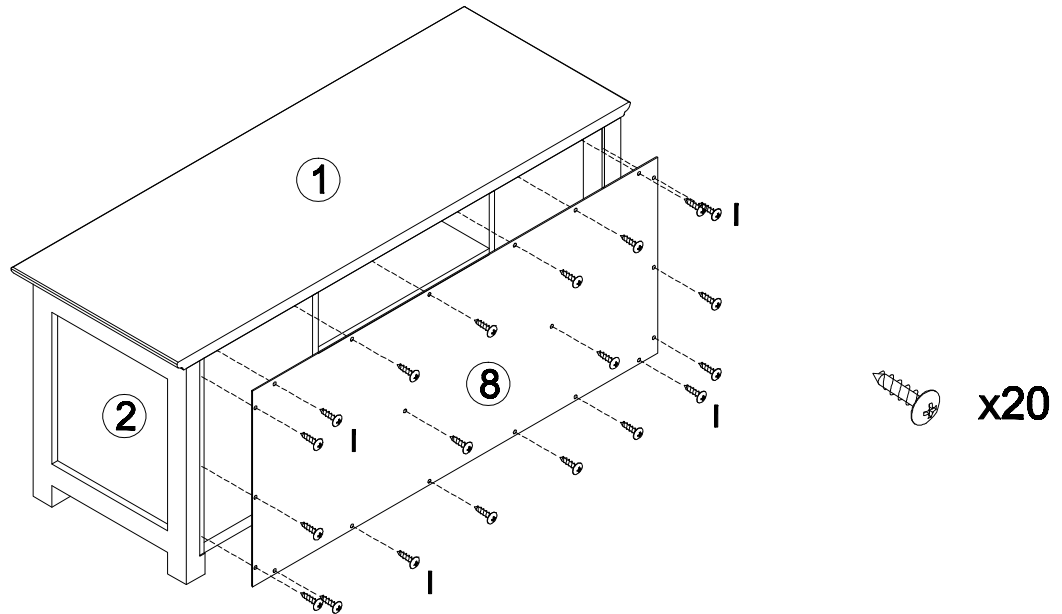

STEP 7

 Insert Shelf holders (J) into their desired position inside the cabinet. Add adjustable shelves (12 & 13).

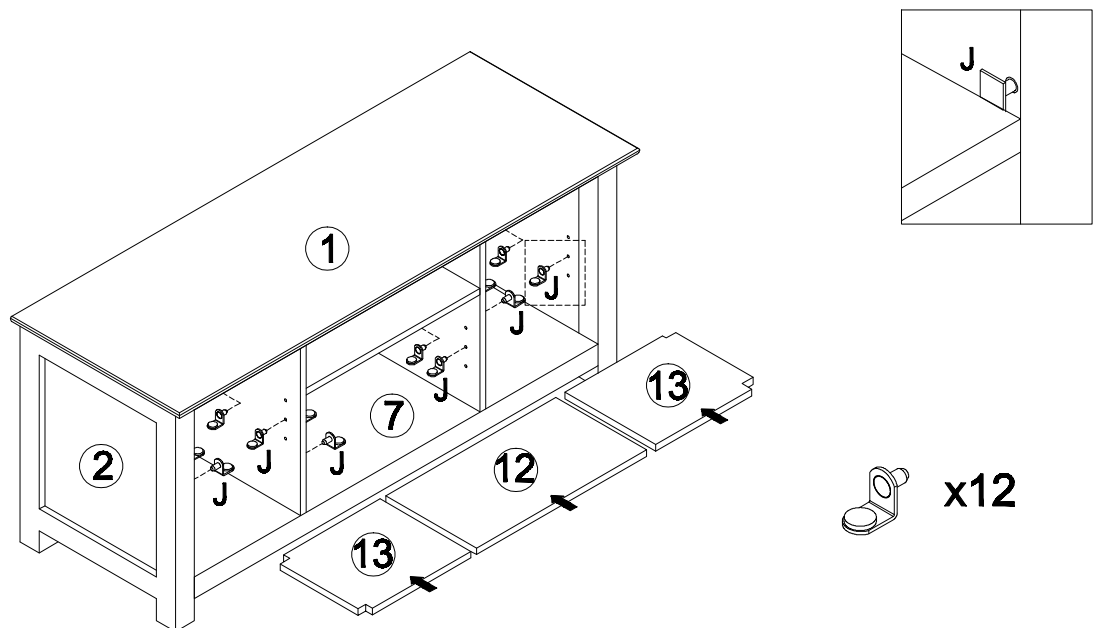

STEP 8

Attach Magnets (H) to Front Top Rail (9) using Round Head Screws (I) as shown. Attach Knobs (D) to the doors using Round Head Bolts (K).

Attach doors to cabinet by placing bottom Pin Hinge into pre-drilled holes in Base (7) & depressing top spring loaded Pin Hinges to fit doors into place.

Note: Be sure Pin Hinges (top & bottom) have fully extended into the pre-drilled holes to secure the doors into place.

Congratulations! You are finished.

