

CROSLEY FURNITURE


Dining Chair CF501018

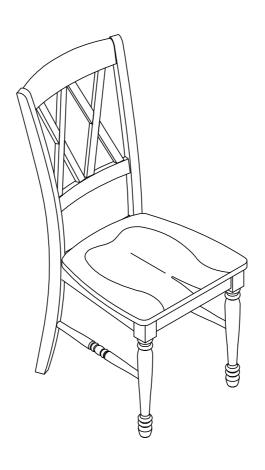

PART LIST

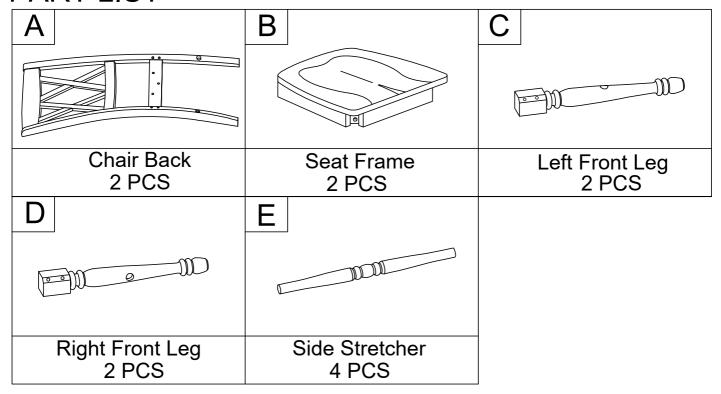

HARDWARE LIST

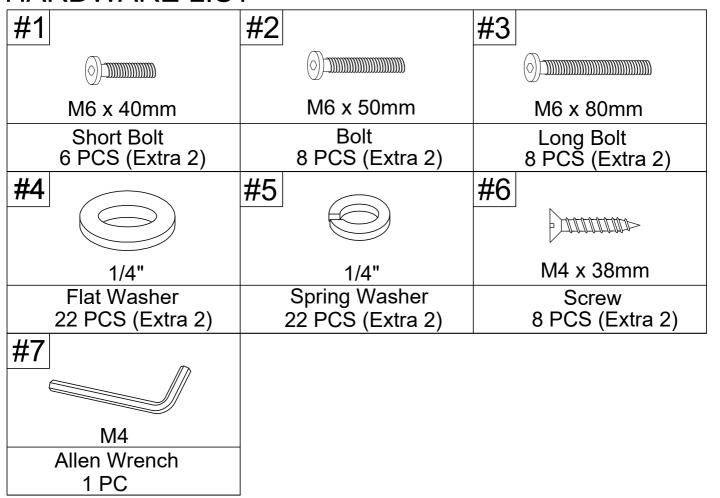


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Step 1. Carefully turn seat frame (part B) upside down on a soft protective surface such as carpet. Attach left front leg (part C) and right front leg (part D) to seat frame (part B) using flat washers (part #4), spring washers (part #5), bolts (part #2) and allen wrench (part #7). Note: Please do not fully tighten bolts until unit is fully assembled.

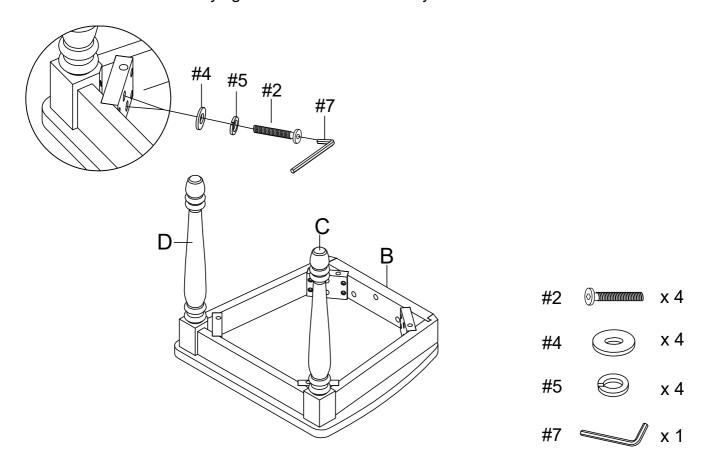


Step 2. Carefully place chair back (part A) down on a soft protective surface such as carpet.

Attach assembled unit (parts B, C & D) to chair back (part A) using side stretchers (part E), flat washers (part #4), spring washers (part #5), short bolts (part #1) and allen wrench (part #7).

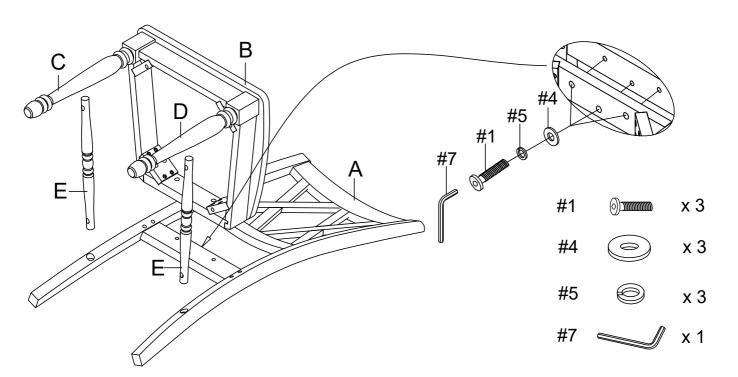


Step 3. Secure seat frame (part B) to chair back (part A) using flat washers (part #4), spring washers (part #5), long bolts (part #3) and allen wrench (part #7).

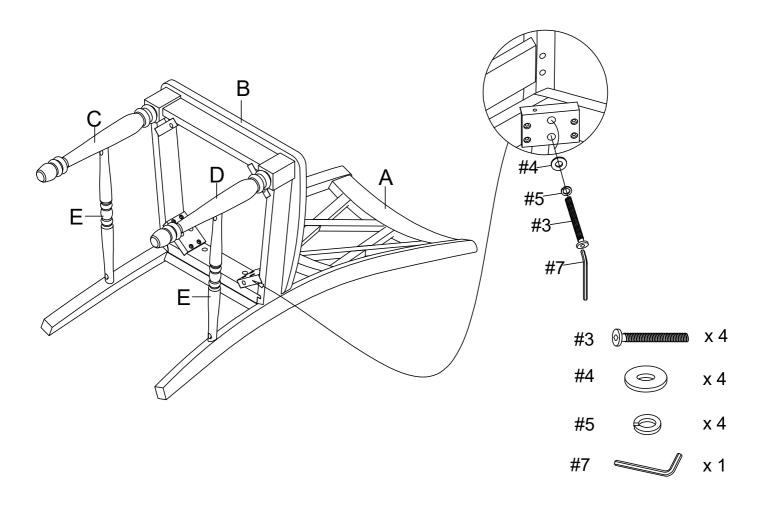

Step 4. Insert screws (part #6) into the holes of side stretchers (part E) and tighten using a phillips head screwdriver.

Note: Please fully tighten all bolts at this time.

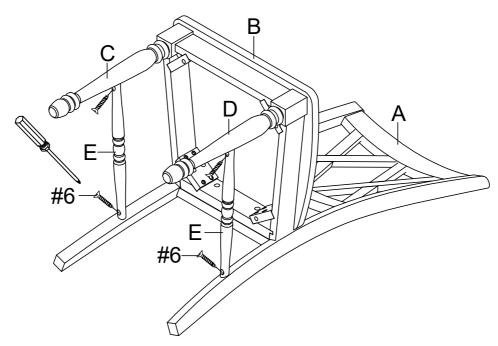

Step 5. Carefully turn unit upright. Repeat steps 1-4 to assemble remaining chair.