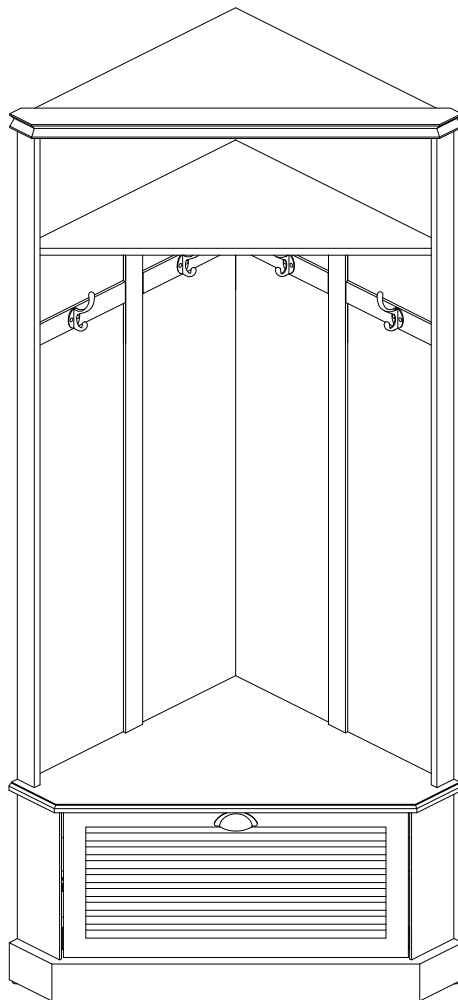 
















CROSLEY

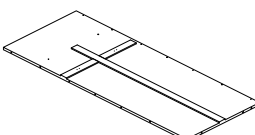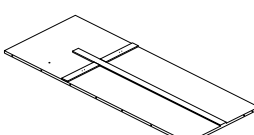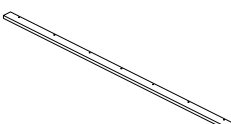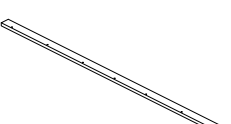            FURNITURE

 
 
 
 
 
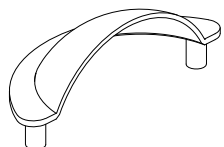 
 
 
 
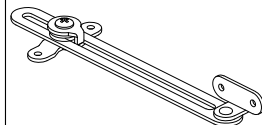 
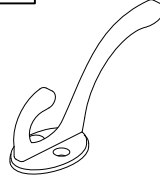 
 

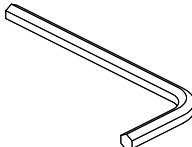 

Corner Hall Tree CF6038



PART LIST


A		B		C		D		E	
Top Panel 1 PC	Bottom Panel 1 PC	Upper Left Back Panel 1 PC	Upper Right Back Panel 1 PC	Seat Panel 1 PC					
F		G		H		I		J	
Upper Fixed Panel 1 PC	Bottom Fixed Shelf 1 PC	Upper Left Panel 1 PC	Upper Right Panel 1 PC	Bottom Left Panel 1 PC					
K		L		M		N			
Bottom Right Panel 1 PC	Bottom Middle Panel 1 PC	Bottom Back Panel 2 PCS	Door Panel 1 PC						

HARDWARE LIST

#1 	#2 	#3 	#4 	#5  Ø3*12mm
Wood Dowel 28 PCS (Extra 1)	Cam Bolt 25 PCS (Extra 1)	Cam Lock 25 PCS (Extra 1)	Magnet 1 PC	Round Head Screw 2 PCS (Extra 1)
#6 	#7  Ø5/32"*5/8"	#8  Ø1/4"*2"	#9 	#10 
Handle 1 PC	Round Head Bolt 2 PCS (Extra 1)	Bolt 3 PCS (Extra 1)	Barrel Nut 3 PCS	Safety Hinge 1 PC
#11 	#12  Ø3*12mm	#13  Ø3*12mm	#14 	#15 
Hook 4 PCS	Flat Head Screw 12 PCS (Extra 1)	Round Head Screw 20 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

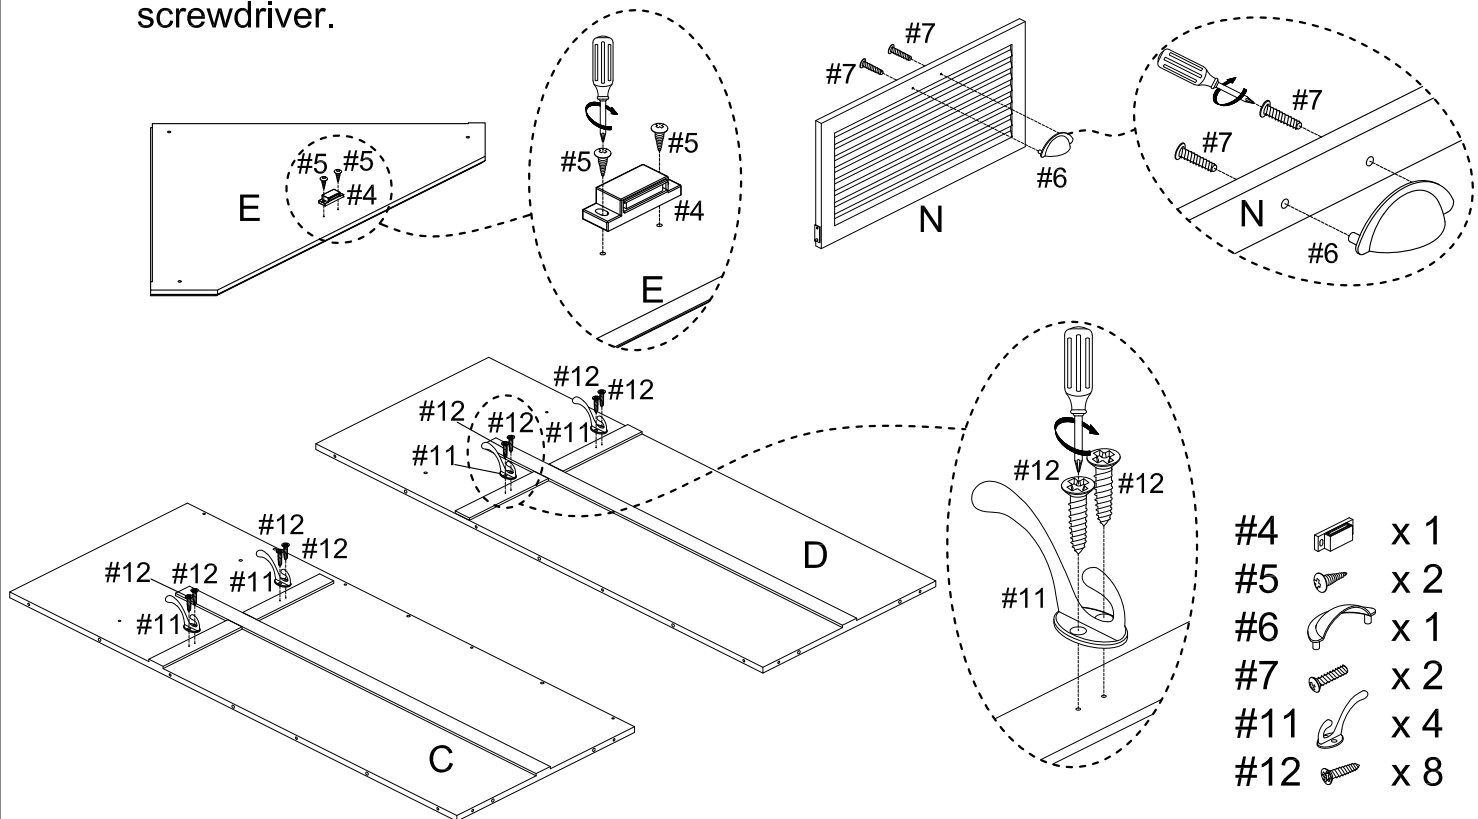 Step 1. Attach magnet (part #4) to seat panel (part E) using round head screws (part #5) and phillips head screwdriver. Attach handle (part #6) to door panel (part N) using round head bolts (part #7) and phillips head screwdriver. Attach hooks (part #11) to panels (parts C & D) using flat head screws (part #12) and phillips head screwdriver.





Step 2. Attach cam bolts (part #2) to panels (parts A, C, D, E, H & I) using phillips head screwdriver.

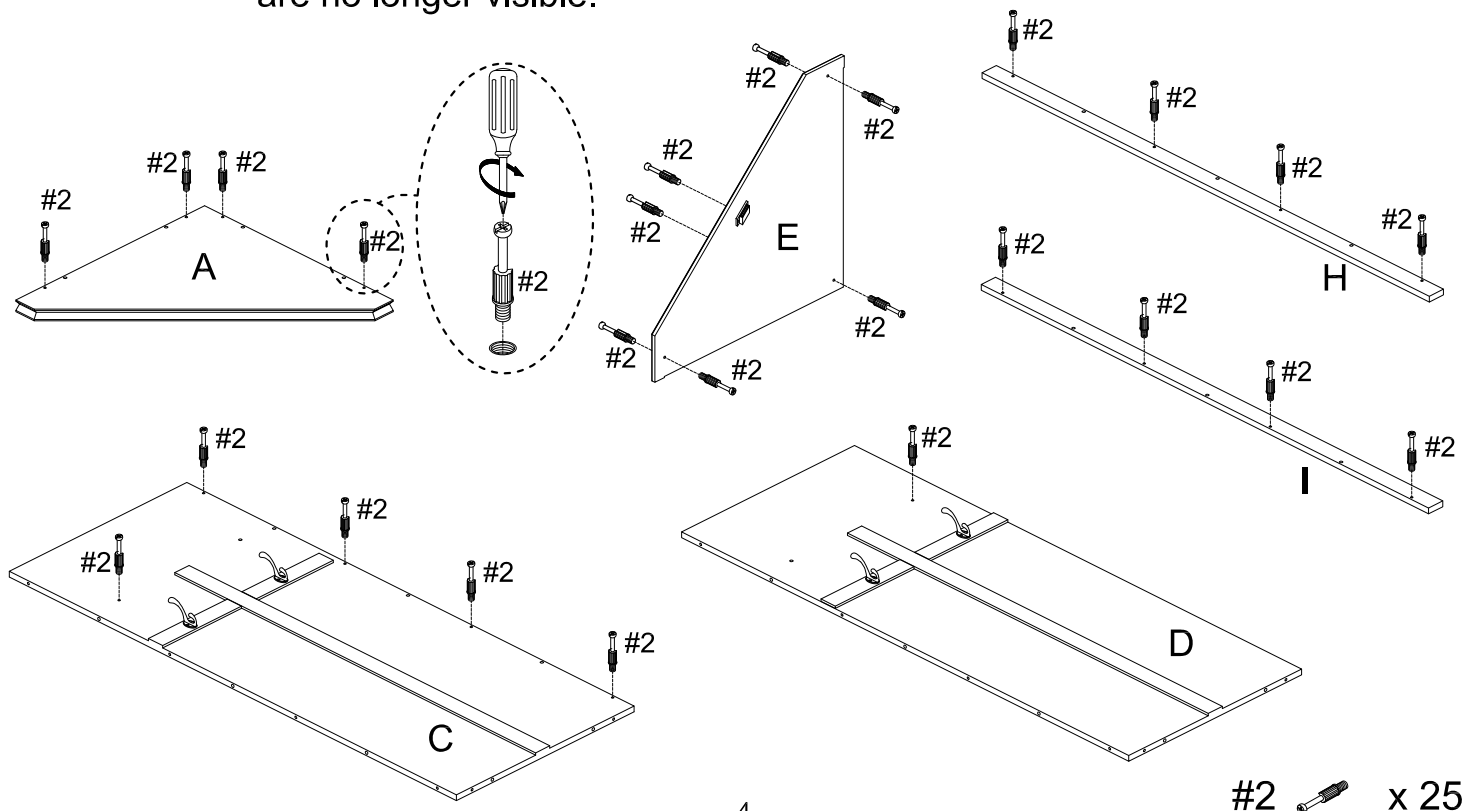 NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.



Step 3. Attach upper left panel (part H) to upper left back panel (part C) using wood dowels (part #1) and cam locks (part #3). Attach upper right panel (part I) to upper right back panel (part D) using wood dowels (part #1) and cam locks (part #3).

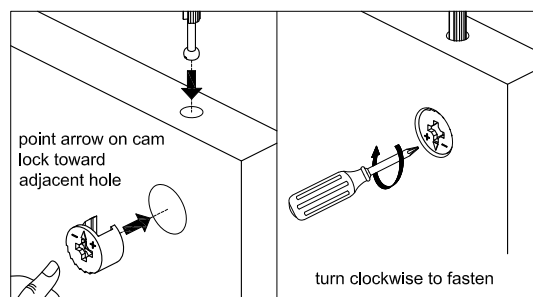 
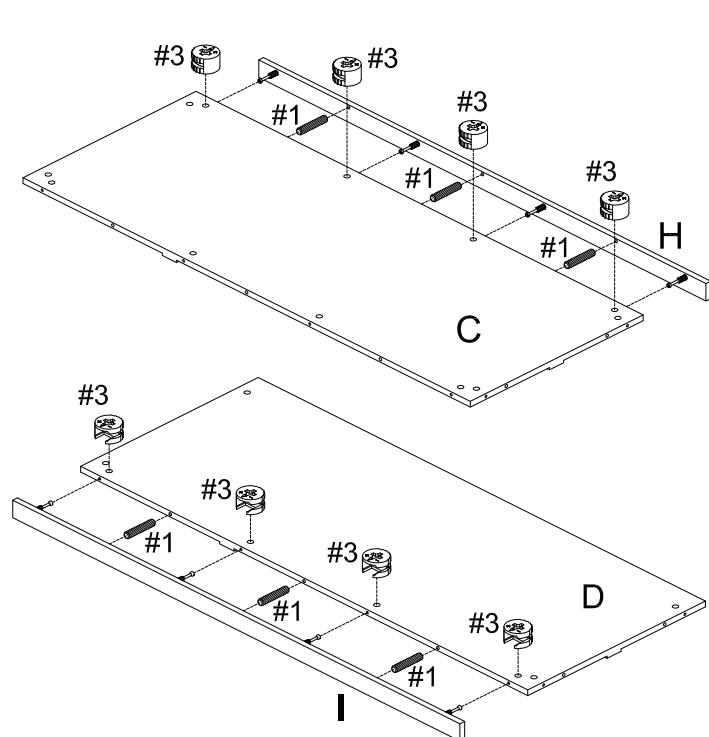 
NOTE: Cam locks must rotate a full 180°. See pictured insert.



#1  x 6
#3  x 8

Step 4. Attach upper fixed panel (part F) to assembled unit (parts D & I) using wood dowel (part #1) and cam lock (part #3).

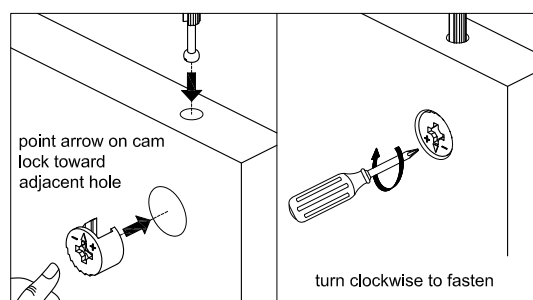 
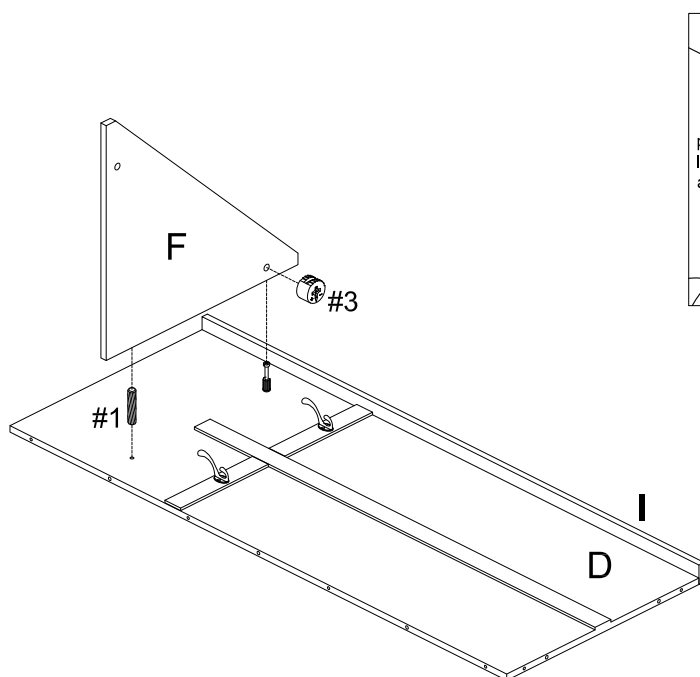 
NOTE: Cam locks must rotate a full 180°. See pictured insert.



#1  x 1
#3  x 1

Step 5. Attach assembled unit (parts D & F) to upper left back panel (part C) using wood dowels (part #1) and cam locks (part #3).

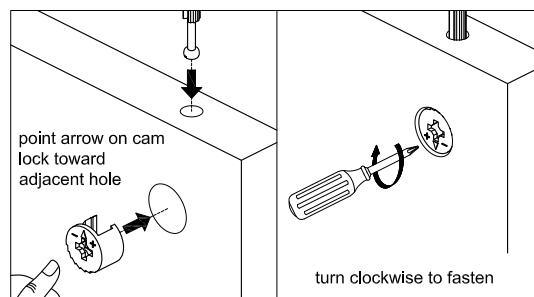 
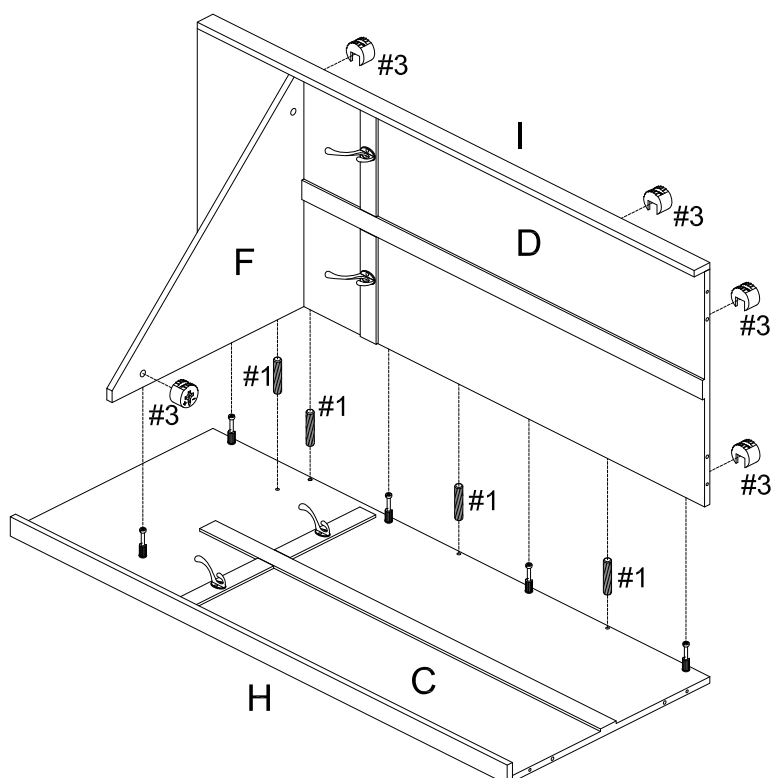 
NOTE: Cam locks must rotate a full 180°. See pictured insert.



#1  x 4
#3  x 5


Step 6. Attach top panel (part A) to assembled unit (parts C, D, H & I) using wood dowels (part #1) and cam locks (part #3).

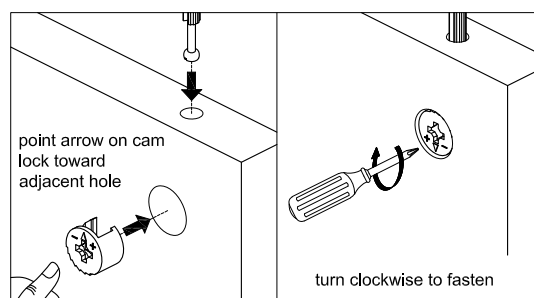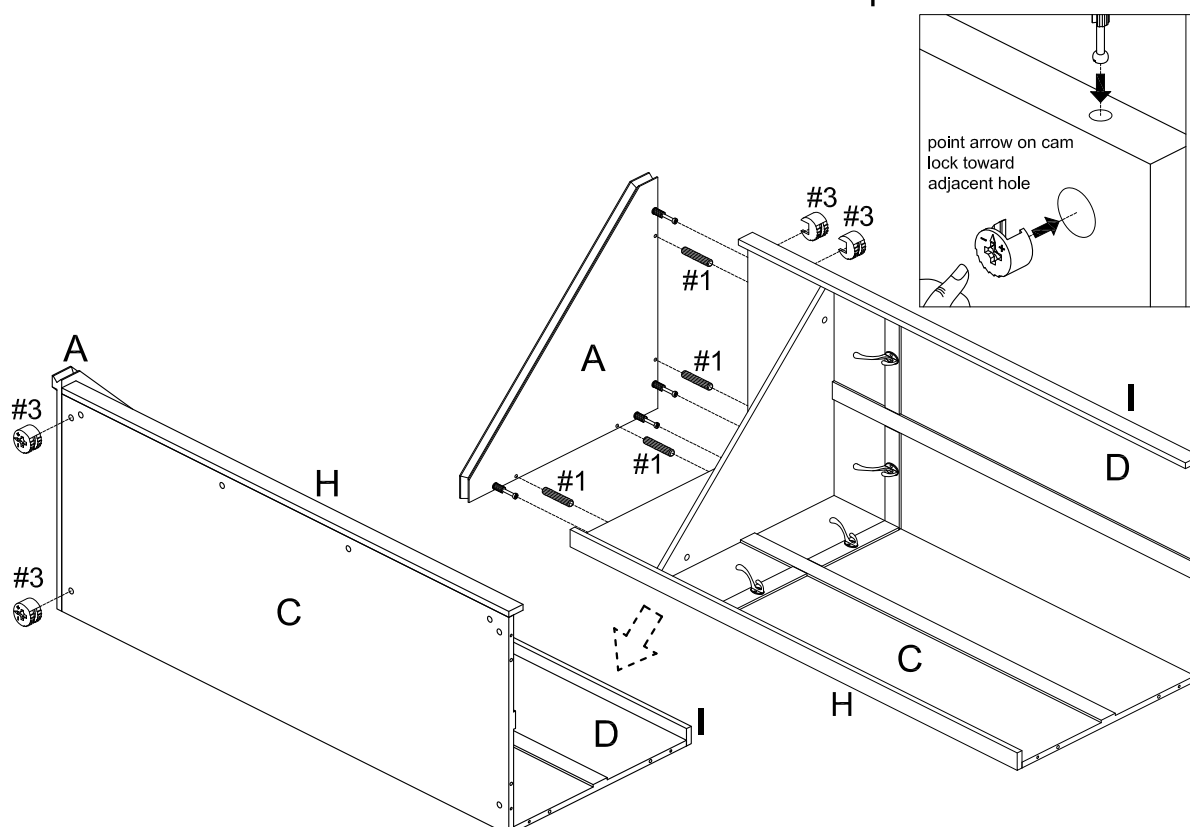  NOTE: Cam locks must rotate a full 180°. See pictured insert.




#1  x 4
#3  x 4

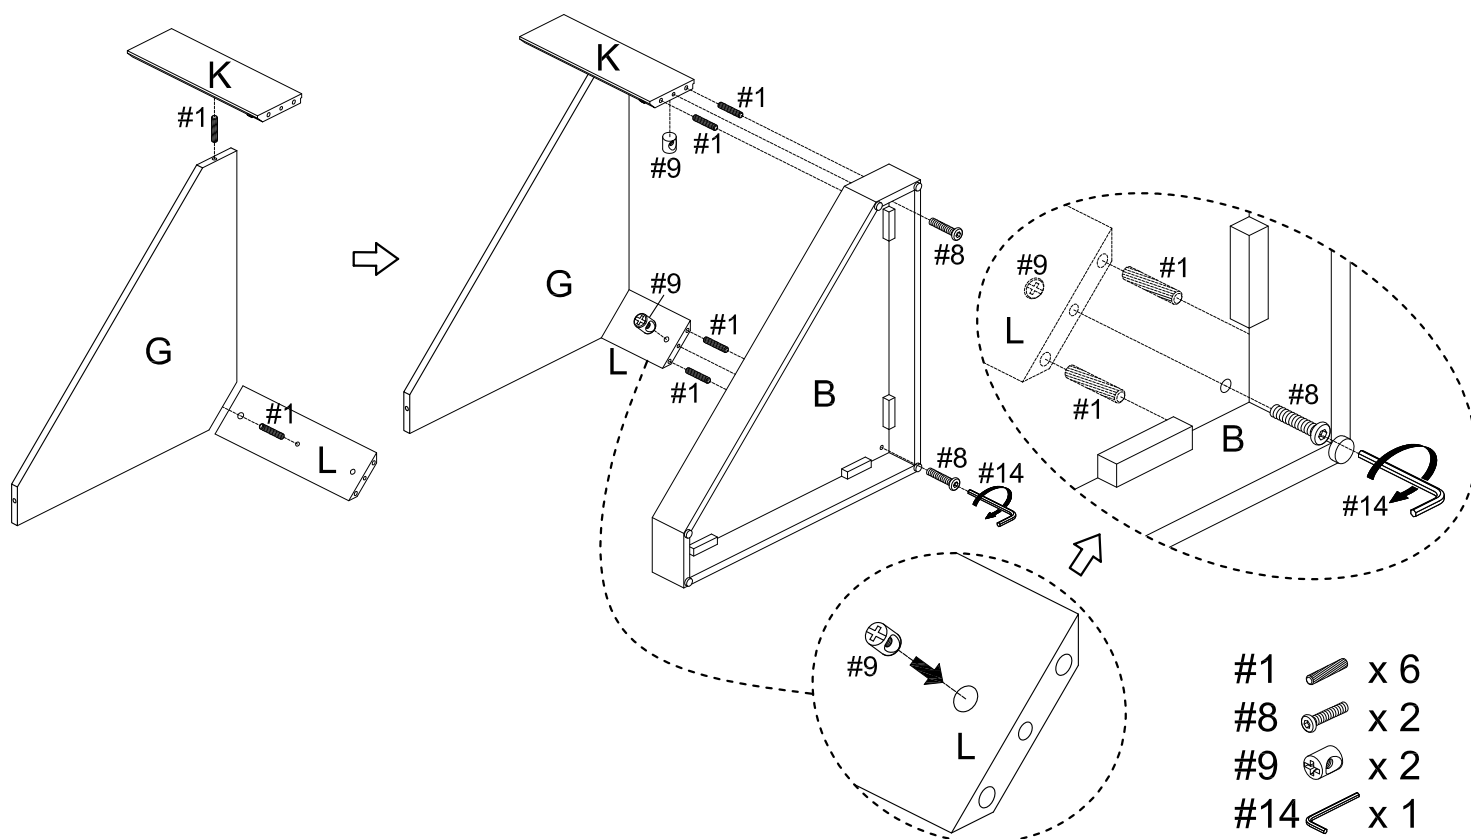 Step 7. Attach panels (parts K & L) to bottom fixed shelf (part G) using wood dowels (part #1). Attach assembled unit (parts K & L) to bottom panel (part B) using wood dowels (part #1), bolts (part #8), barrel nuts (part #9) and allen wrench (part #14).





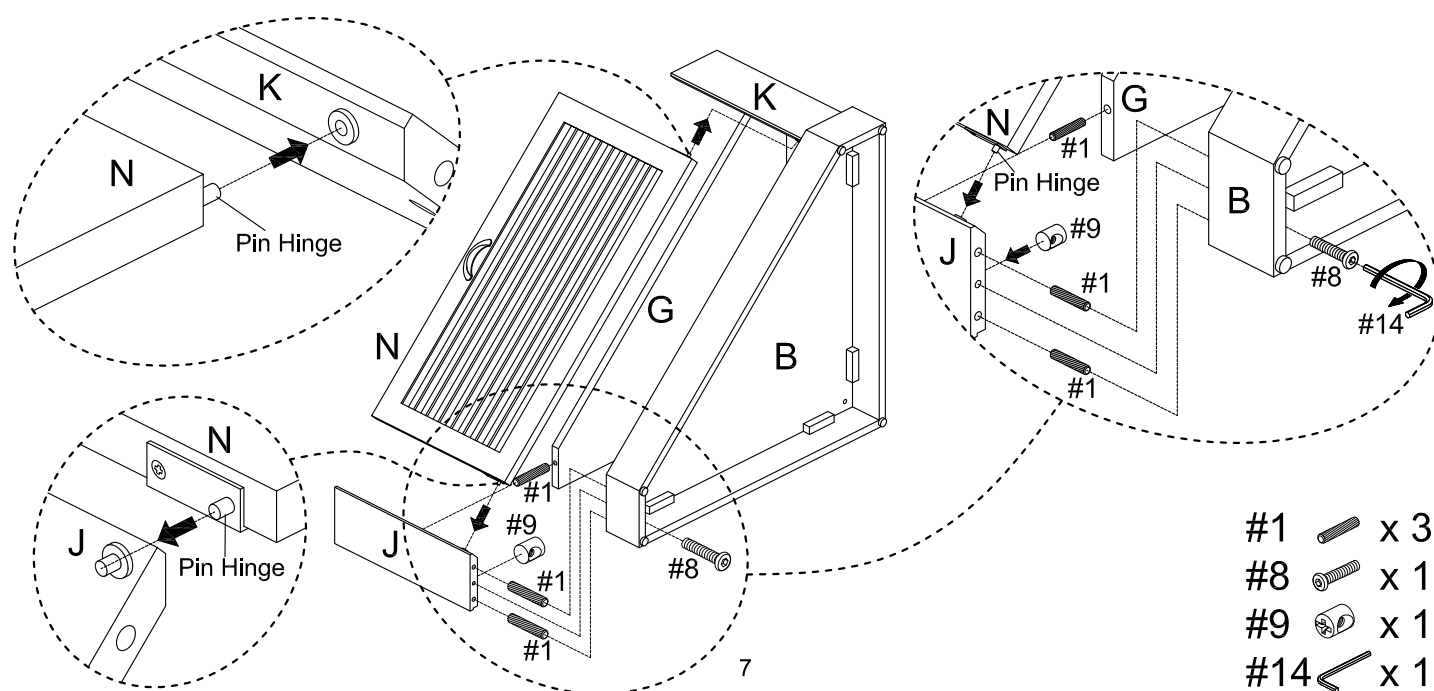 Step 8. Attach bottom left panel (part J) to bottom fixed shelf (part G) and bottom panel (part B) using wood dowels (part #1), bolt (part #8), barrel nut (part #9) and allen wrench (part #14). NOTE: DO NOT FULLY TIGHTEN BOLT AT THIS TIME. Insert door panel (part N) into bottom left panel (part J) and bottom right panel (part K) as shown. NOTE: Please fully tighten bolt at this time.





Step 9. Attach seat panel (part E) to assembled unit (parts J, K & L) using cam locks (part #3).

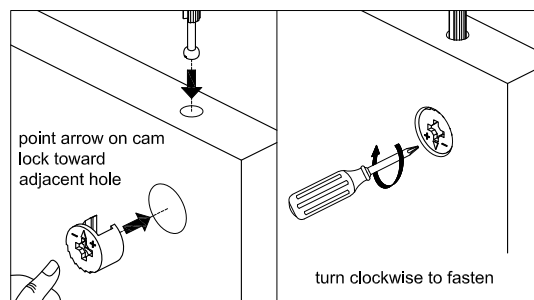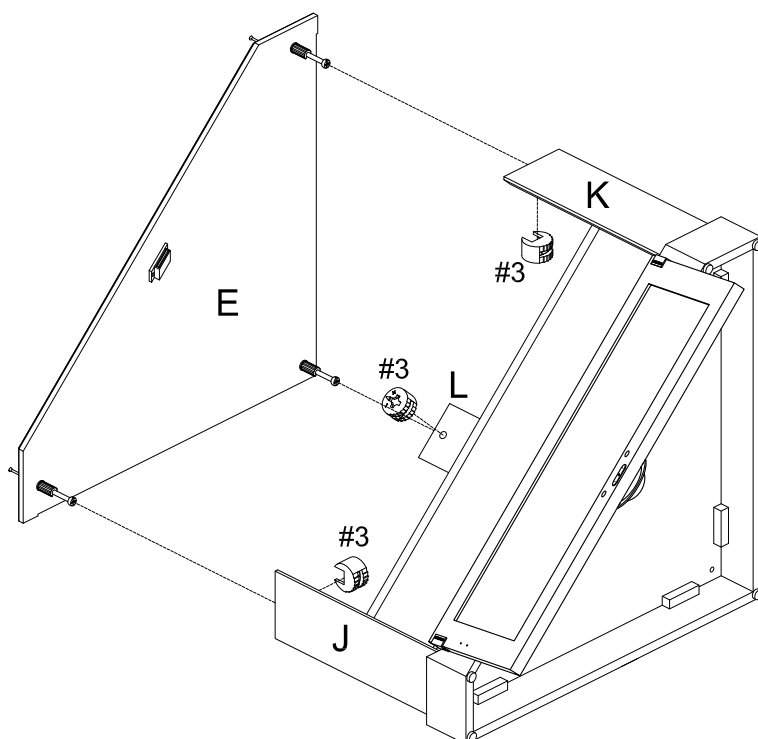  NOTE: Cam locks must rotate a full 180°. See pictured insert.



#3  x 3

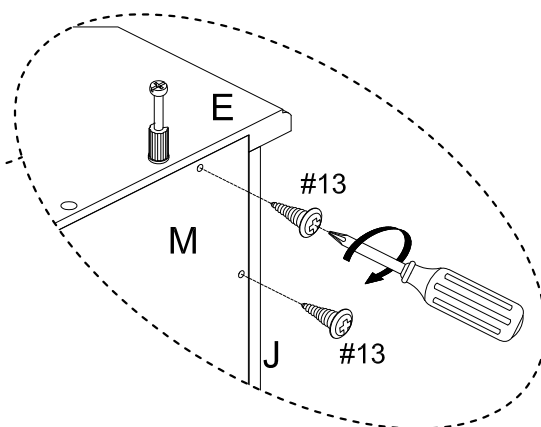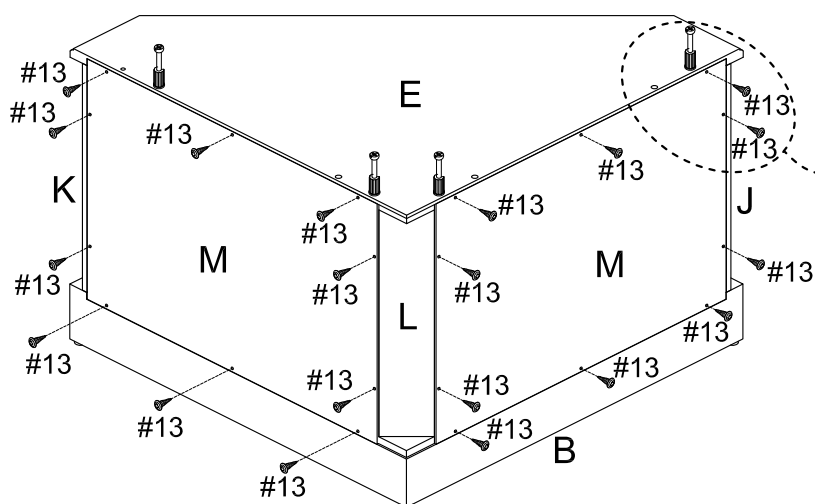  
Step 10. Attach bottom back panels (part M) to assembled unit (parts B, E, J, K & L) using round head screws (part #13) and phillips head screwdriver.



#13  x 20


Step 11. Attach assembled unit (parts B, E, J, K & L) to panels (parts C & D) using wood dowels (part #1) and cam locks (part #3).






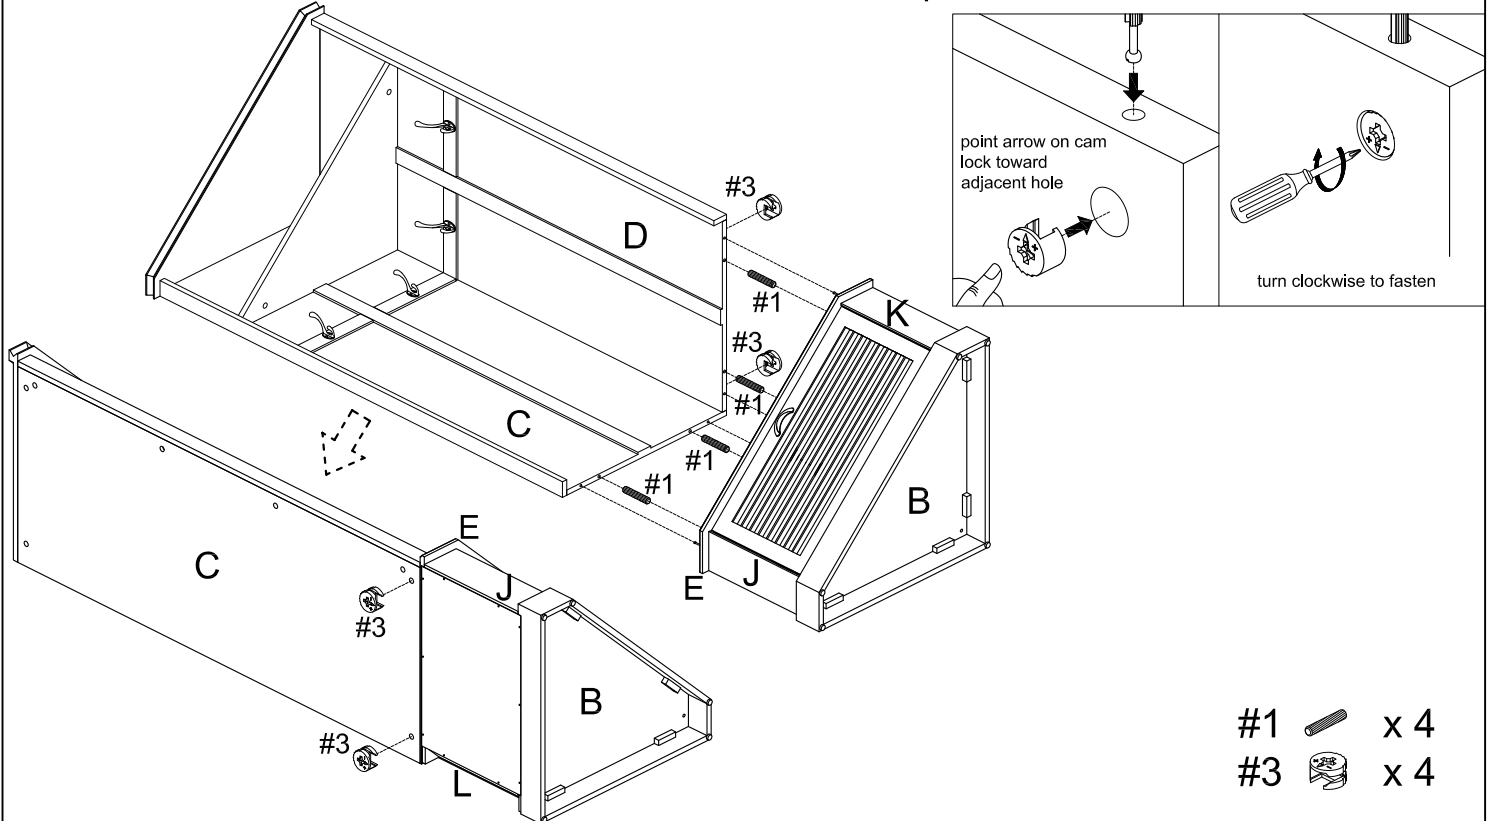 
NOTE: Cam locks must rotate a full 180°. See pictured insert.



Step 12. Carefully turn unit upright. Attach safety hinge (part #10) to bottom left panel (part J) and door panel (part N) using flat head screws (part #12) and phillips head screwdriver.

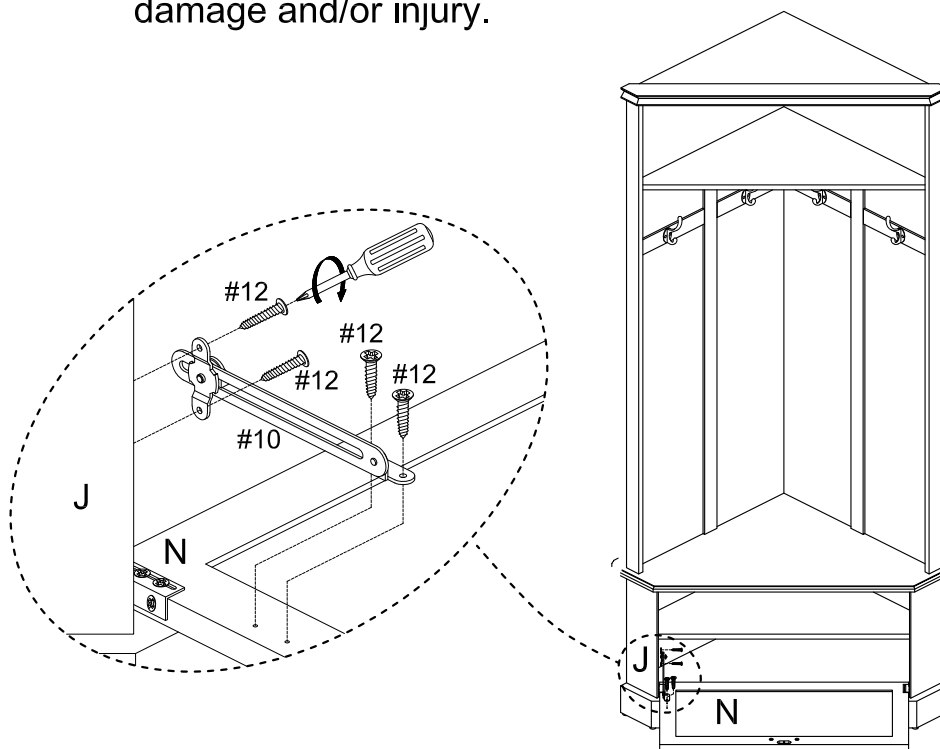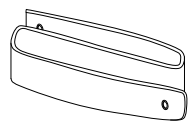       Important: Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.




#15	A	B	C	D	E
			 Ø8*3/4"	 Ø8*1-1/2"	
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

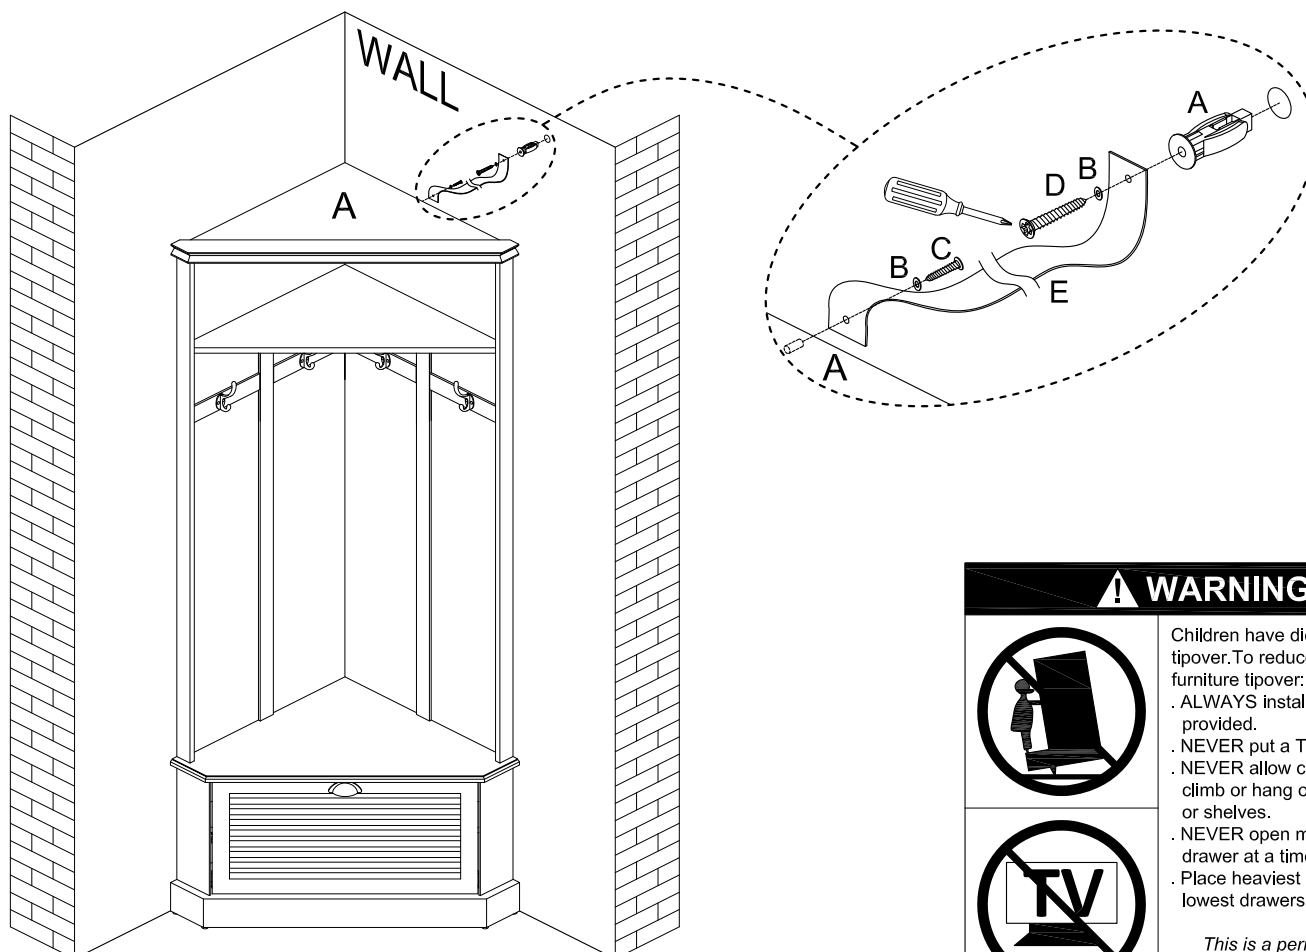 Note: This item is not intended for clothing storage use.




⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

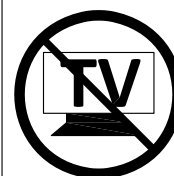 - ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*