

 
 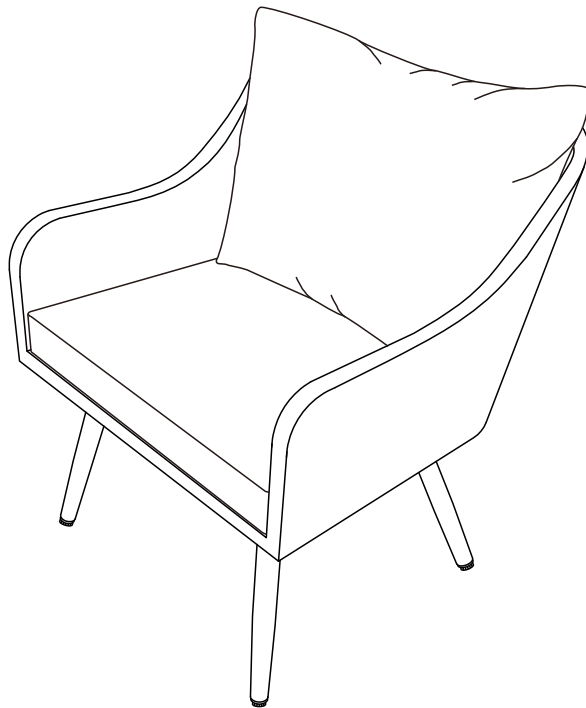
 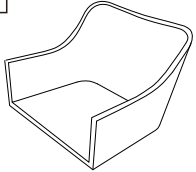





 


Outdoor Wicker Arm Chair  
CO7185

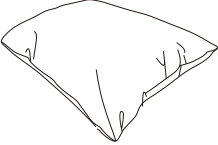

# PART LIST


<p><b>A</b></p> 	<p><b>B</b></p> 	<p><b>C</b></p> 	<p><b>D</b></p> 	<p><b>E</b></p> 
<p>Seat Panel 2 PCS</p>	<p>Front Leg 4 PCS</p>	<p>Back Leg 4 PCS</p>	<p>Seat Cushion 2 PCS</p>	<p>Back Cushion 2 PCS</p>

# HARDWARE LIST

<p><b>#1</b></p>  <p>M6*15mm</p>	<p><b>#2</b></p>  <p>M6mm</p>	<p><b>#3</b></p>  <p>M6mm</p>
<p>Bolt 32 PCS (Extra 1)</p>	<p>Flat Washer 32 PCS (Extra 1)</p>	<p>Allen Wrench 1 PC</p>

Step 1. Lay seat panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach front legs (part B) and back legs (part C) to seat panel (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

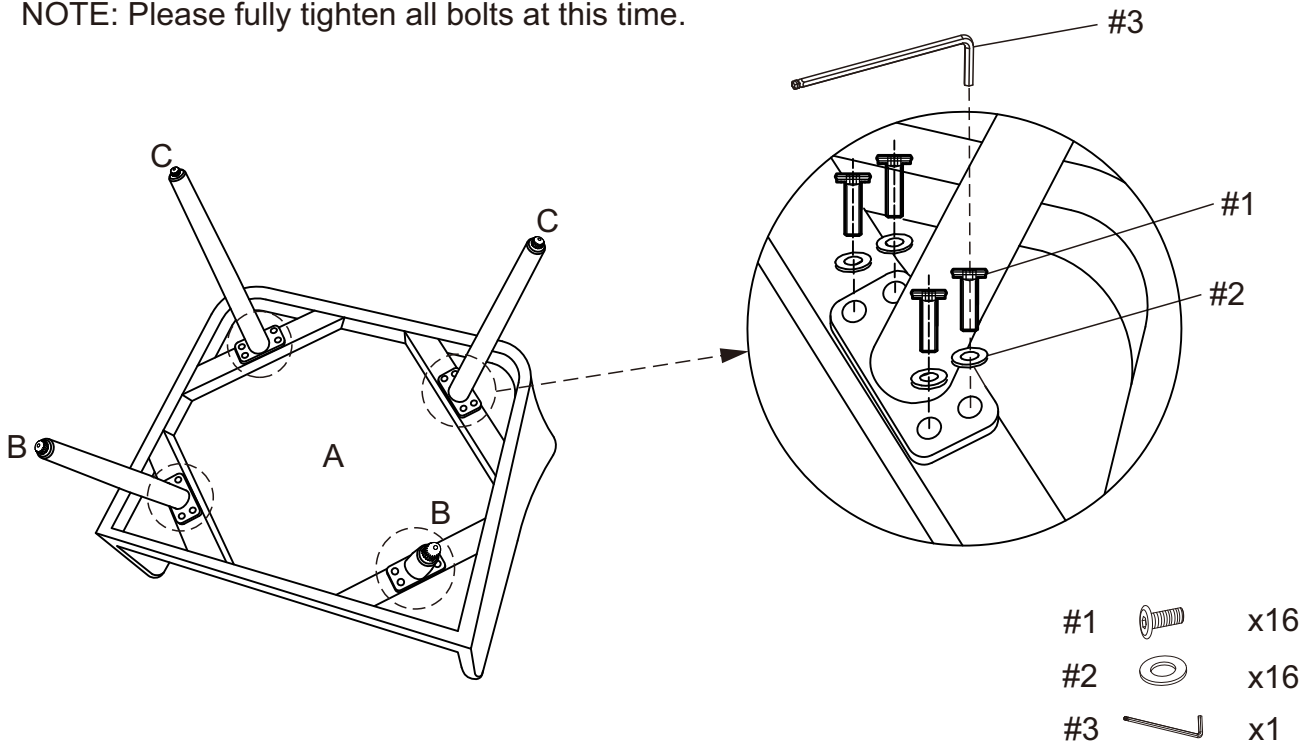

Step 2. Carefully turn unit upright. Add seat cushion (part D) and back cushion (part E) as shown below. Repeat step 1 to assemble remaining chair.

