



Outdoor Wicker Loveseat and Coffee Table CO7340

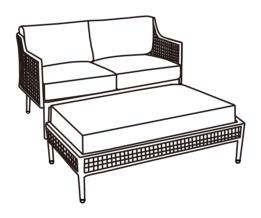

PART LIST

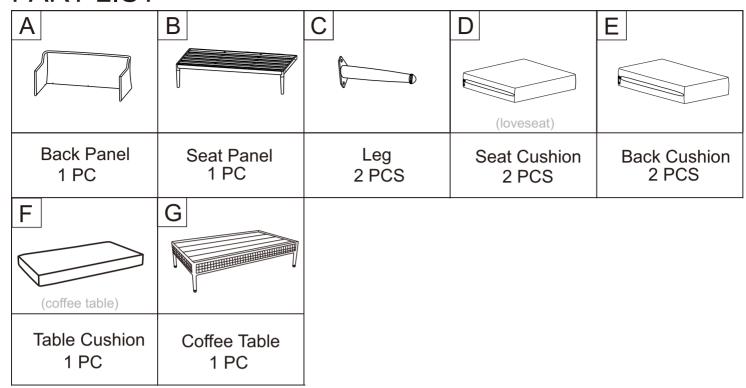


HARDWARE LIST

#1	#2	#3	#4
M6*20mm	M6*35mm	M6mm	M6mm
Short Bolt 6 PCS (Extra 1)	Long Bolt 7 PCS (Extra 1)	Flat Washer 13 PCS (Extra 2)	Allen Wrench 1 PC

Step 1. Lay seat panel (part B) down on a soft flat surface, such as carpet, as shown below.

Attach legs (part C) to seat panel (part B) using short bolts (part #1), flat washers (part #3) and allen wrench (part #4).


NOTE: Please fully tighten all bolts at this time.

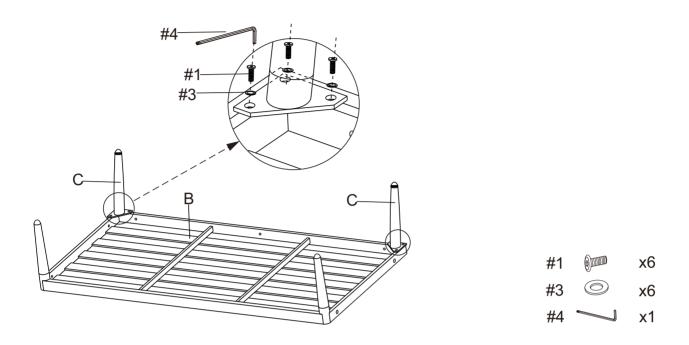


Step 2. Lay back panel (part A) down on a soft flat surface, such as carpet, as shown below.

Attach seat panel (part B) to back panel (part A) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

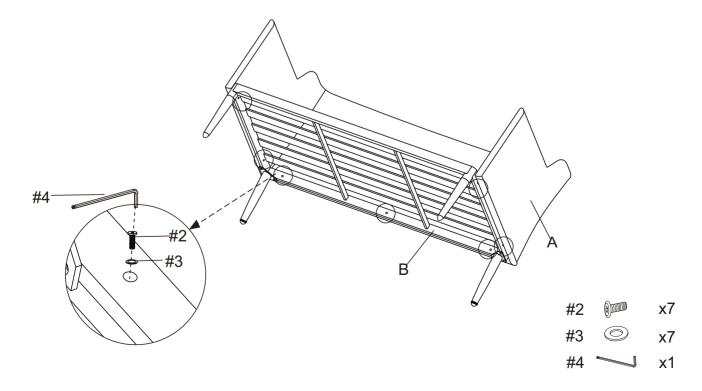

Step 3. Carefully turn unit upright. Place seat cushions (part D) and back cushions (part E) as shown below.

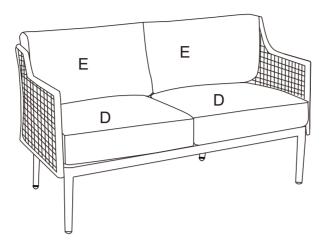

Step 4. Place table cushion (part F) on coffee table (part G) as shown below.

