













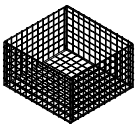


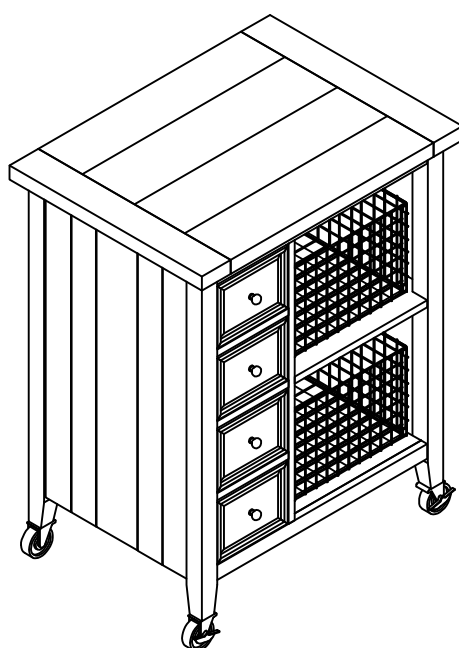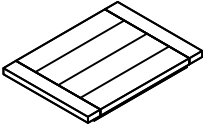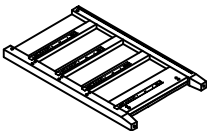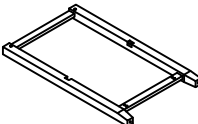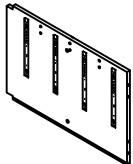














# Kitchen Cart CF3015



# PART LIST


<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Top Panel 1 PC	Bottom Panel 1 PC	Left Side Panel 1 PC	Right Side Panel 1 PC	Back Panel 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Fixed Shelf 1 PC	Drawer rail 3 PCS	Middle Vertical Panel 1 PC	Front Of Drawer 4 PCS	Left Side Panel Of Drawer 4 PCS
<b>K</b> 	<b>L</b> 	<b>M</b> 	<b>N</b> 	
Right Side Panel Of Drawer 4 PCS	Back Panel Of Drawer 4 PCS	Bottom Panel Of Drawer 4 PCS	Metal Basket 2 PCS	

# HARDWARE LIST

1	2	3	4	5
				
1-1/4"x $\phi$ 1/4"x D12				5/8"x 1-1/4"L
Long Bolt	Flat Washer	Spring Washer	Allen Wrench	Wood Dowel
15 PCS (Extra 1)	17 PCS (Extra 1)	17 PCS (Extra 1)	1 PC	21 PCS (Extra 1)
6	7	8	9	10
				
	5/8"x $\phi$ 1/4"x D12		3/4"x $\phi$ 5/32"x D9	1"x $\phi$ 4"x D8
Metal Plate	Short Bolt	Knob	Round Head Bolt	Screw
2 PCS	5 PCS (Extra 1)	4 PCS	5 PCS (Extra 1)	33 PCS (Extra 1)
11	12	13		
				
Locking Caster	Caster	Open Wrench		
2 PCS	2 PCS	1 PC		


## ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Step 1. Attach knobs (part #8) to front of drawers (part I) using round head bolts (part #9) and phillips head screwdriver.  
Attach locking casters (part #11) and casters (part #12) to left side panel (part C) and right side panel (part D) using open wrench (part #13).

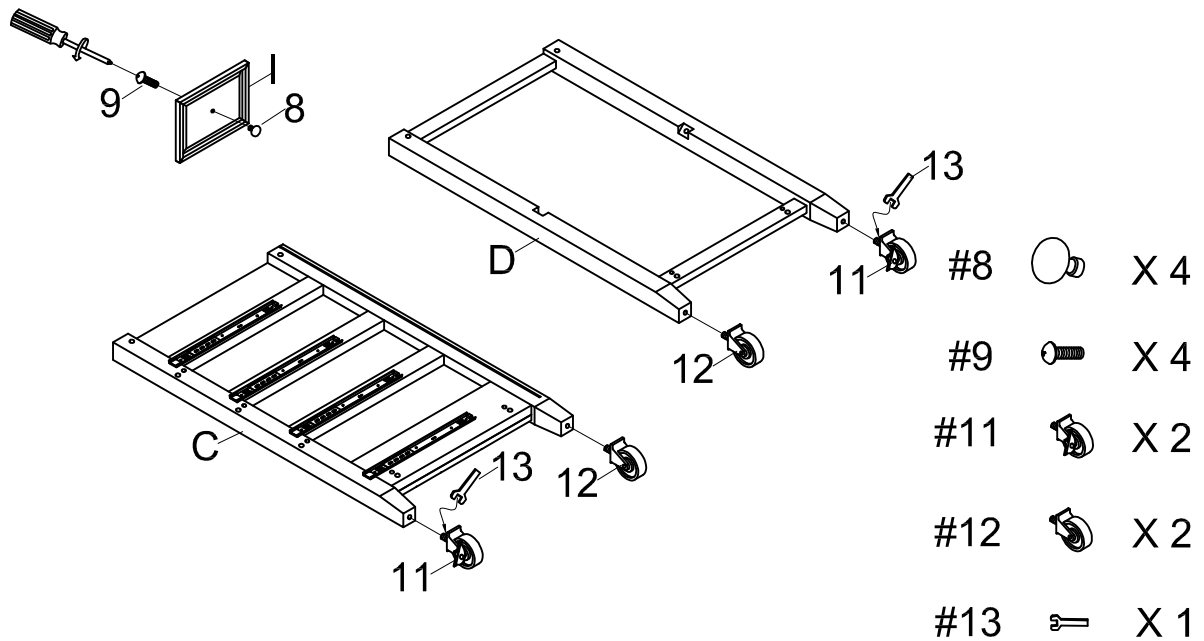

Step 2. Attach left side panel of drawer (part J) and right side panel of drawer (part K) to back panel of drawer (part L) using screw (part #10) and phillips head screw driver. Slide bottom panel of drawer (part M) into the grooves of left side panel of drawer (part J) and right side panel of drawer (part K). Attach front of drawer (part I) to left side panel of drawer (part J) and right side panel of drawer (part K) using screws (part #10) and phillips head screwdriver. Repeat three times for remaining drawers.

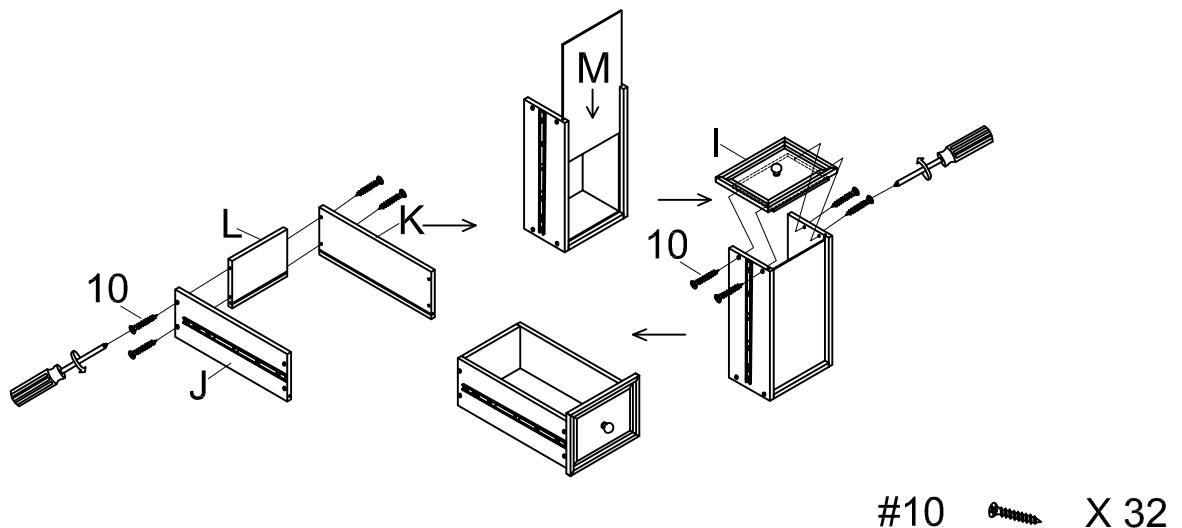

Step 3. Attach fixed shelf (part F) to middle vertical panel (part H) using wood dowels (part #5), long bolts (part #1) and allen wrench (part #4).

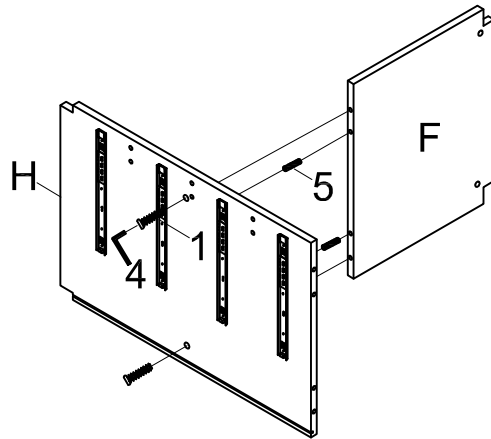


#1  X 2

#5  X 2

#4  X 1

Step 4. Attach bottom panel (part B) to middle vertical panel (part H) using wood dowels (part #5), long bolts (part #1), spring washers (part #3), flat washers (part #2) and allen wrench (part #4) .

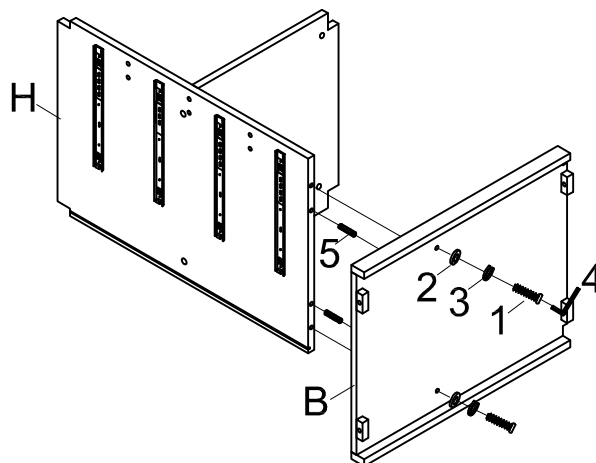

#1  X 2


#2  X 2






#3  X 2

#4  X 1

#5  X 2

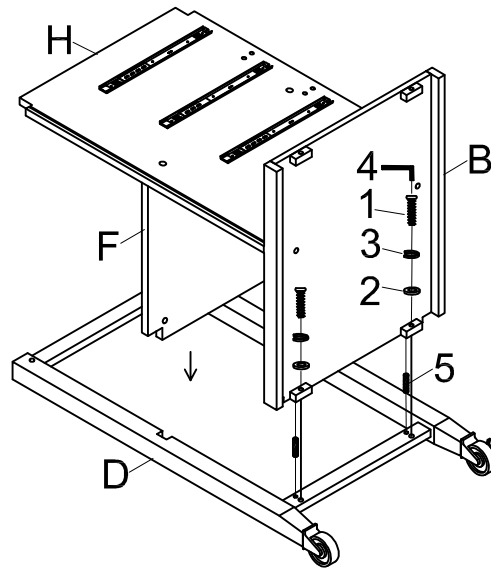
Step 5. Attach bottom panel (part B) and fixed shelf (part F) to right side panel (part D) using wood dowels (part #5), long bolts (part #1) and allen wrench (part #4).









- #1  X 2
- #2  X 2
- #3  X 2
- #4  X 1
- #5  X 2


Step 6. Attach metal plates (part #6) to right side panel (part D) using short bolts (part #7), spring washers (part #3), flat washers (part #2) and allen wrench (part #4) .

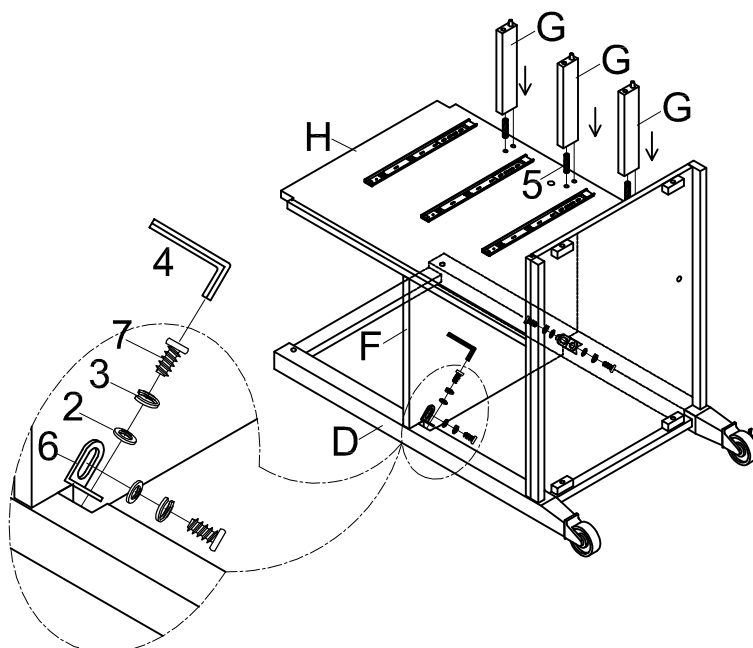Attach drawer rails (part G) to middle vertical panel (part H) using wood dowels (part #5) .



- #2  X 4
- #3  X 4
- #4  X 1
- #5  X 3
- #6  X 2
- #7  X 4

Step 7. Attach left side panel (part C) to drawer rails (part G) and bottom panel (part B) using wood dowels (part #5), long bolts (part #1), spring washers (part #3), flat washers (part #2) and allen wrench (part #4).

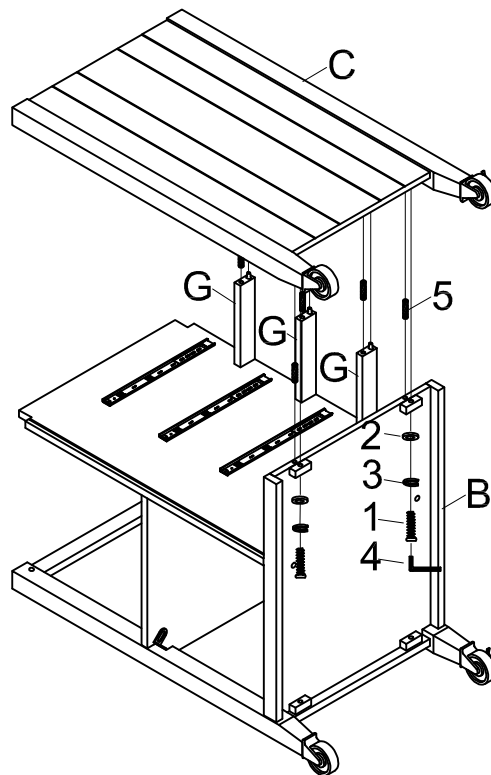

#1  X 2

#2  X 2


#3  X 2

#4  X 1


#5  X 5

Step 8. Carefully turn the unit upright.

Slide back panel (part E) into the grooves of left side panel (part C) and middle vertical panel (part H) as shown.

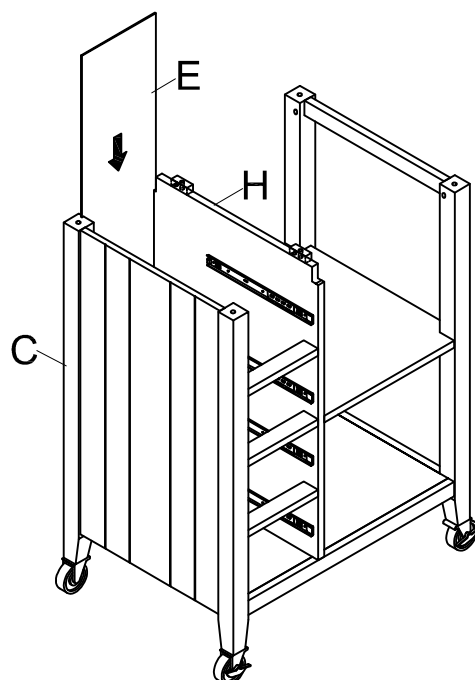

Step 9. Attach top panel (part A) to left side panel (part C), right side panel (part D) and middle vertical panel (part H) using wood dowels (part #5), long bolts (part #1), spring washers (part #3), flat washers (part #2) and allen wrench (part #4) .

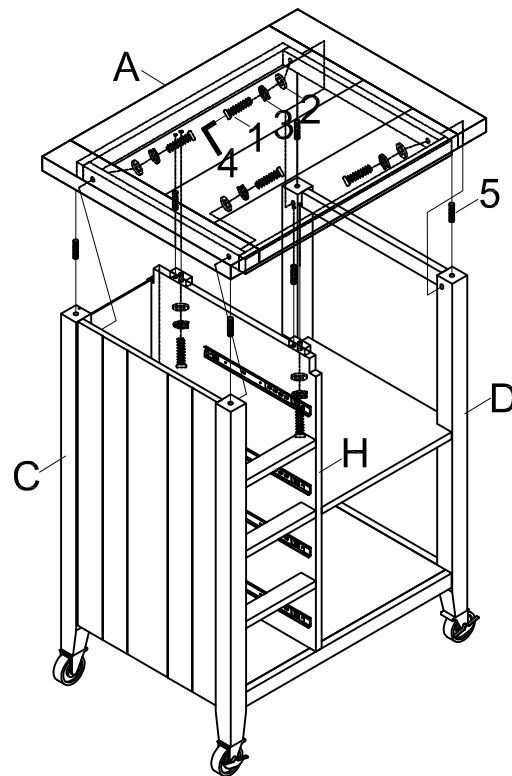

#1  X 6


#2  X 6

#3  X 6

#4  X 1


#5  X 6

Step 10. Slide completed drawers into place.

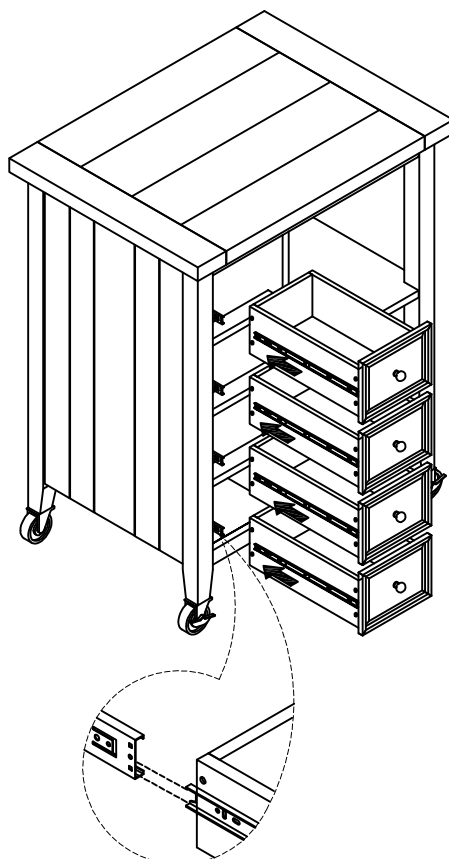



Step 11. Open the folding metal baskets (part N) as shown.

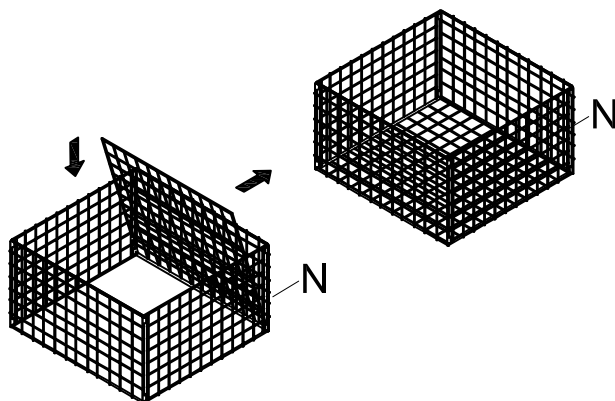

Step 12. Place completed metal baskets on fixed shelf (part F) and bottom panel (part B) as shown.

