

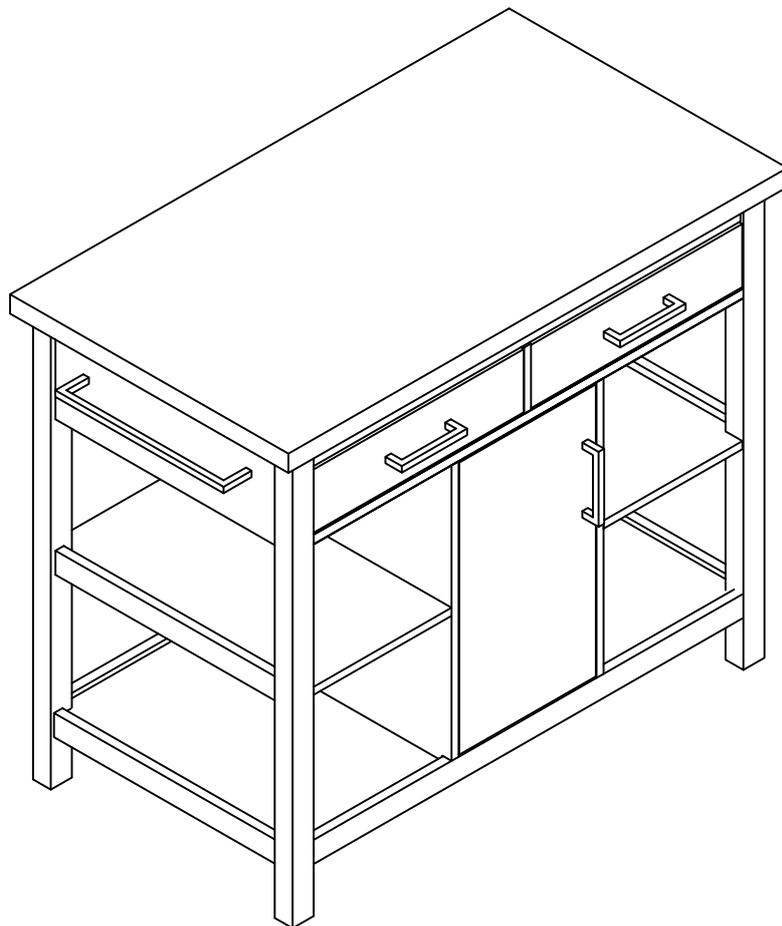
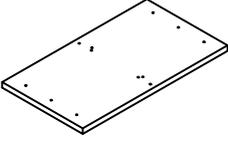
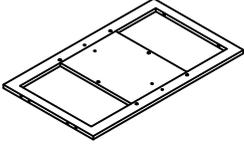
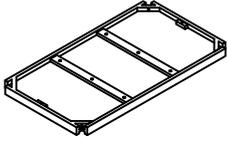






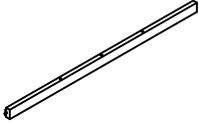














Kitchen Island
CF3026

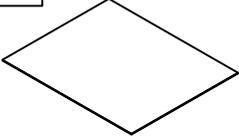

PART LIST

<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Top Panel 1 PC</p>	<p>Middle Frame 1 PC</p>	<p>Bottom Panel 1 PC</p>	<p>Side Frame 2 PCS</p>	<p>Left Partition Panel 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>I</p> 	<p>J</p> 
<p>Right Partition Panel 1 PC</p>	<p>Shelf 2 PCS</p>	<p>Drawer Partition Panel 1 PC</p>	<p>Door Panel 2 PCS</p>	<p>Adjustable Shelf 1 PC</p>
<p>K</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>Top Rail 2 PCS</p>	<p>Drawer Front Panel 4 PCS</p>	<p>Drawer Side Panel 4 PCS</p>	<p>Drawer Bottom Panel 2 PCS</p>	<p>Towel Bar 2 PCS</p>

HARDWARE LIST

#1  Ø10*50mm	#2  Ø8*30mm	#3  Ø6*30mm	#4  1-1/4"*Ø3.5*D8mm	#5  1-1/2"*Ø1/4"*D11mm
Large Wood Dowel 1 PC	Medium Wood Dowel 26 PCS (Extra 1)	Small Wood Dowel 8 PCS (Extra 1)	Flat Head Screw 4 PCS	Short Bolt 20 PCS (Extra 1)
#6  2"*Ø1/4"*D11mm	#7  Barrel Nut	#8  Flat Washer	#9  Spring Washer	#10  Double Magnet
Long Bolt 14 PCS (Extra 1)	Barrel Nut 6 PCS (Extra 1)	Flat Washer 12 PCS (Extra 1)	Spring Washer 12 PCS (Extra 1)	Double Magnet 2 PCS
#11  12*Ø3*D6mm	#12  Shelf Holder	#13  3/4"*Ø5/32"*D9	#14  Handle	#15  Allen Wrench
Round Head Screw 4 PCS	Shelf Holder 4 PCS	Round Head Bolt 12 PCS	Handle 6 PCS	Allen Wrench 1 PC

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please do not use tools to assemble this unit unless specifically indicated.

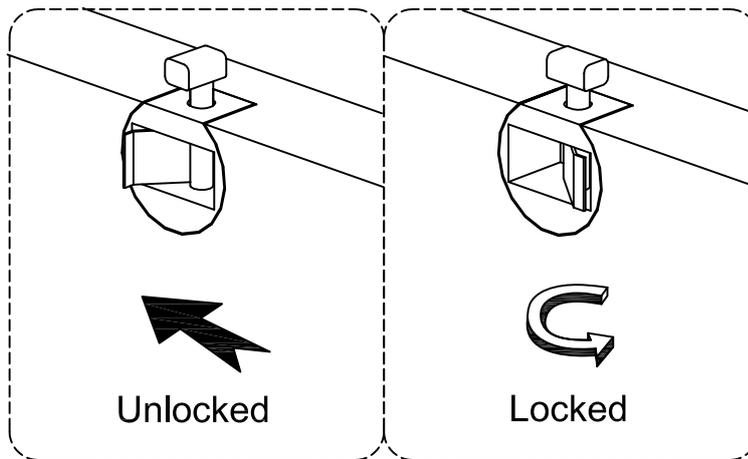


Reference the images above any time the instructions state "lock the hardware".
 Note: Be sure to check all hardware is locked when completed.

Step 1. Attach handles (part #14) to drawer front panels (part L) and door panels (part I) using round head bolts (part #13) and phillips head screwdriver. Attach towel bars (part O) to side frames (part D) using short bolts (part #5) and allen wrench (part #15).

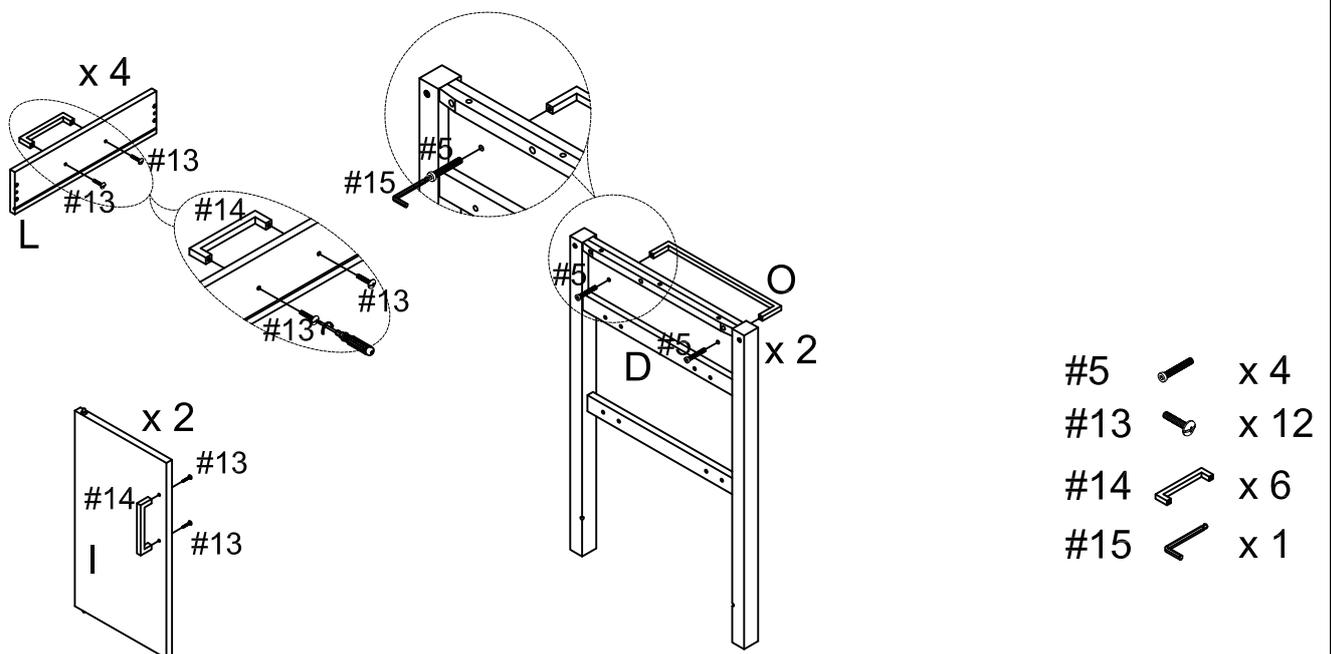


Step 2. Attach double magnets (part #10) to partition panels (parts E & F) using round head screws (part #11) and phillips head screwdriver. Attach drawer partition panel (part H) to middle frame (part B) using medium wood dowels (part #2), short bolts (part #5) and allen wrench (part# 15).

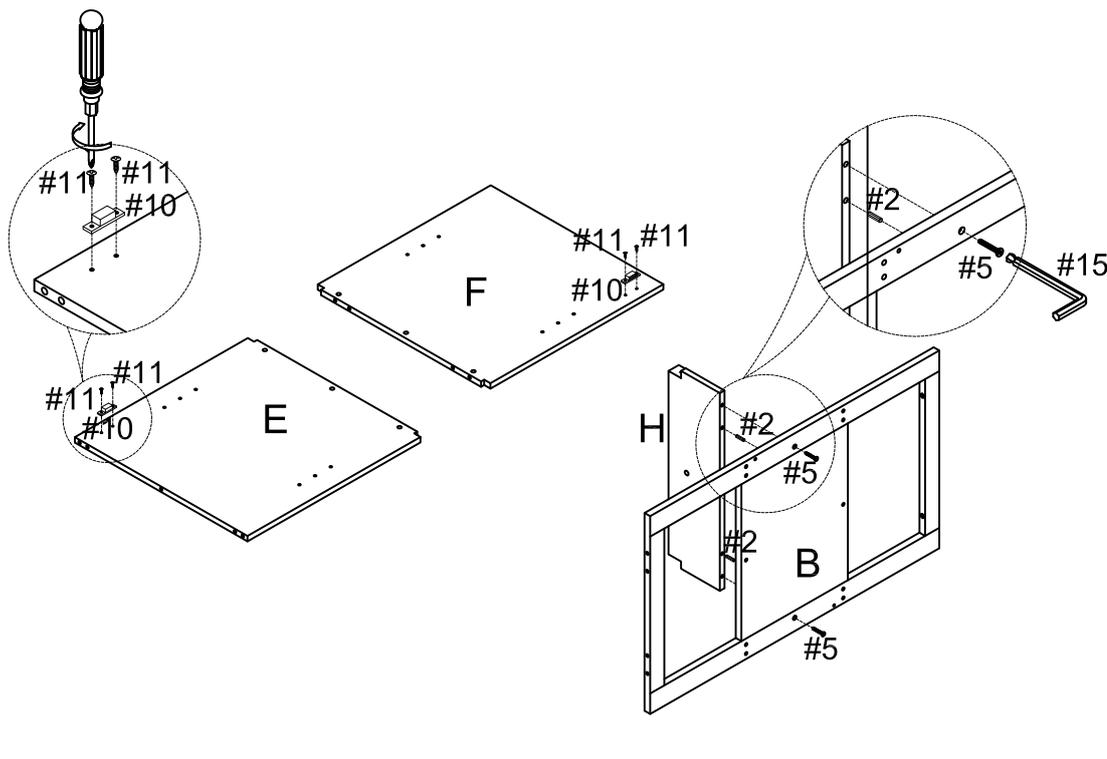


- #2  x 2
- #5  x 2
- #10  x 2
- #11  x 4
- #15  x 1

Step 3. Attach drawer side panels (part M) to drawer front panel (part L) using small wood dowels (part #3) and lock the hardware. Slide drawer bottom panel (part N) into grooves of assembled unit (parts L & M). Attach drawer front panel (part L) to assembled unit (parts M & N) using small wood dowels (part #3) and lock the hardware. Repeat for remaining drawer.

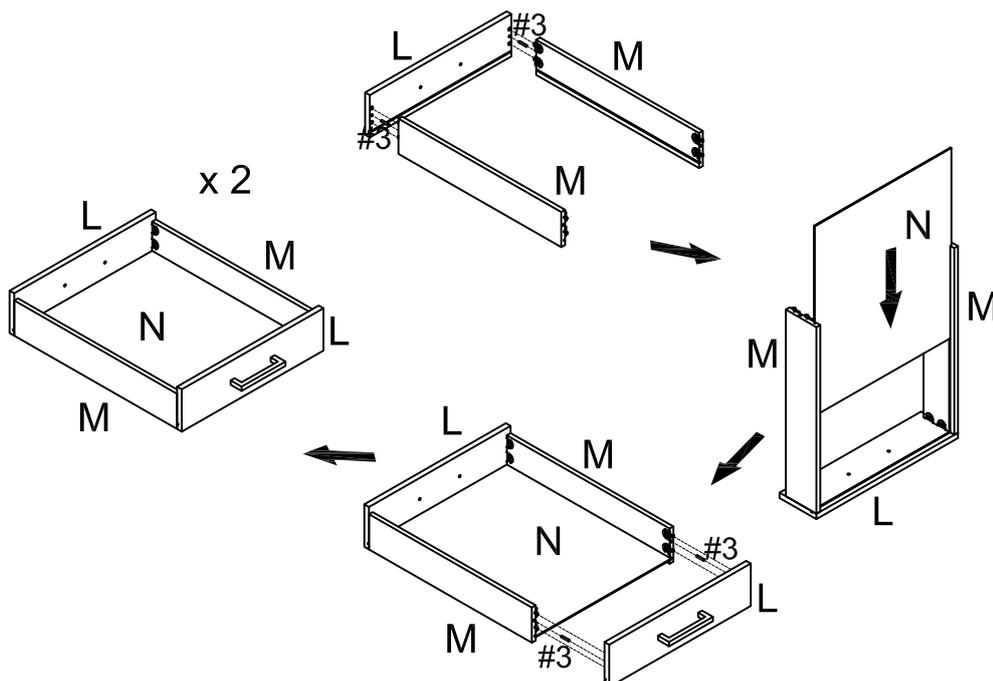


- #3  x 8


Step 4. Attach shelves (part G) to partition panels (parts E & F) using medium wood dowels (part #2) and lock the hardware. Attach assembled units (parts E, F & G) to bottom panel (part C) using medium wood dowels (part #2), long bolts (part #6), barrel nuts (part #7) and allen wrench (part #15).

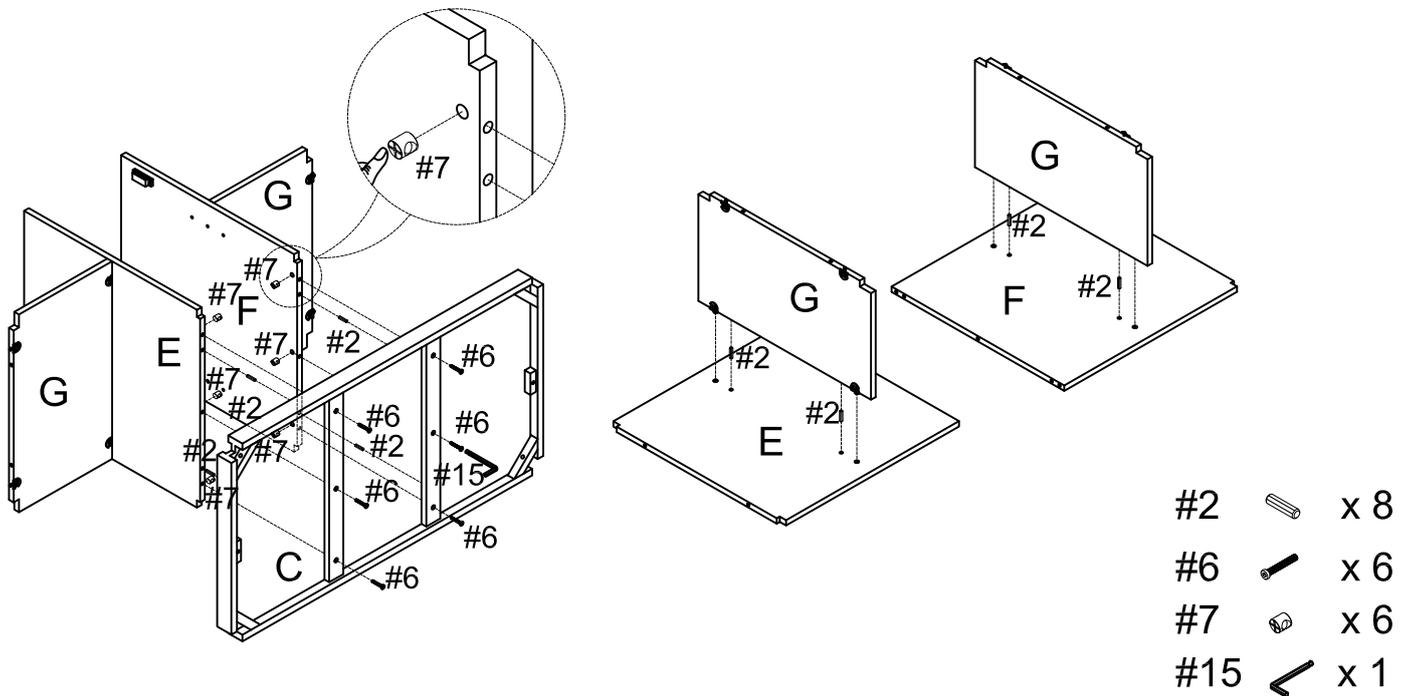

Step 5. Attach assembled unit (parts B & H) to partition panels (parts E & F) using medium wood dowels (part #2), short bolts (part #5) and allen wrench (part #15).

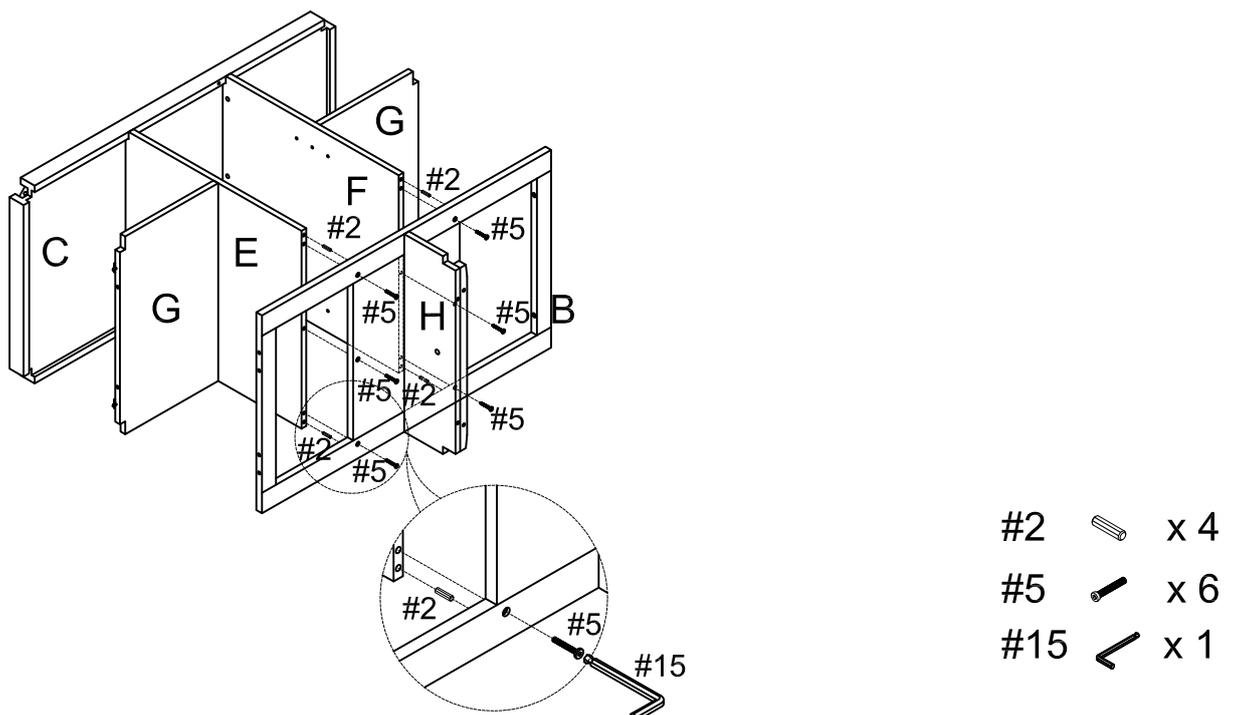


Step 6. Place top rails (part K) on drawer partition panel (part H). Attach side frame (part D) to assembled unit (parts B, C, G & K) using medium wood dowels (part #2), flat washers (part #8), spring washers (part #9), long bolts (part #6), allen wrench (part #15) and lock the hardware.

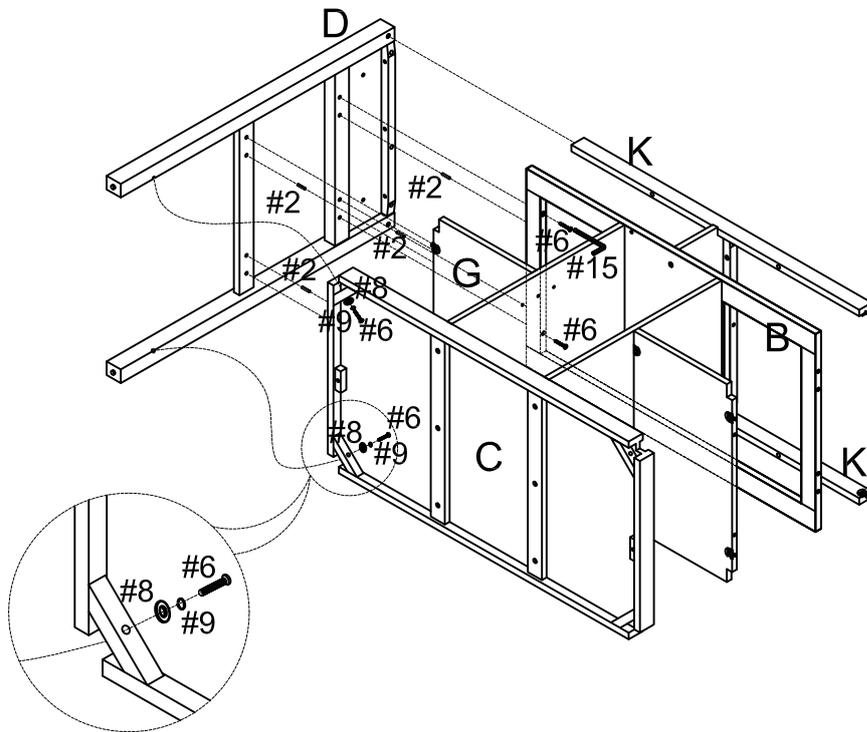


- | | | |
|-----|--|-----|
| #2 |  | x 4 |
| #6 |  | x 4 |
| #8 |  | x 2 |
| #9 |  | x 2 |
| #15 |  | x 1 |

Step 7. Attach side frame (part D) to assembled unit (parts B, C, G & K) using medium wood dowels (part #2), flat washers (part #8), spring washers (part #9), long bolts (part #6), allen wrench (part #15) and lock the hardware.

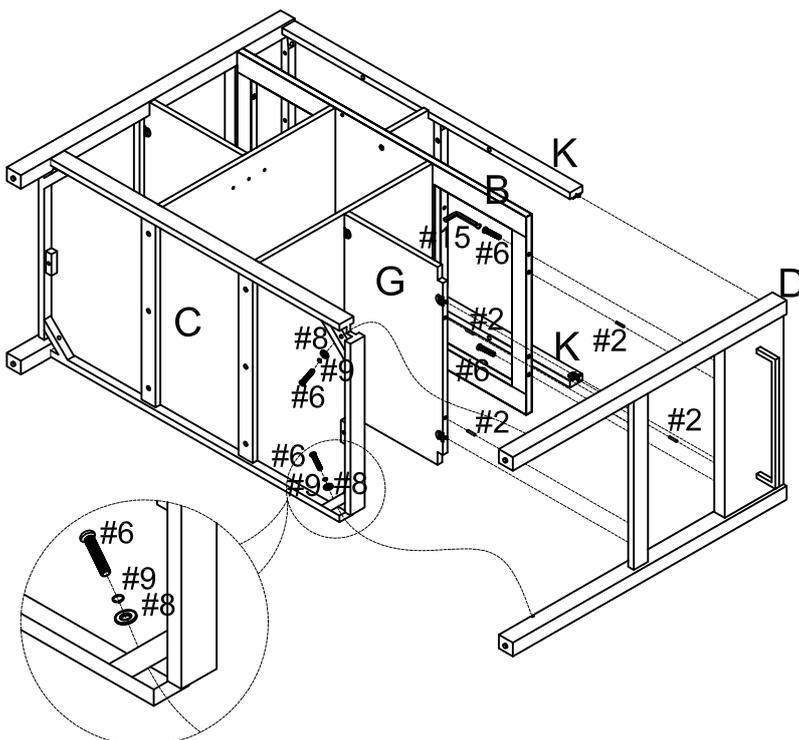


- | | | |
|-----|---|-----|
| #2 |  | x 4 |
| #6 |  | x 4 |
| #8 |  | x 2 |
| #9 |  | x 2 |
| #15 |  | x 1 |

Step 8. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts D, H & K) using medium wood dowels (part #2), flat head screws (part #4), flat washers (part #8), spring washers (part #9), short bolts (part #5), allen wrench (part #15) and phillips head screwdriver.

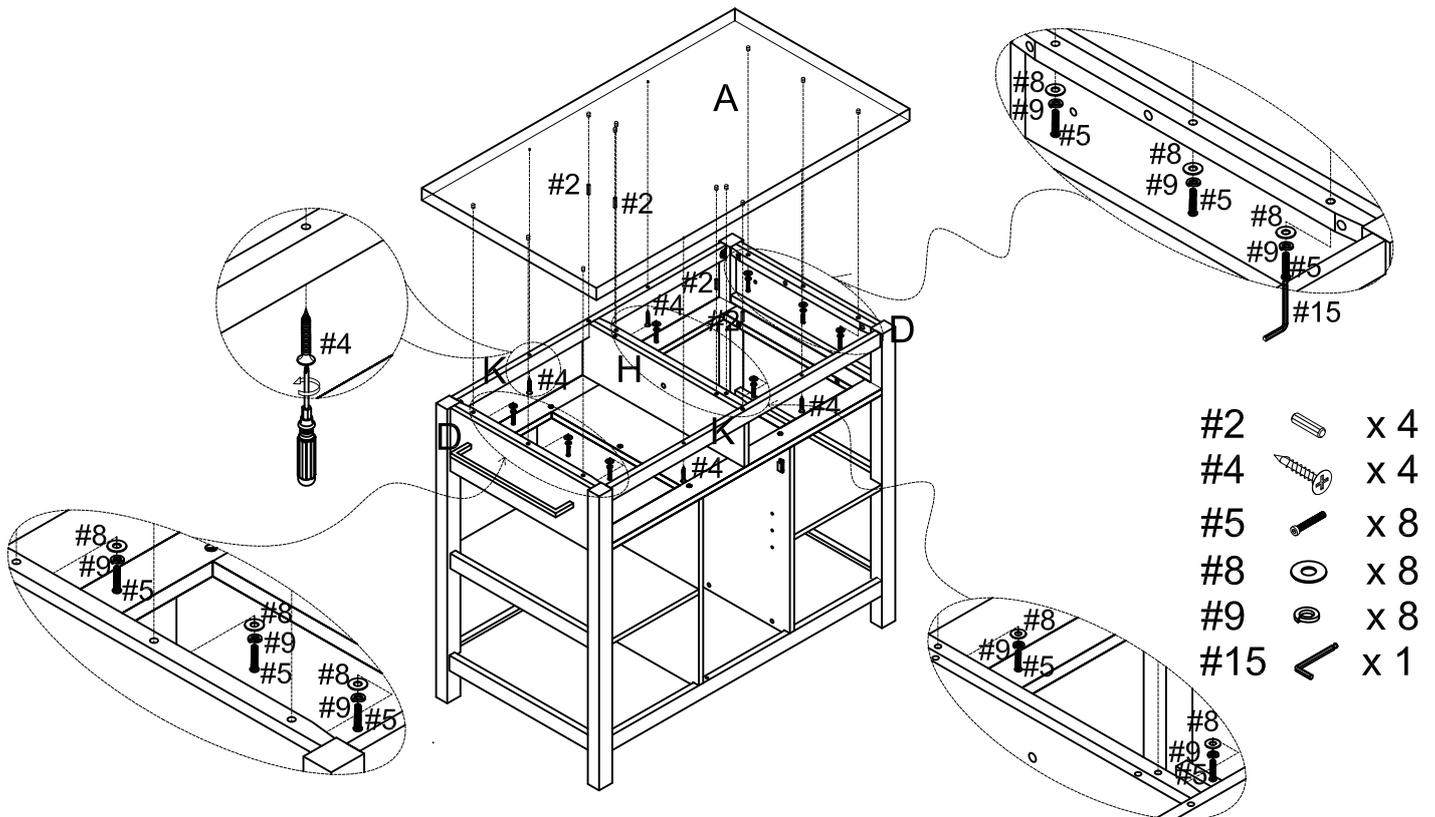


Step 9. Place shelf holders (part #12) into desired position and then slide adjustable shelf (part J) into place.

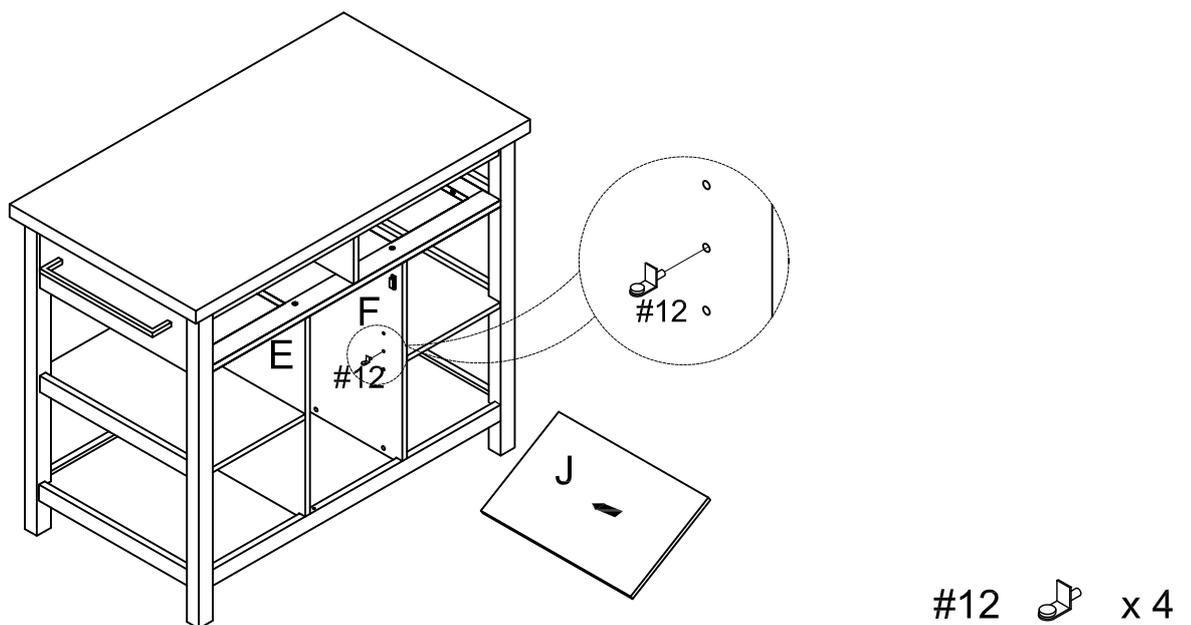


Step 10. Attach door panels (part I) by placing bottom pin hinges (pre-installed in door) in the pre-drilled holes of bottom panel (part C). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled holes of top rail (part K).

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

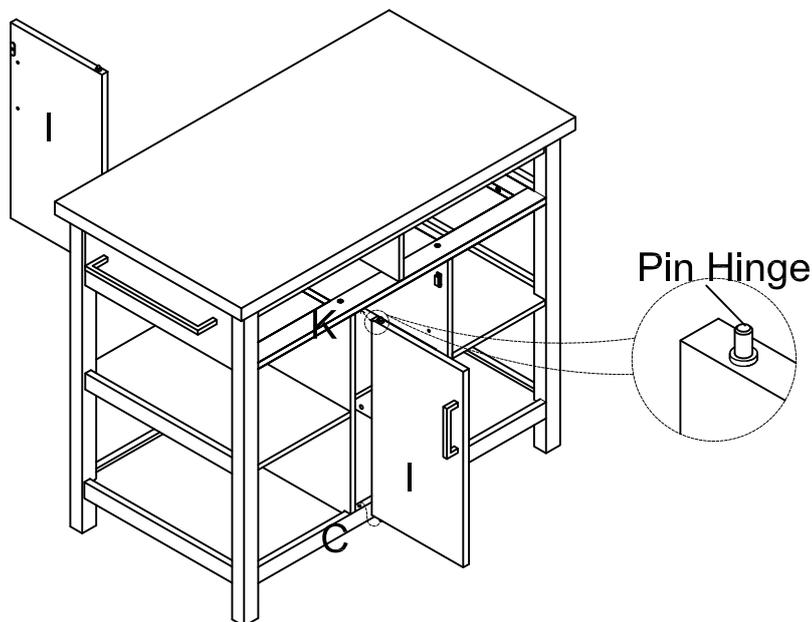

Step 11. Slide assembled drawers into place. Pull open one drawer enough to reach inside and insert large wood dowel (part #1) into pre-drilled hole in drawer partition panel (part H).

NOTE: Large wood dowel (part #1) will act as a "stop" to keep the drawers from coming out completely once inserted.

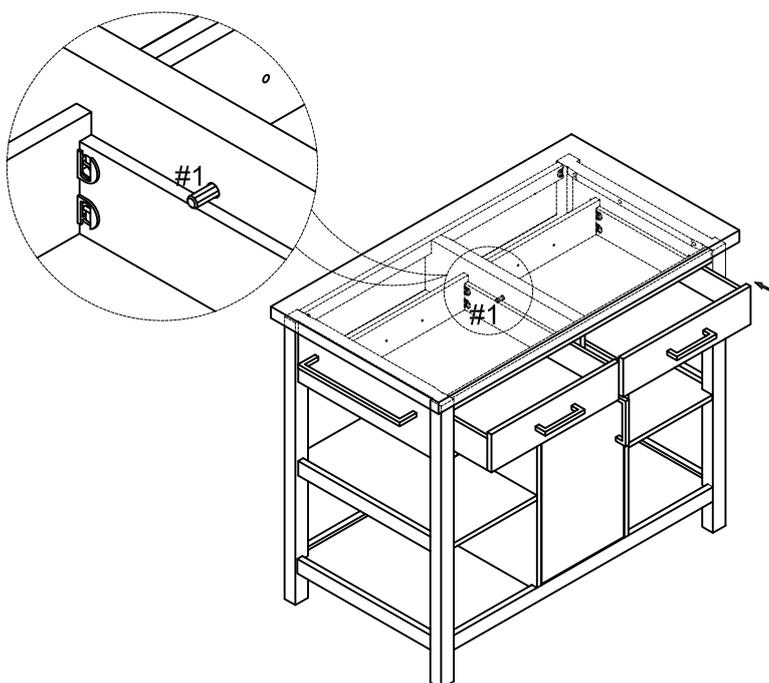

#1  x 1