















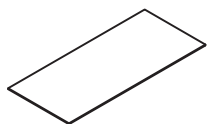








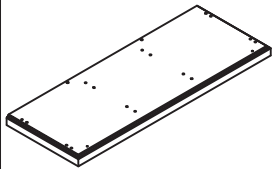


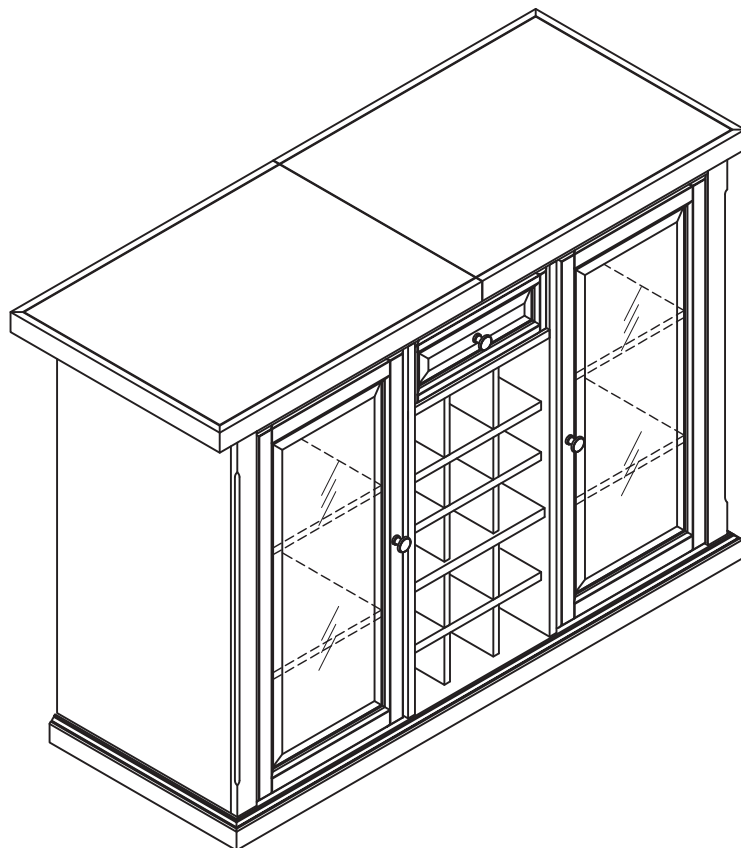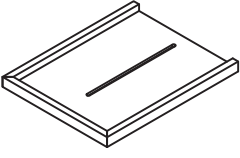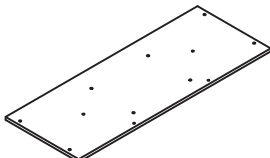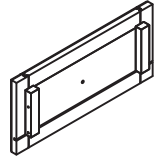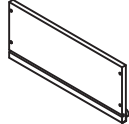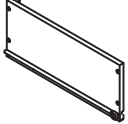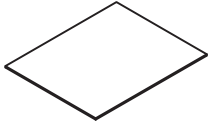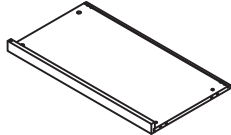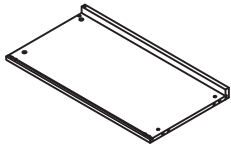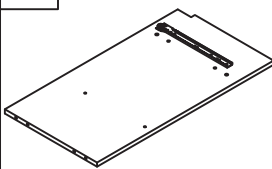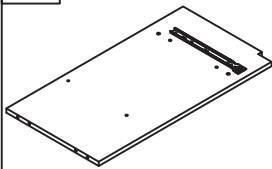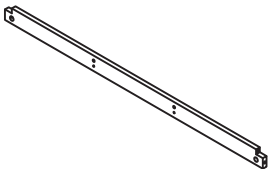



# BAR CABINET WITH SLIDING TOP CF4002

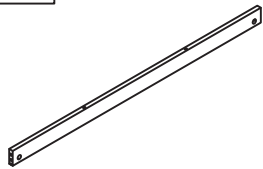


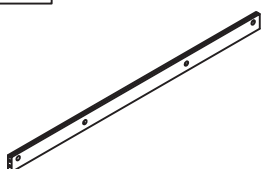




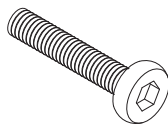







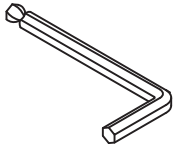


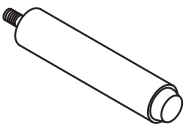
# PART LIST






<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Pull-Out Top 2 PCS	Top 1 PC	Drawer Front Panel 1 PC	Drawer Left Side Panel 1PC	Drawer Right Side Panel 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Drawer Back Panel 1 PC	Drawer Bottom Panel 1 PC	Left Side Panel 1 PC	Right Side Panel 1 PC	Left Partition Panel 1 PC
<b>K</b> 	<b>L</b> 	<b>M</b> 	<b>N</b> 	<b>O</b> 
Right Partition Panel 1 PC	Front Top Rail 1 PC	Back Top Rail 1 PC	Back Bottom Rail 1 PC	Back Partition Rail 2 PCS
<b>P</b> 	<b>Q</b> 	<b>R</b> 	<b>S</b> 	<b>T</b> 
Back Panel 3 PCS	Wood Shelf 1 PC	Adjustable Shelf 4 PCS	Wine Hold Adjustable Shelf 1 PC	Wine Hold Shelf 3 PCS
<b>U</b> 	<b>V</b> 	<b>W</b> 	<b>X</b> 	<b>Y</b> 
Large Wine Holder Wood Stand 2 PCS	Short Wine Holder Wood Stand 2 PCS	Left Door 1 PC	Right Door 1 PC	Base 1 PC

# PART LIST


<b>Z</b>	<b>ZA</b>
	 For use only with Bun Foot
Support Legs 2 PCS	Support Legs 2 PCS


# HARDWARE LIST

<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>
				 3/4"*φ5/32"*D9
Wood Dowel 30 PCS	Cam Bolt 20 PCS	Cam Lock 20 PCS(Extra 2)	Knob 3 PCS	Round Head Bolt 3 PCS
<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>
	 2"*φ1/4"*D11	 7/8"*φ1/4"*D11		
Barrel Nut 8 PCS	Short Hex Socket Head Bolt 8 PCS	Long Hex Socket Head Bolt 2 PCS	Shelf holder 20 PCS	Magnet 2 PCS
<b>11</b>	<b>12</b>	<b>13</b>	<b>14</b>	<b>15</b>
 12mm*φ3*D6mm	 1"*φ4*D8	 1-1/4"*φ4*D8		
Round Head Screw 4 PCS(Extra 1)	Short Flat Head Screw 8 PCS(Extra 1)	Long Flat Head Screw 2 PCS(Extra 1)	Flat Washer 2 PCS	Allen Key 1 PC
<b>16</b>		<p><b>ADDITIONAL TOOLS (Not Provided)</b>  Note:It is not recommended to use power tools during assembly. However a screw gun can assist with mounting.</p>  <p>Phillips Head Screw Driver</p>		
				
Safety Strap Kit 1 PC	Pin Hinge (Extra 4)			

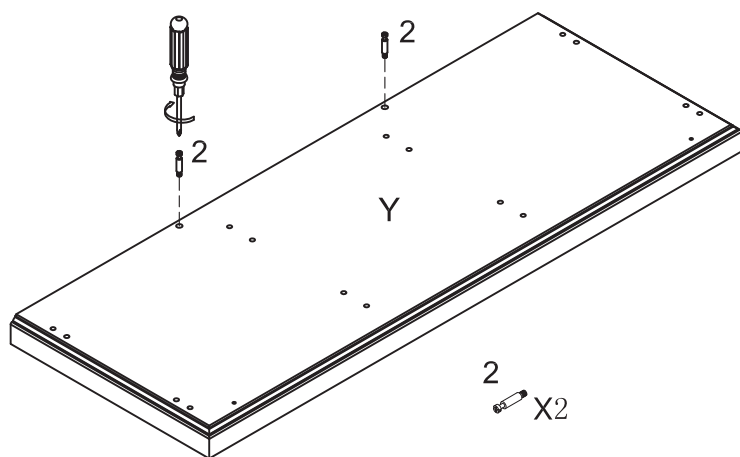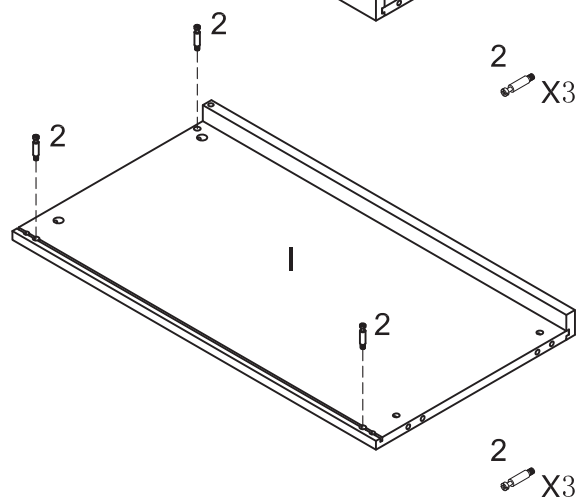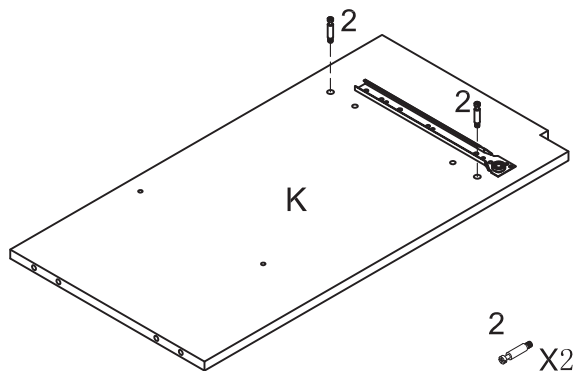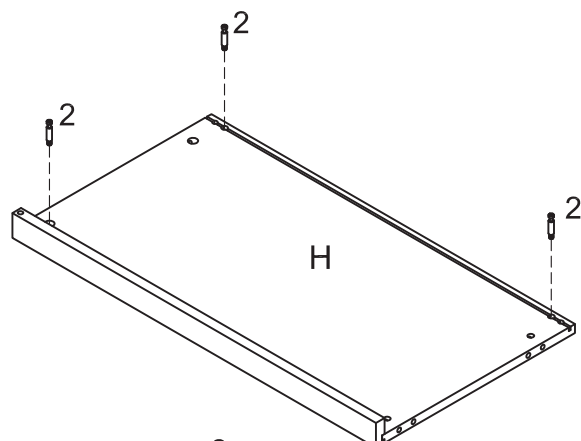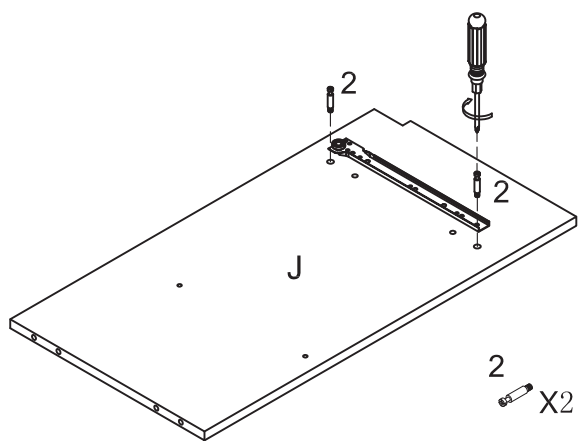

Step 1  
Insert Cam Bolts (Part #2) into  
pre-drilled holes of parts B, H, I, J, K  
& Y using Phillips head screw driver  
as shown.  
**DO NOT OVERTIGHTEN.**



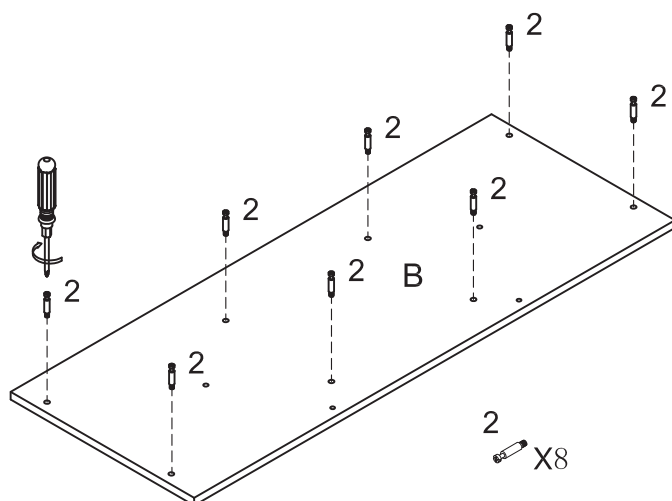



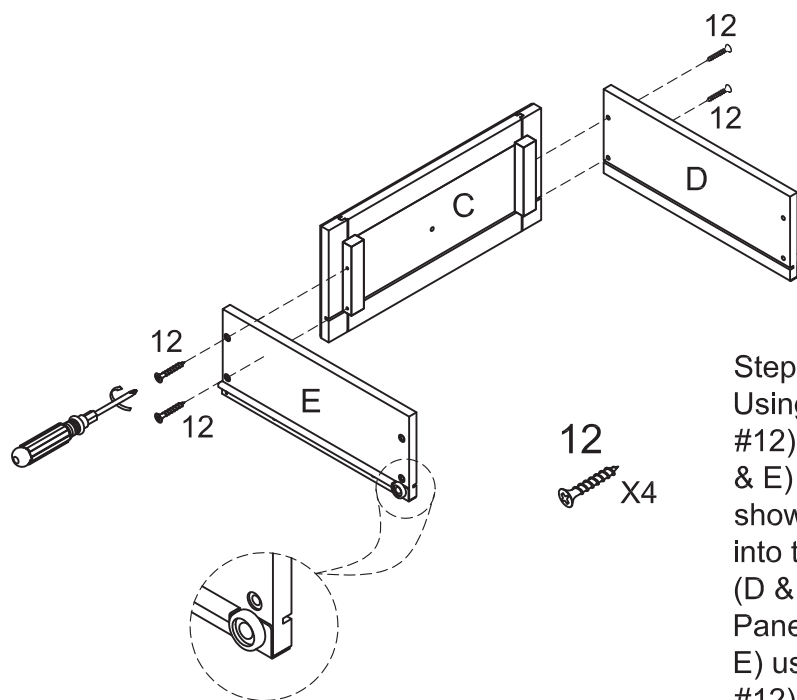


## Step 2

Using Short Flat Head Screws (Part #12), attach the Drawer Side Panels (D & E) and the Drawer Front Panel (C) as shown. Insert Drawer Bottom Panel (G) into the grooves of Drawer Side Panels (D & E) as shown. Attach Drawer Back Panel (F) to Drawer Side Panels (D & E) using Short Flat Head Screws (Part #12) as shown. Attach Knob (Part #4) to Drawer Front Panel (C) using Round Head Bolt (Part #5).


NOTE - Be sure that the roller wheel on Panels (D & E) are on the outside and opposite the drawer front.

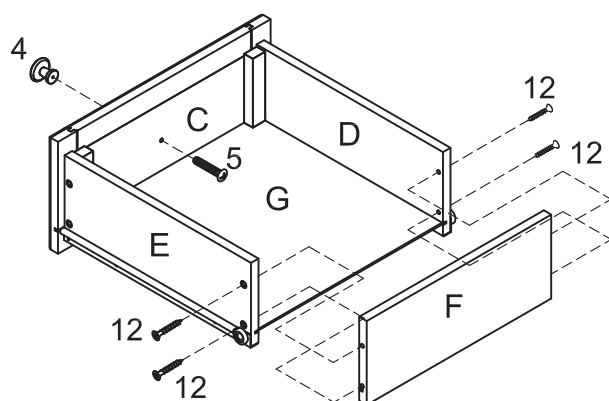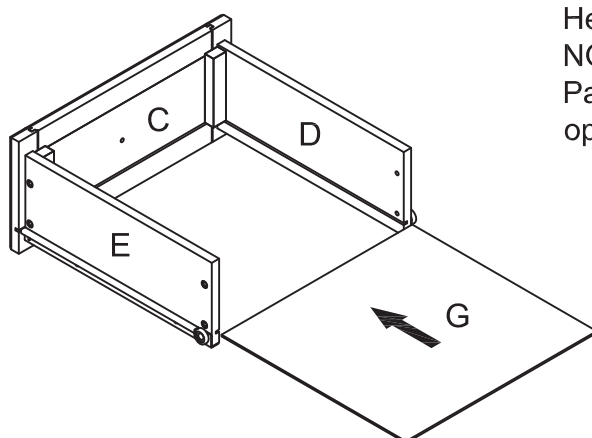

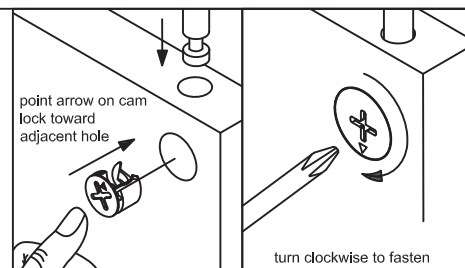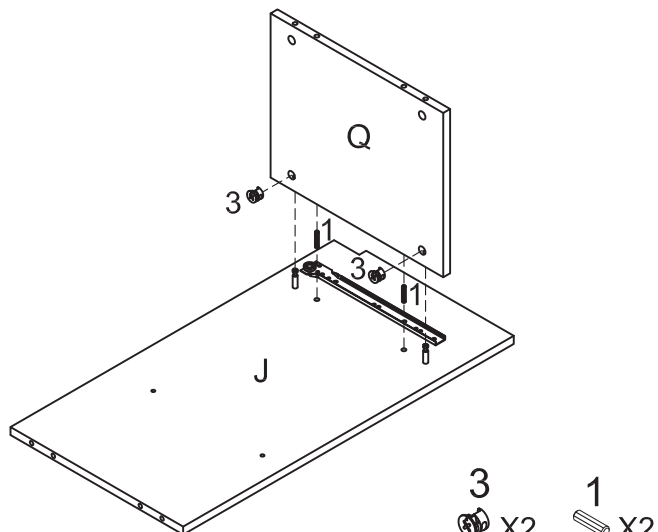


### Step 3

With Left Partition Panel (J) flat on the floor (fixed drawer guide facing up), attach Wood Shelf (Q) using Wood Dowels (Part #1) and Cam Locks (Part #3) as shown.

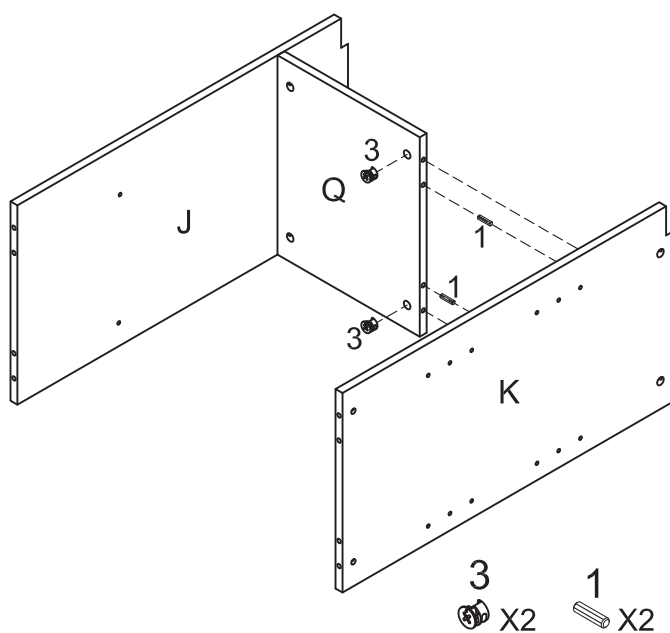

### Step 4


Turn assembled parts (J & Q) on their side. Attach Right Partition Panel (K) using Wood Dowels (Part #1) and Cam Locks (Part #3) as shown.

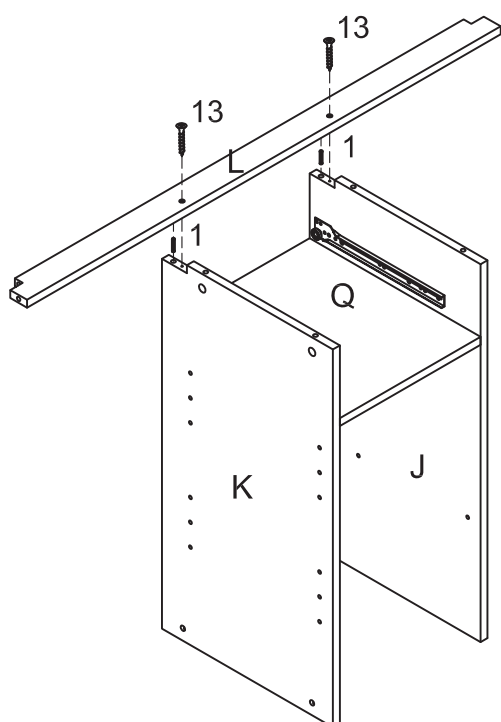


### Step 5

Turn assembled parts (J, K & Q) on end with cutout notches facing up. Attach Front Top Rail (L) to Panels (J & K) with Wood Dowels (Part #1) and Long Flat Head Screws (Part #13) as shown.




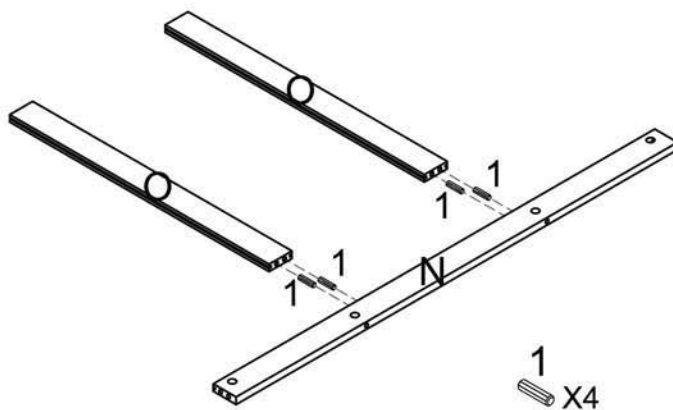



**Step 6**  
With Back Bottom Rail (N) on a flat surface, attach Back Partition Rails (O) using Wood Dowels (Part #1).

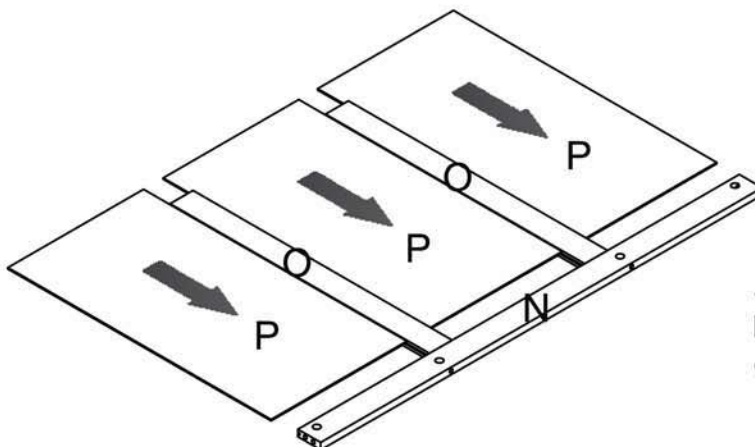

**Step 7**  
Insert Back Panels (P) into the grooves of Rails (N & O).

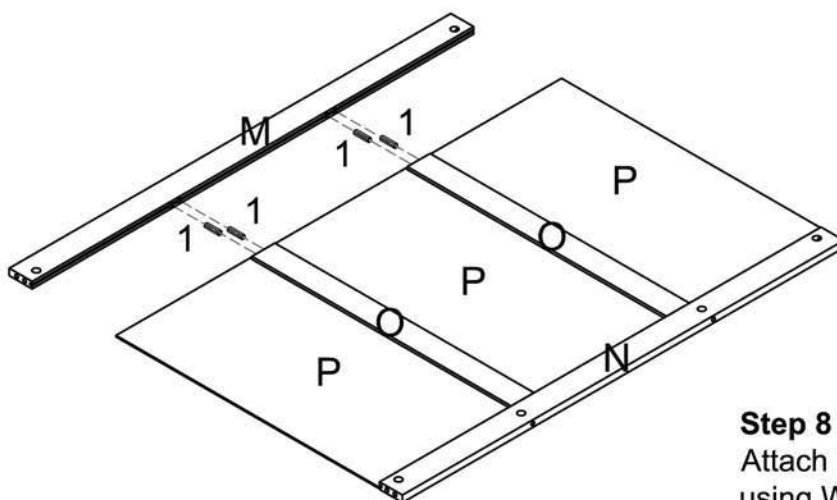


**Step 8**  
Attach Back Top Rail (M) to Rails (O) using Wood Dowels (Part #1) as shown.  
**NOTE** - Be sure that Back Panels (P) are completely inserted into the grooves of parts M, N & O.

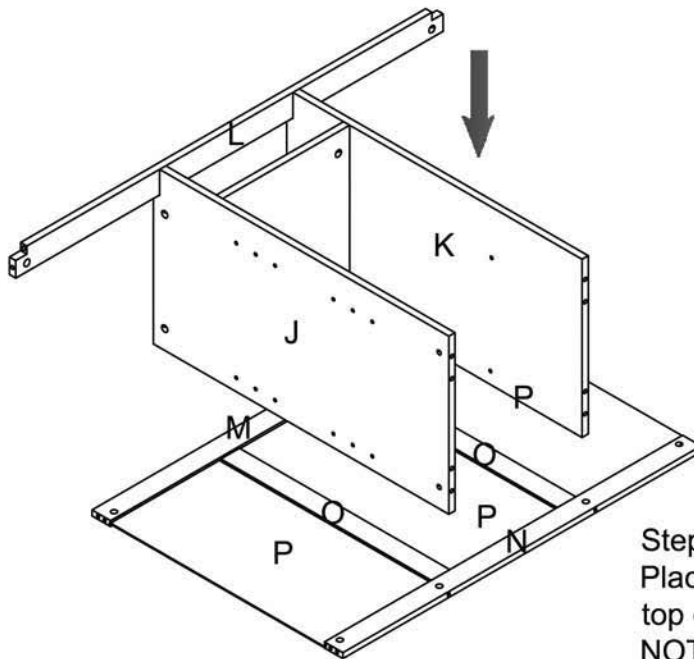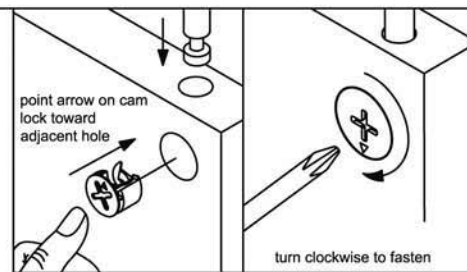

#### Step 9



Place assembled parts J, K & L on top of assembled parts M, N, O & P.  
NOTE - Panels J & K should be directly on top of Rails (O).

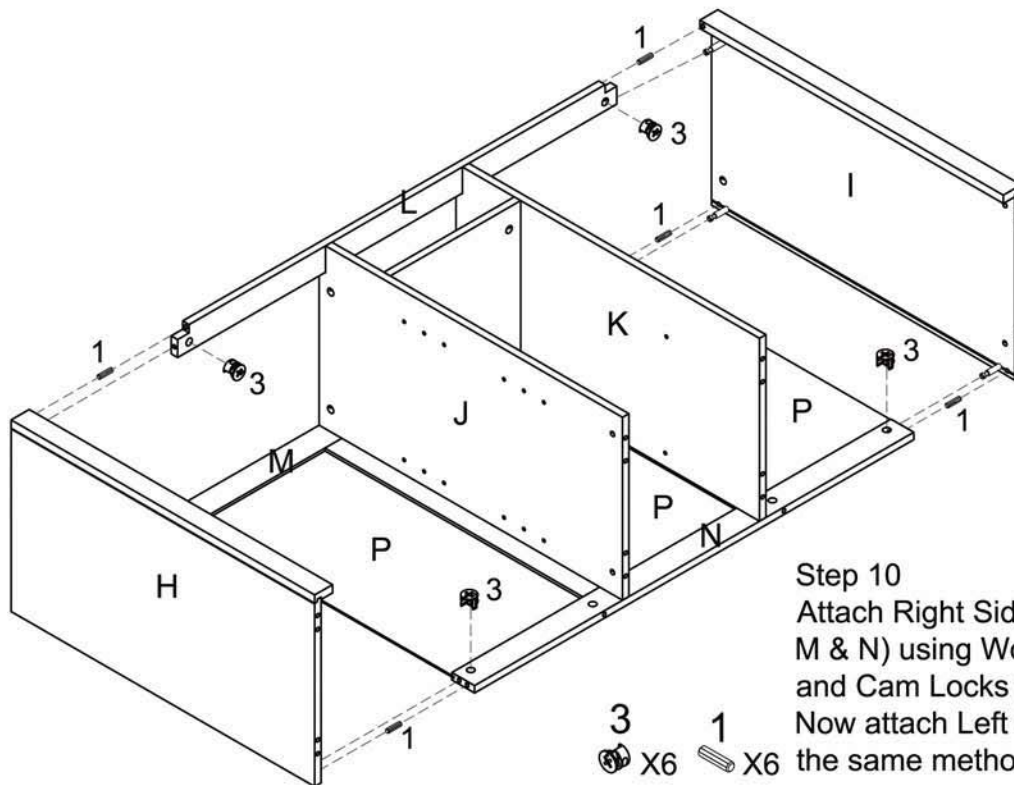

#### Step 10



Attach Right Side Panel (I) to Rails (L, M & N) using Wood Dowels (Part #1) and Cam Locks (Part #3) as shown. Now attach Left Side Panel (H) using the same method as Panel (I).



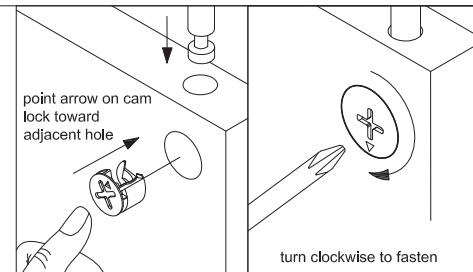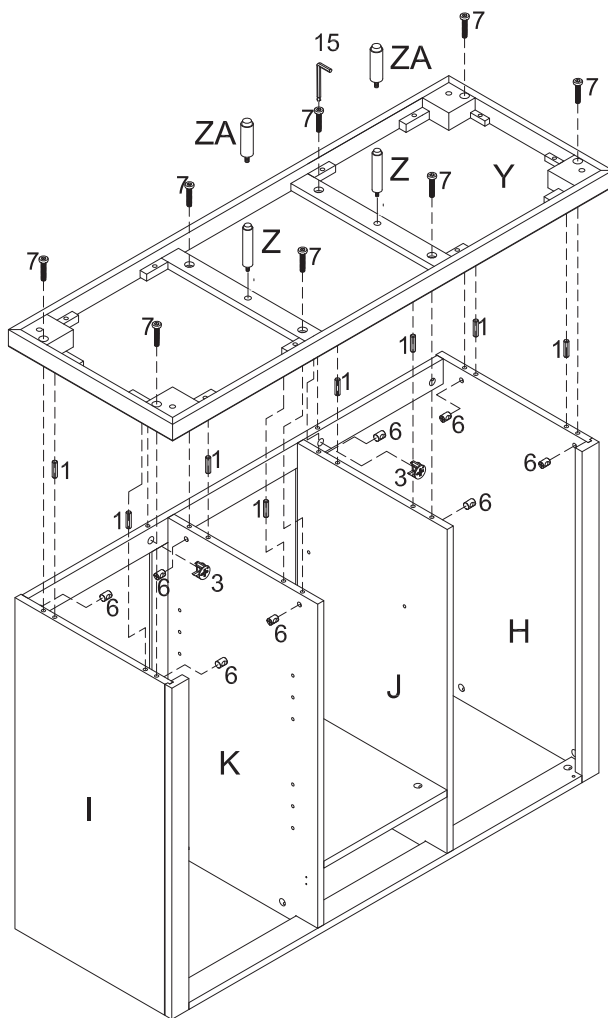


#### Step11



Turn cabinet over with Rail (L) on a flat surface. Attach Base (Y) using Wood Dowels (Part#1) and Long Hex Socket Head Bolts (Part#7) as shown. Attach Legs (packaged separately) using Hex Socket Head Bolts & Wood Dowels (as shown in instruction manual included with legs). Attach 2 Support Legs (Z) OR (ZA) to the Base (Y). Carefully turn cabinet over so that legs are now flat on the floor.  
(Noted : Support Legs (ZA) are used only with Bun Foot ; Support Legs (Z) are used with other styles feet .)

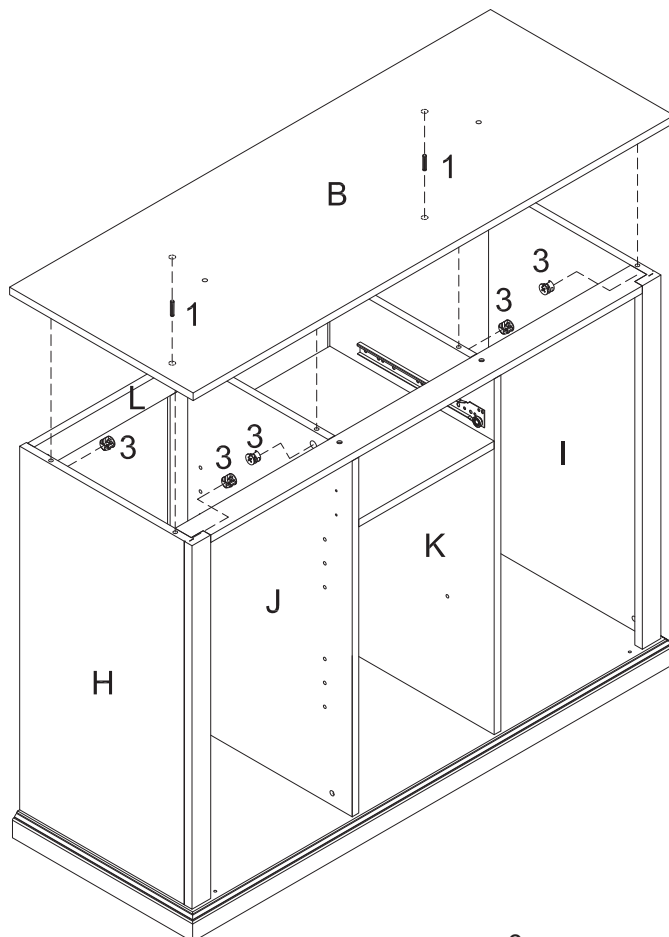

#### Step12



Attach Top(B) using Wood Dowels(Part#1) and Cam Locks(Part#3) as shown.



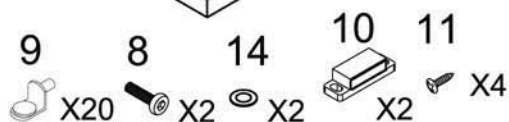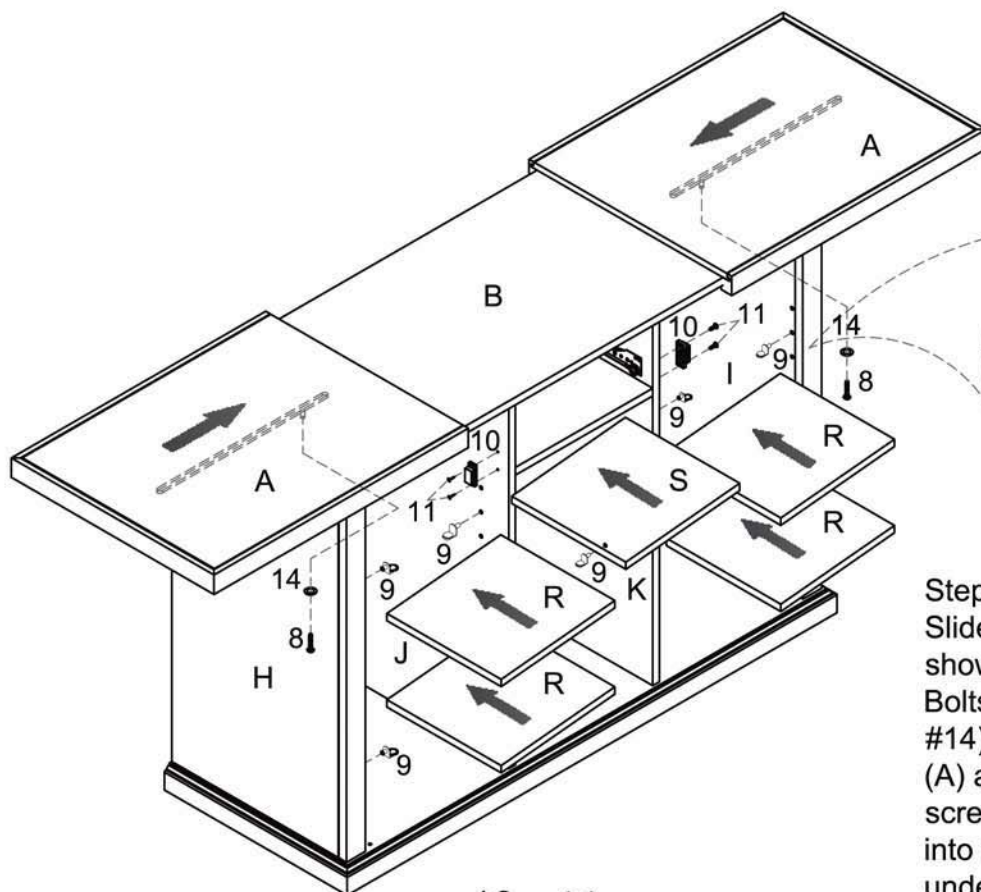


### Step 13

Slide Pull-Out Tops (A) onto Top (B) as shown. Insert Short Hex Socket Head Bolts (Part #8) into Flat Washers (Part #14). Making sure that Pull-Out Tops (A) are completely pushed together, screw Hex Socket Head Bolts (Part #8) into the left & right side holes on the underside of Top (B). **Note- These bolts will act as a "stop" to prevent Pull-Out Tops (A) from sliding off completely.** Now attach Magnets (Part #10) to the pre-drilled holes in Panels J & K using Round Head Screws (Part #11). Insert Shelf Holders (Part #9) into the cabinet at desired positions and add Adjustable Shelves (R & S).

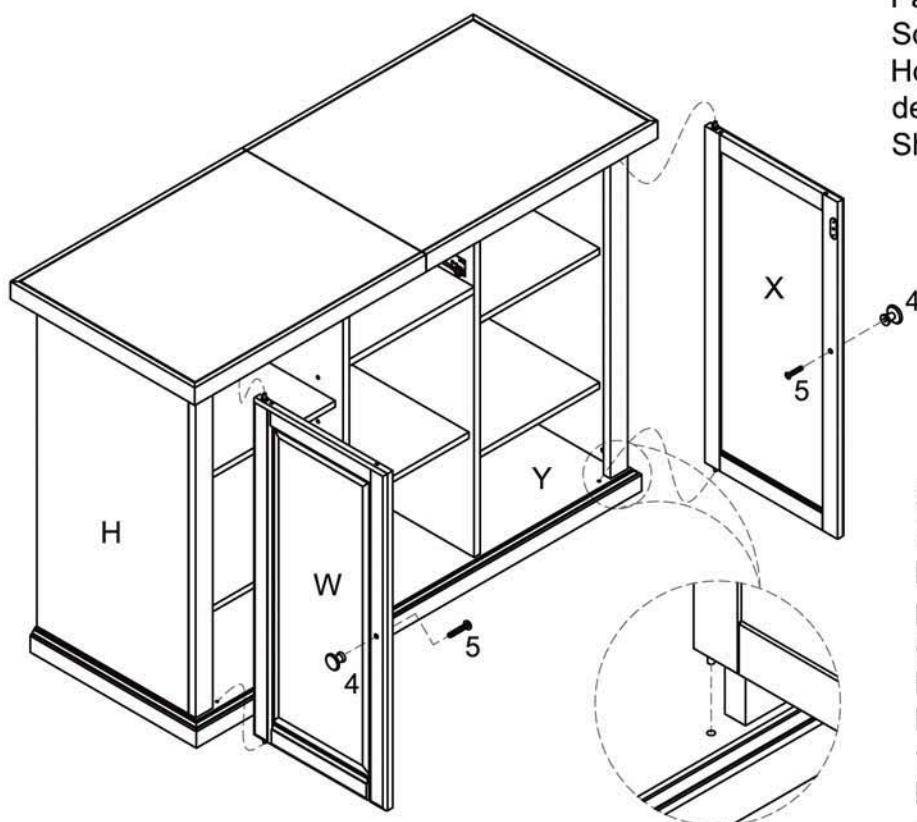


### Step 14


Attach Doors (W & X) to the cabinet by placing bottom Pin Hinge into the pre-drilled holes at the bottom & depressing the top spring loaded Pin Hinge to fit the doors into place. **Note - Be sure Pin Hinges have fully extended into the pre-drilled holes to secure the doors into place.**

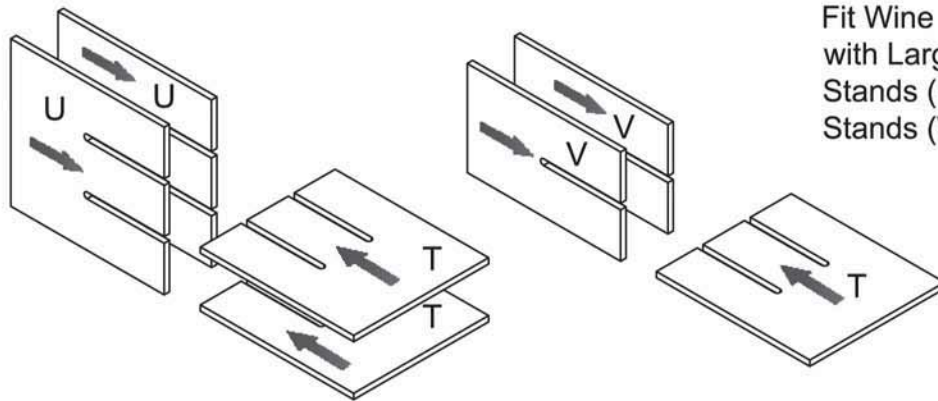

**Step 15**  
Fit Wine Holder Shelves (T) together with Large Wine Holder Wood Stands (U) and Short Wine Holder Stands (V) as shown.

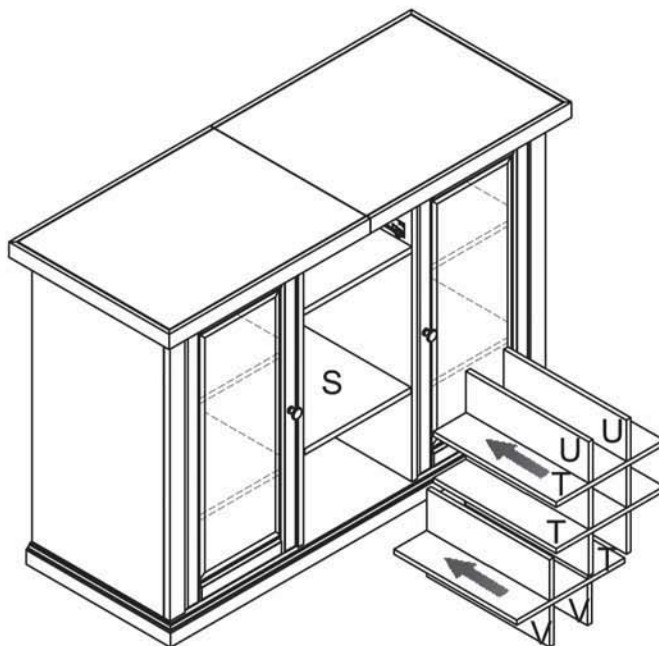

**Step 16**  
Insert assembled parts T & U into the cabinet above Shelf (S). Insert assembled parts (T & V) into the cabinet below Shelf (S).  
**Note - Shelf (S) is adjustable. Be sure that it is in the proper position to insert the wine holders.**

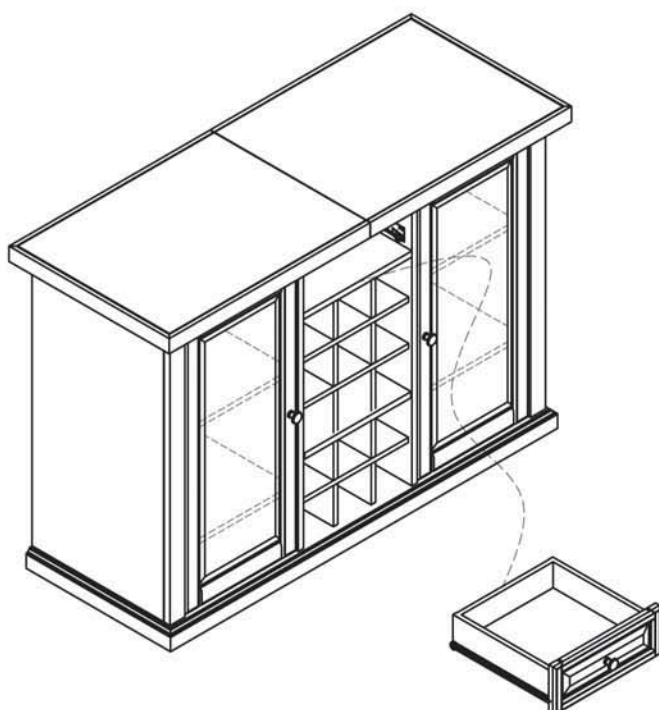


**Step 17**  
Insert the assembled drawer as shown.

16



SAFETY STRAP KIT  
1 PC

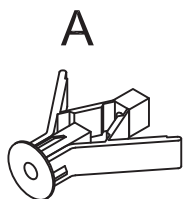

WALL ANCHOR  
Ax1 PC



WASHER  
Bx2PCS




D8\*3/4"

SHORT SCREW  
Cx1PC



D8\*1-1/2"

LONG SCREW  
Dx1PC

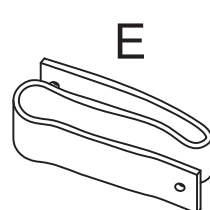

SAFETY WALL STRAP  
Ex1PC


## SAFETY WALL STRAP ASSEMBLY INSTRUCTION

1) Insert Short Screw Part (C) through Washer Part (B) and Safety Wall Strap Part (E) and screw it into the predrilled hole in the Part (A) of the cabinet.


2) Drill a 11/32" hole where you want to secure your cabinet. The hole should be at the same height as the hole in Part (A) of the cabinet. Tap Wall Anchor Part (A) into the hole.

3) Insert Long Screw Part (D) through a Washer Part (B) and Wall Safety Strap Part (E) into Wall Anchor Part (A).

Note: This item is not intended for clothing storage use.

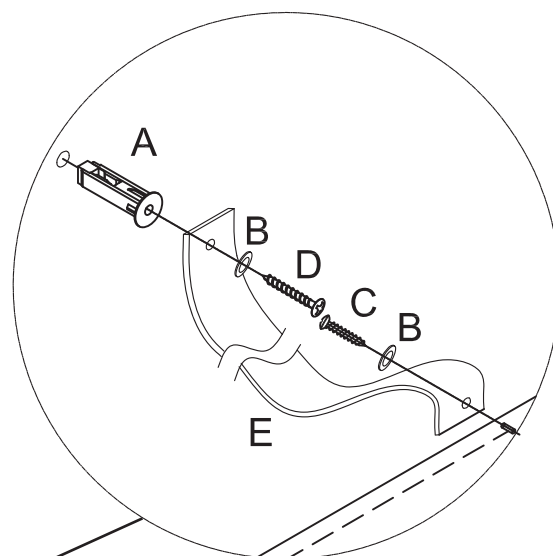

Wall

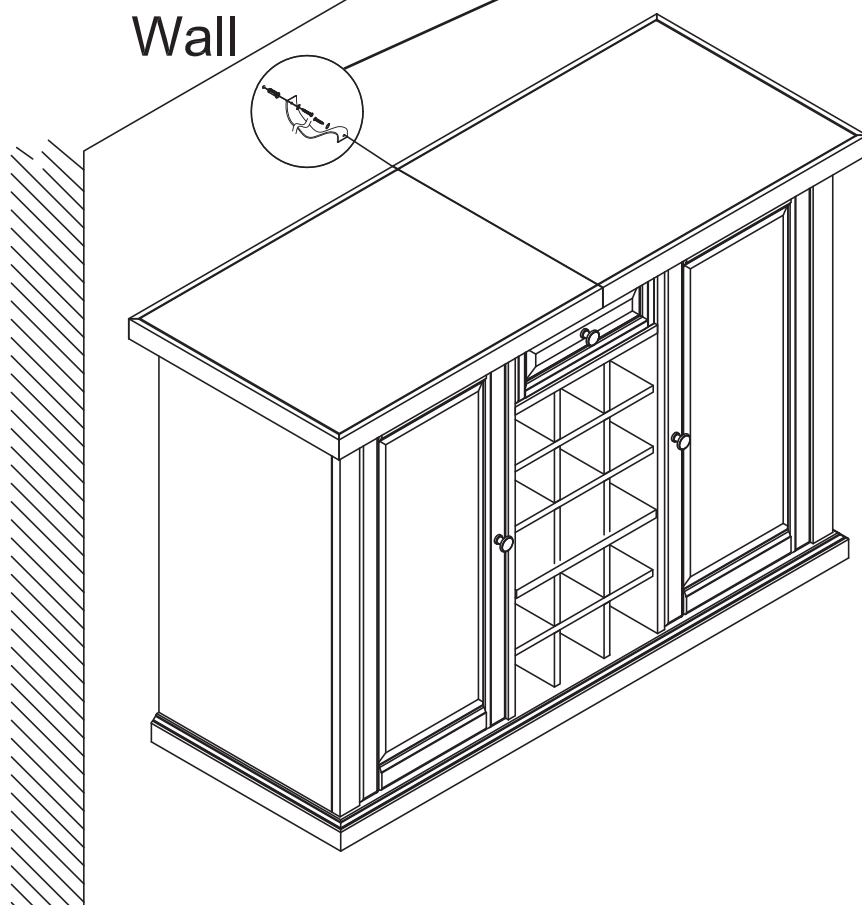

## ⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.  
Do not remove!*