




















Linen Bathroom Hamper









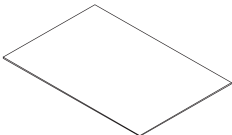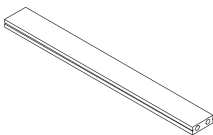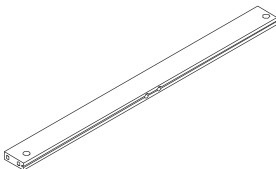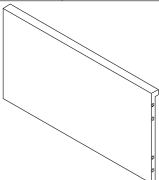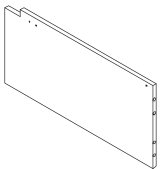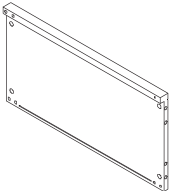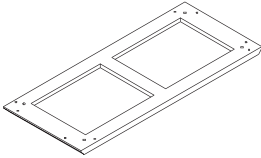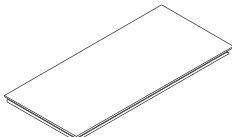

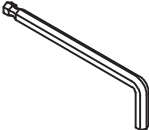

CF7003

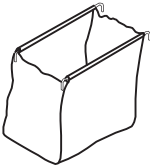

PART LIST

 <p>Back Panel</p>	 <p>Back Center Rail</p>	 <p>Back Rail</p>
<p>1 2pcs</p>	<p>2 1pc</p>	<p>3 2pcs</p>
 <p>Left Side Panel</p>	 <p>Center Panel</p>	 <p>Front Rail</p>
<p>4 1pc</p>	<p>5 1pc</p>	<p>6 1pc</p>
 <p>Right Side Panel</p>	 <p>Bottom Panel</p>	 <p>Leg</p>
<p>7 1pc</p>	<p>8 1pc</p>	<p>9 4pcs</p>
 <p>Top Panel</p>	 <p>Box Front Panel</p>	 <p>Right Side Panel of Left Box</p>
<p>10 1pc</p>	<p>11 2pcs</p>	<p>12 1pc</p>
 <p>Left Side Panel of Left Box</p>	 <p>Right Side Panel of Right Box</p>	 <p>Left Side Panel of Right Box</p>
<p>13 1pc</p>	<p>14 1pc</p>	<p>15 1pc</p>
 <p>Box Back Panel</p>	 <p>Bag</p>	
<p>16 2pcs</p>	<p>17 2pcs</p>	

HARDWARE LIST

 Cam Lock Ø15*12mm A 12pcs	 Cam Bolt Ø6*42mm B 12pcs	 Short Wood Dowel Ø8*30mm C 30pcs
 Long Bolt Ø6*50mm D 6pcs	 Barrel Nut Ø6*12mm E 6pcs	 Short Bolt Ø6*28mm F 4pcs
 Handle L85*W30*H27 G 2pcs	 Round head bolt Ø5/32"*12mm H 4pcs	 Long Screw Ø3.5*25mm I 16pcs
 Long Wood Dowel Ø8*40mm J 2pcs	 Allen Key 4mm K 1pc	 Safety strap kit L 1Set

EXTRA HARDWARE LIST




A X 1



C X 2



I X 2




B X 1



F X 1

ADDITIONAL TOOLS (Not Provided)



Note: It is not recommended to use power tools during assembly. You may use power tools to assist in mounting the safety strap kit to the wall.



Phillips Head Screw Driver

Step 1. Attach Cam Bolt (B) to Side Panels (4 & 7) and Top Panel (10) as shown.




NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

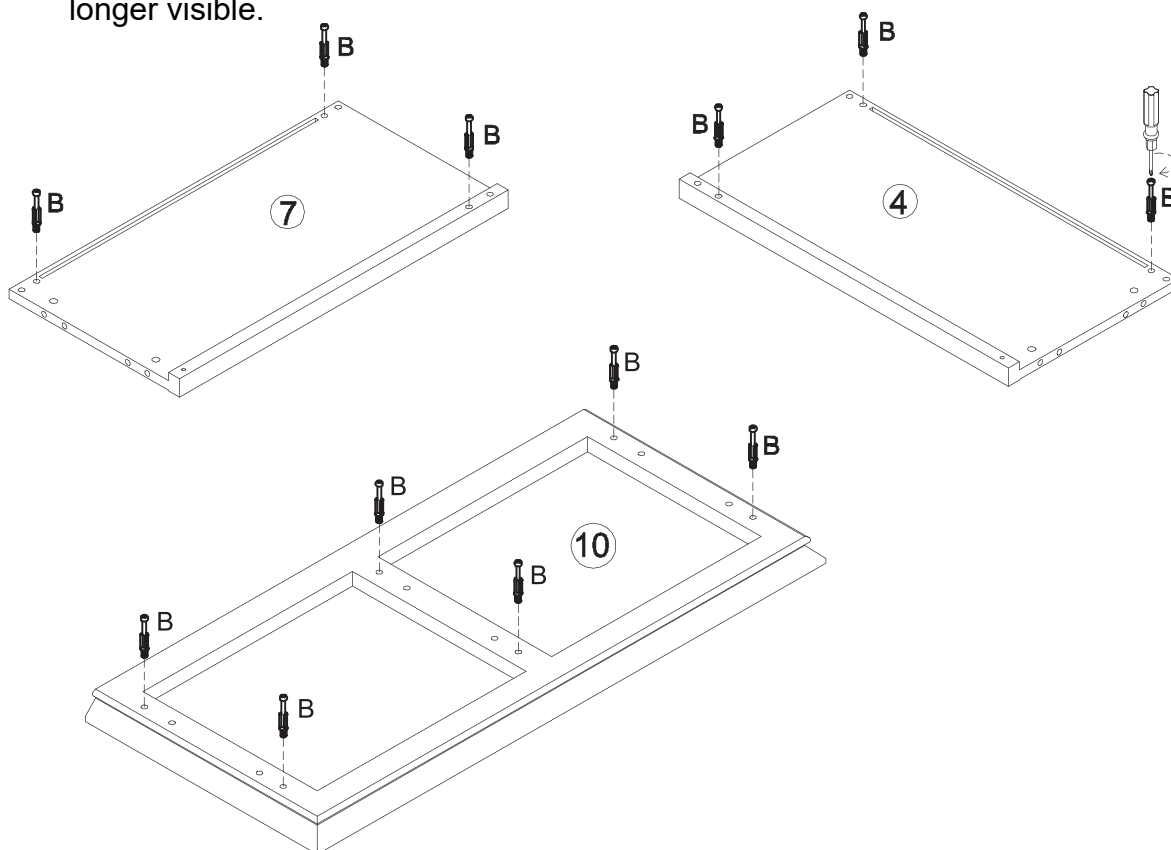

B x 12

Step 2. Attach Back Rail (3) to Right Side Panels (7) using Wood Dowel (C) and Cam lock (A) . See image inserts to the right for proper cam lock installation .

NOTE: Cam locks must rotate full 180°. See pictured insert.

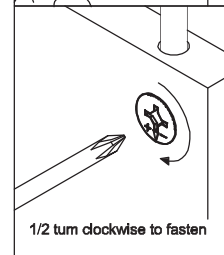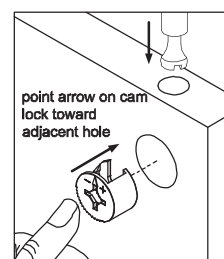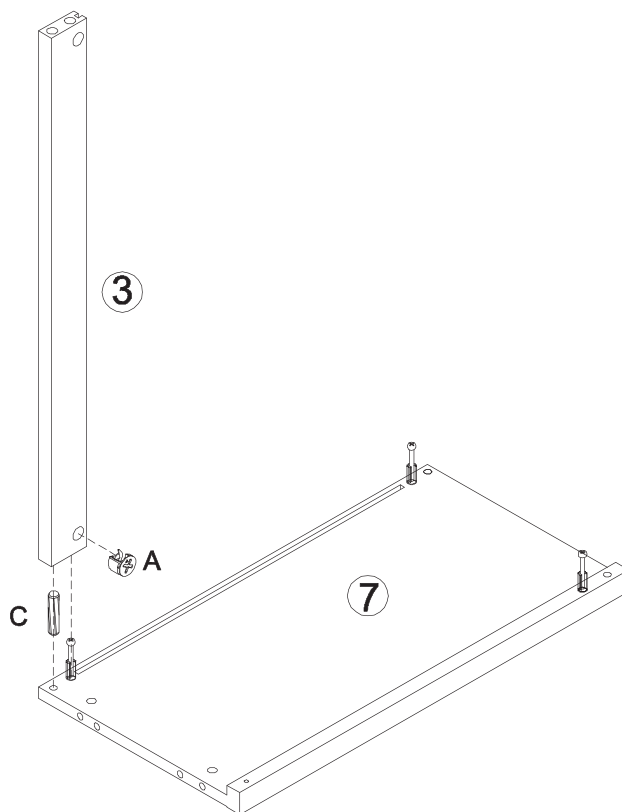

A x 1






C x 1

Step 3. Attach Back Center Rail (2) to Back Rail (3) using Wood Dowel (C) and attach Back Panel (1) to place .

Attach Back Rail (3) to place using Wood Dowel (C) and Cam lock (A) .

NOTE: Cam locks must rotate full 180°. See pictured insert.

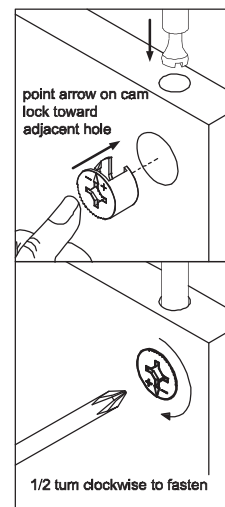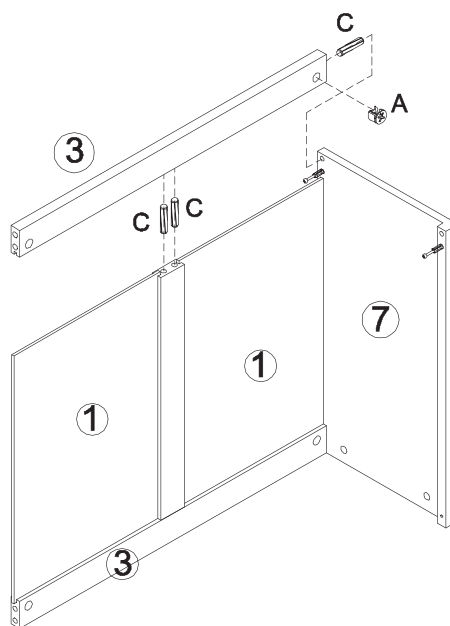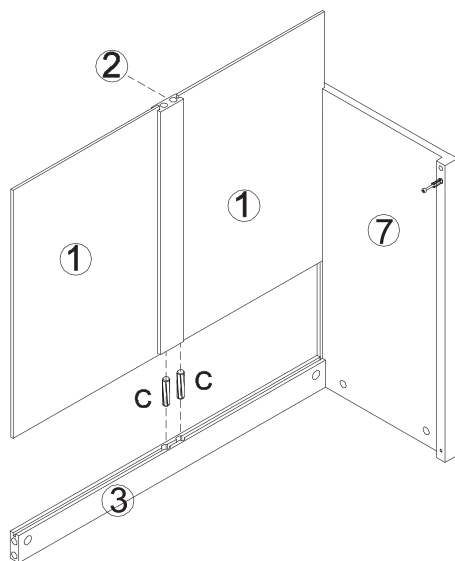

A x 1






C x 5

Step 4. Attach Front Rail (6) to place using Wood Dowel (C) and Cam lock (A) .

Attach Left Side Panel (4) to place using Wood Dowel (C) and Cam lock (A) .

NOTE: Cam locks must rotate full 180°. See pictured insert.

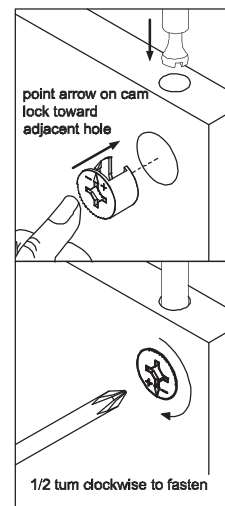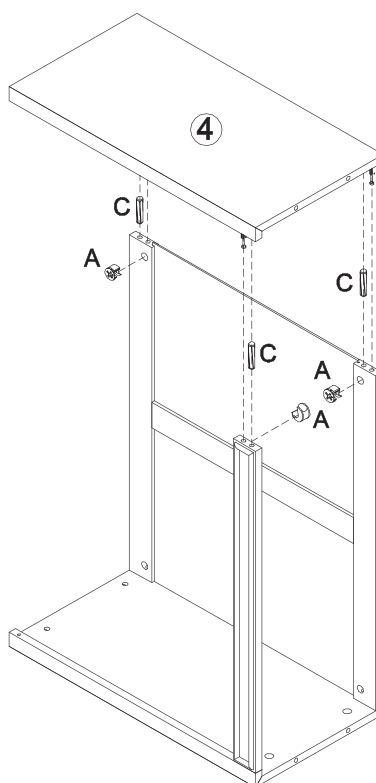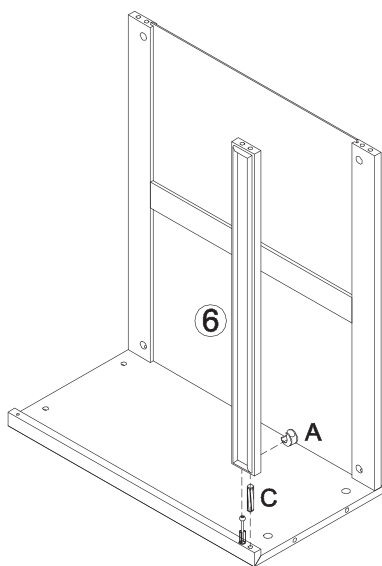

5





A x 4





C x 4

Step 5. Attach Center Panel (5) to Bottom Panel (8) using Wood Dowel (C) ,Long Bolt (D) and Barrel Nut (E) and Allen Key (K) .

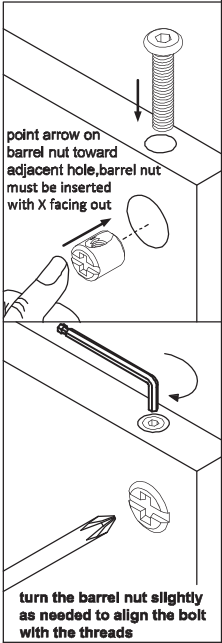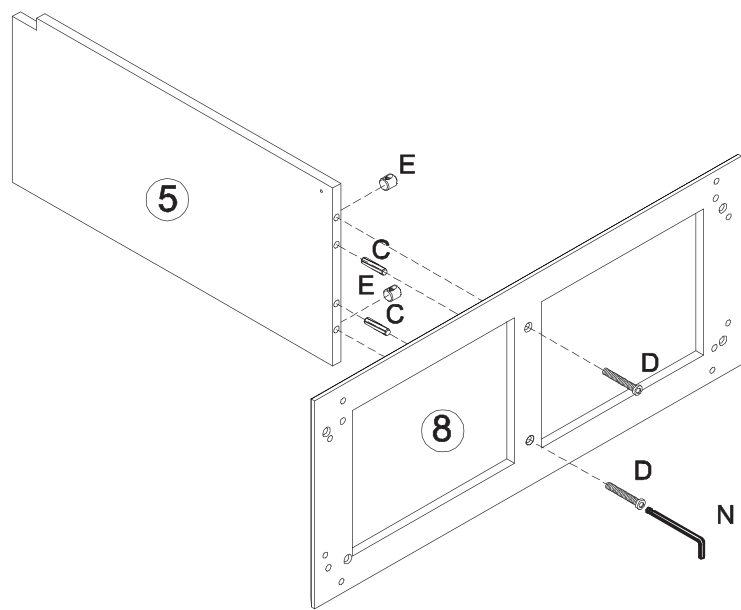

K x 1	E x 2	D x 2	C x 2


Step 6. Attach Center Panel (5) and Bottom Panel (8) to place using Wood Dowel (C) ,Long Bolt (D) and Barrel Nut (E) and Allen Key (K) .

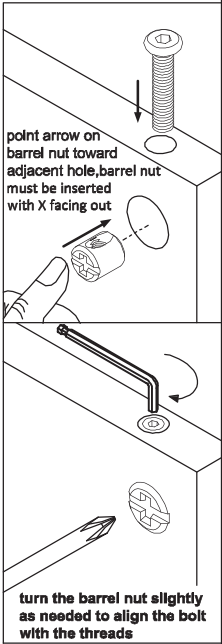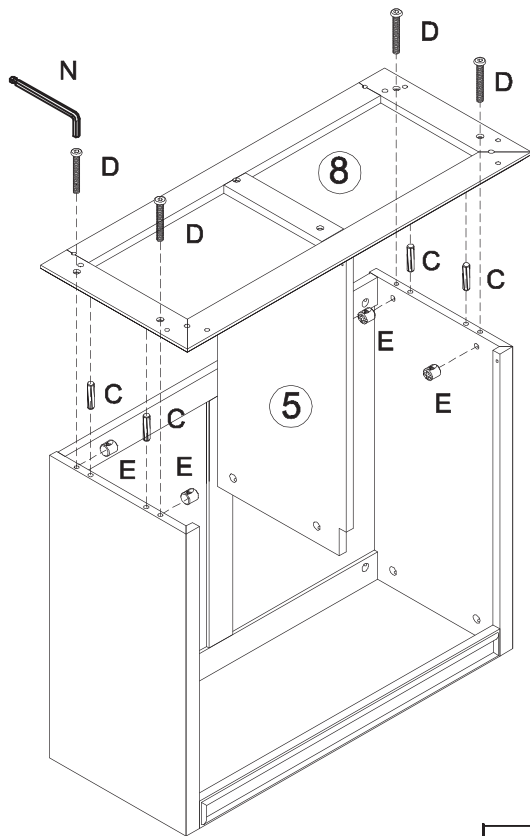


6

E x 4	D x 4	C x 4



Step 7. Attach Legs (9) into place using Wood Dowel (C) ,Short Bolt (F) and Allen Key (K) .

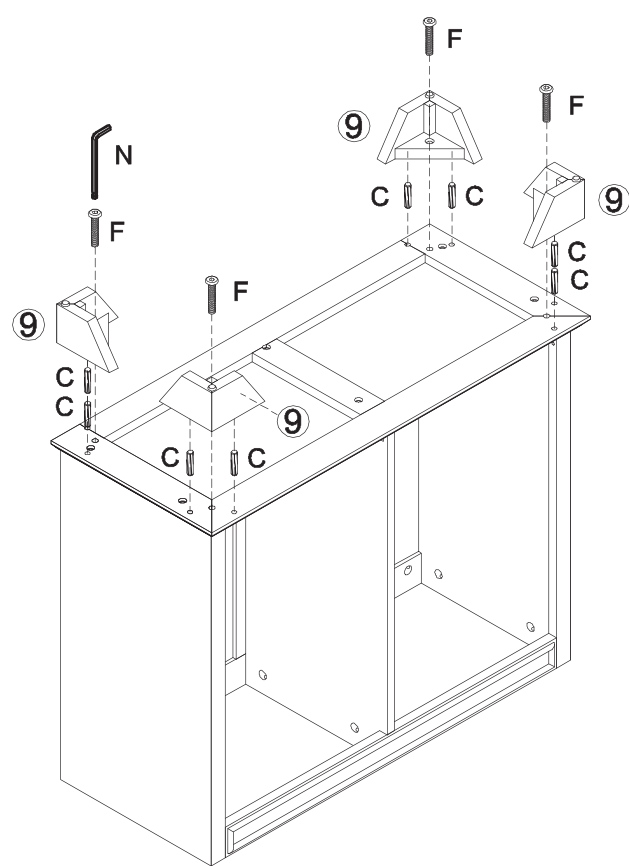

	
F x 4	C x 8


Step 8. Attach Top Panel (10) into place using Wood Dowel (C) and Cam lock (A) .

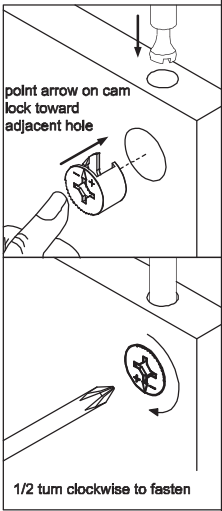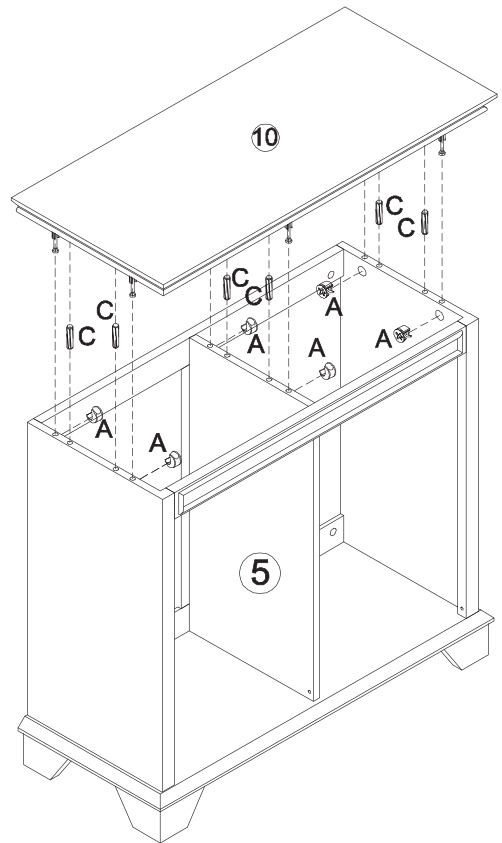


NOTE: Cam locks must rotate full 180°. See pictured insert.




	
A x 6	C x 6

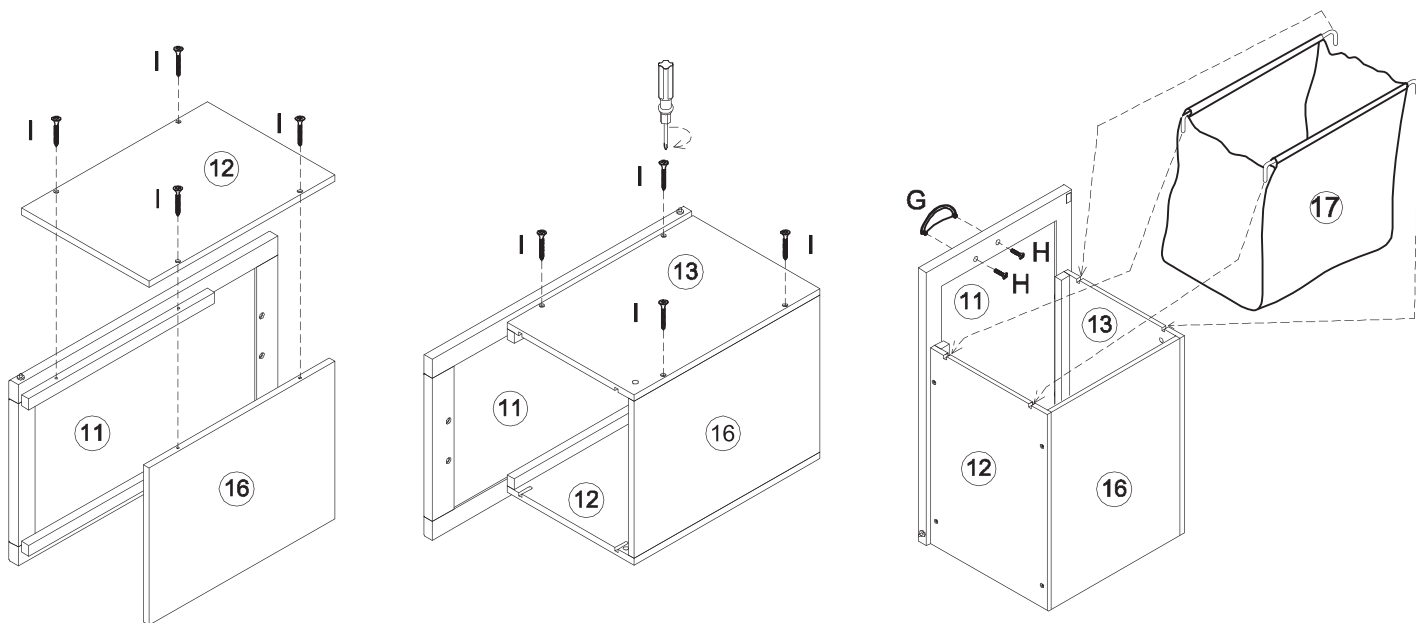


Step 9. Set Box Front Panel (11), Right Side Panel of Left Box (12) and Box Back Panel (16) into place using Long Screw (I) . Attach Left Side Panel of Left Box(13) into place using Long Screw (I) . Attach Handle (G) to Box Front Panel (11) using Round Head Bolt (H) . Place Bag (17) into box and secure by inserting rods into predrilled holes.




 G x 1	 H x 2	 I x 8
--	--	--

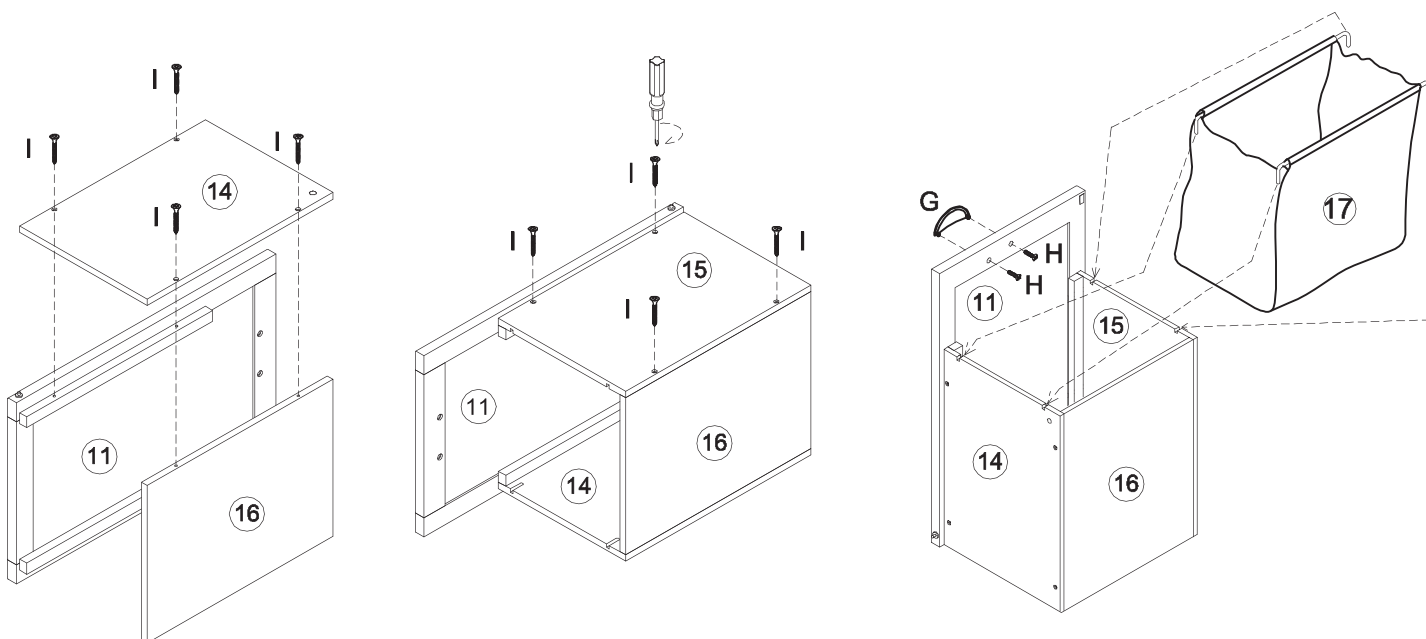Step 10. Set Box Front Panel (11),Right Side Panel of Right Box (14) and Box Back Panel (16) into place using Long Screw (I) .Attach Left Side Panel of Right Box (15) into place using Long Screw (I). Attach Handle (G) to Box Front Panel (11) using Round Head Bolt (H) . Place Bag (17) into box and secure by inserting rods into predrilled holes.




 G x 1	 H x 2	 I x 8
--	--	--

Step 11. Attach box Left Box and Right Box into place as shown .

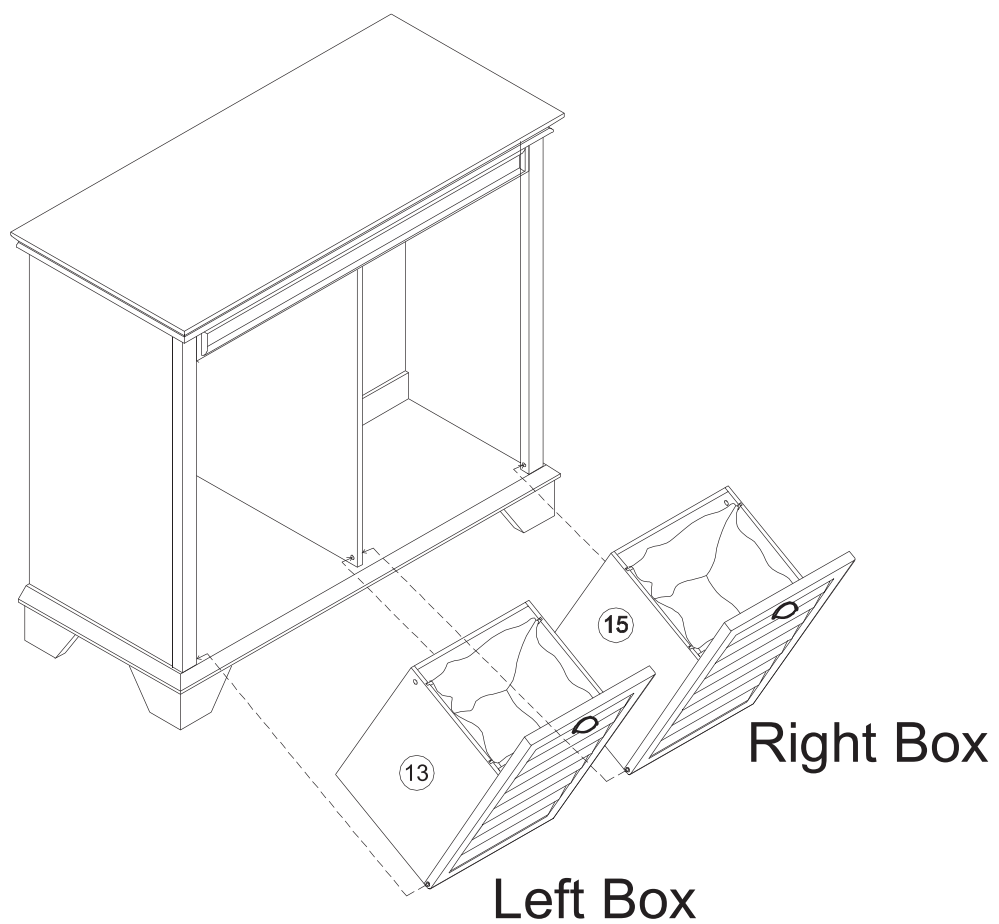


Step 12. Attach Long Wood Dowel (J) through the box hole into the cabinet to help hold the box in place.

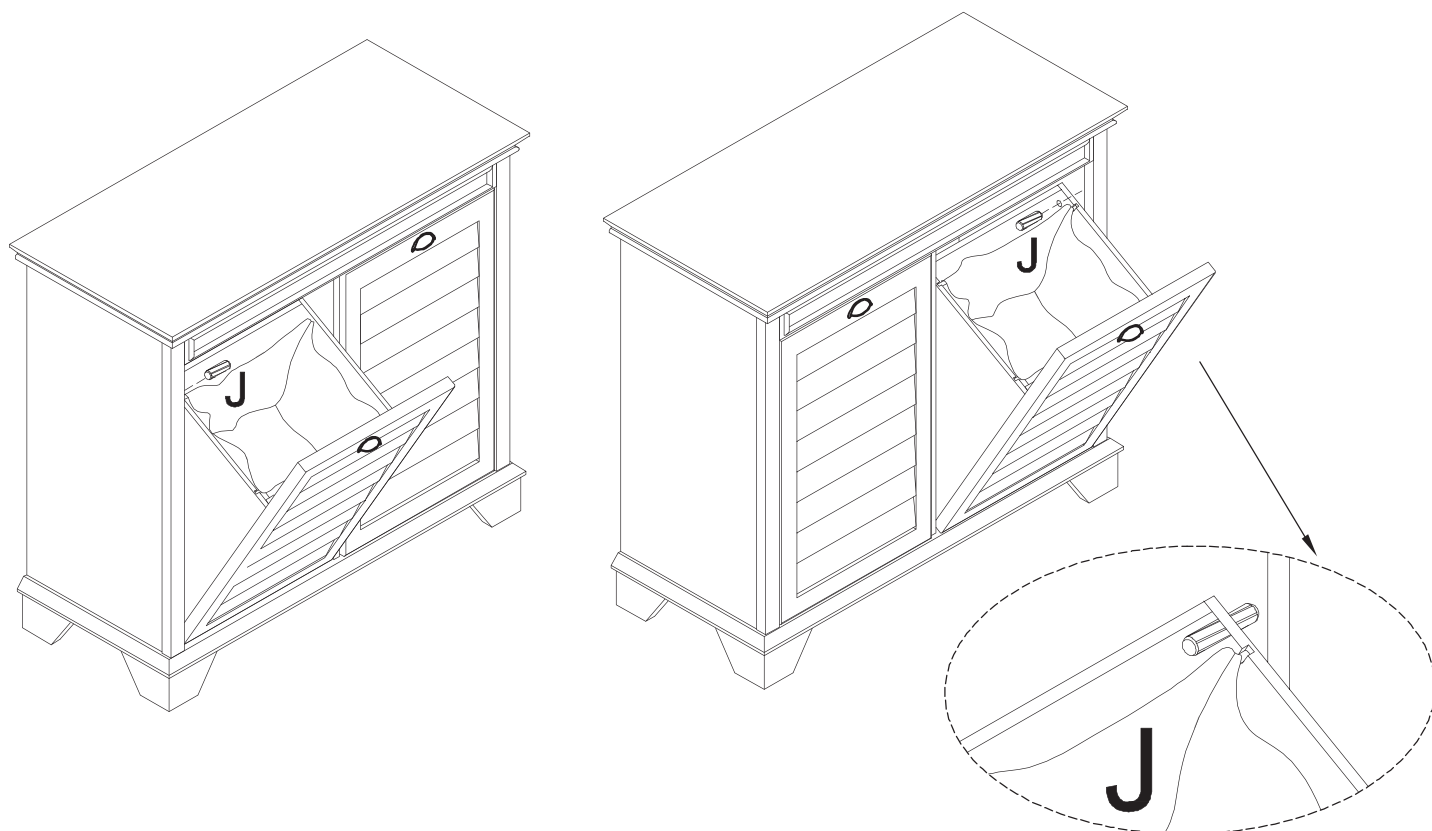

Step 13. Insert Short Screw (Part # c) through Washer (Part # b) and Safety Wall Strap (Part # e) and screw it into pre-drilled hole of Top Panel (Part # 10).
 Drill a 11/32" hole where you want to secure your pantry .The hole should be at the same height as the hole in the Top Panel (Part # 10). Tap Wall Anchor (Part # a) into the hole .
 Insert Long Screw (Part # d) through a Washer (Part # b) and Wall Safety Strap (Part # e) into Wall Anchor (Part # a).
Note: This item is not intended for clothing storage use.

Wall

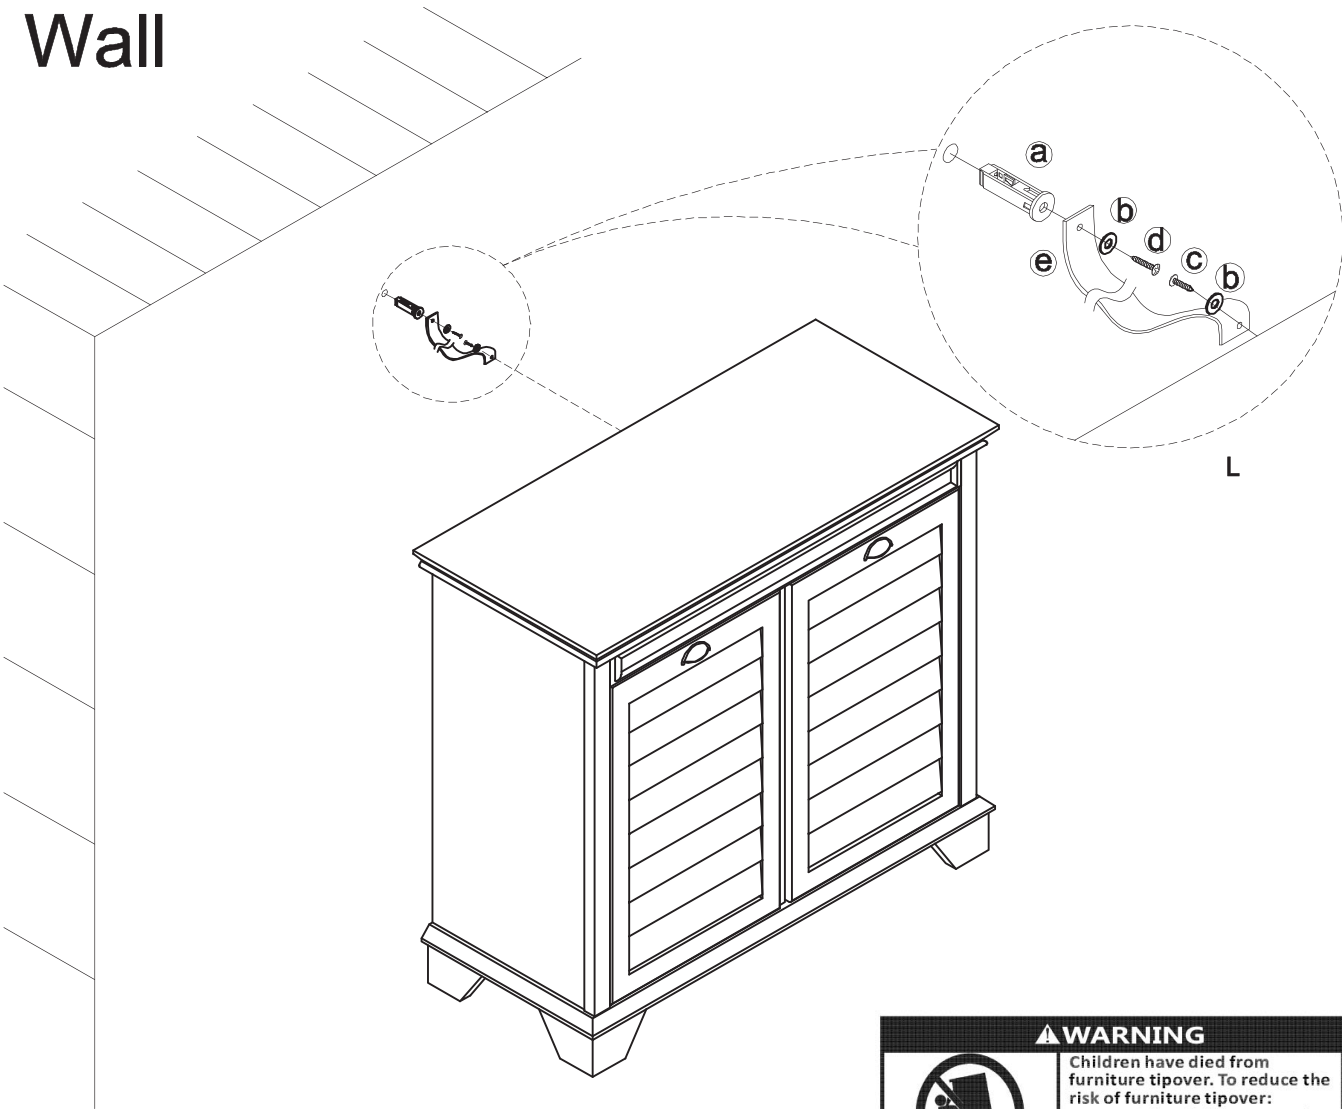

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

Safety strap kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
L 1 SET	a 1 PC	b 1 PC	c 1 PC	d 1 PC	e 1 PC