

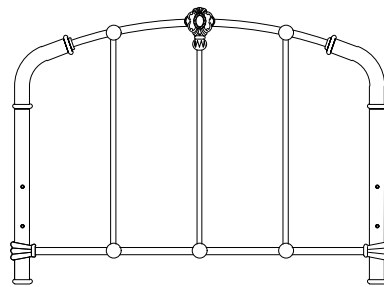
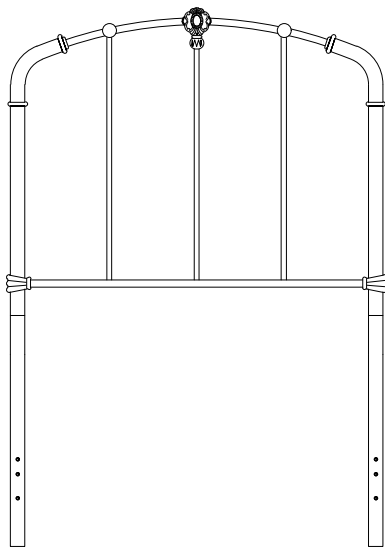
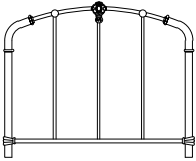


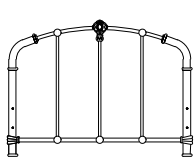








Twin Metal Bedset CF91005-303

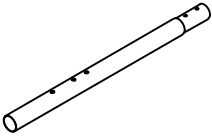

PART LIST


<div data-bbox="67 143 126 199">#A</div> 	<div data-bbox="354 143 413 199">#B</div> 	<div data-bbox="641 143 700 199">#C</div> 
Headboard Panel 1 PC	Footboard Panel 1 PC	Leg Extension 2 PCS

HARDWARE LIST

<div data-bbox="67 636 126 692">#1</div>  <p>1/4" x 1/2"L</p>	<div data-bbox="354 636 413 692">#2</div>  <p>1/4" x 3/4"L</p>	<div data-bbox="641 636 700 692">#3</div>  <p>1/4" x 2-1/4"L</p>	<div data-bbox="928 636 987 692">#4</div>  <p>1/4"</p>	<div data-bbox="1216 636 1275 692">#5</div>  <p>Ø16xØ6.5x1MM</p>
Bolt 4 PCS (Extra 1)	Medium Bolt 4 PCS (Extra 1)	Long Bolt 4 PCS (Extra 1)	Hex Nut 4 PCS (Extra 1)	Flat Washer 12 PCS (Extra 1)
<div data-bbox="67 1014 126 1070">#6</div> 	<div data-bbox="354 1014 413 1070">#7</div> 			
Allen Wrench 1 PC	Wrench 1 PC			


Step 1. Lay headboard panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach leg extensions (part C) to headboard panel (part A) using bolts (part #1), flat washers (part #5) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

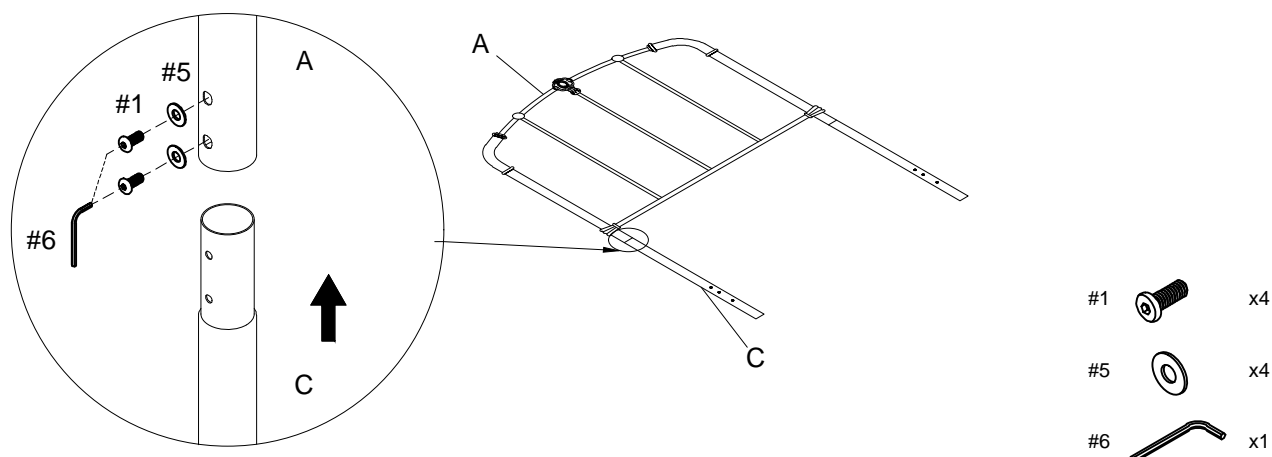

Step 2. Attach bed frame (*Not Included) to leg extensions (part C) using long bolts (part #3), flat washers (part #5), hex nuts (part #4), allen wrench (part #6) and wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

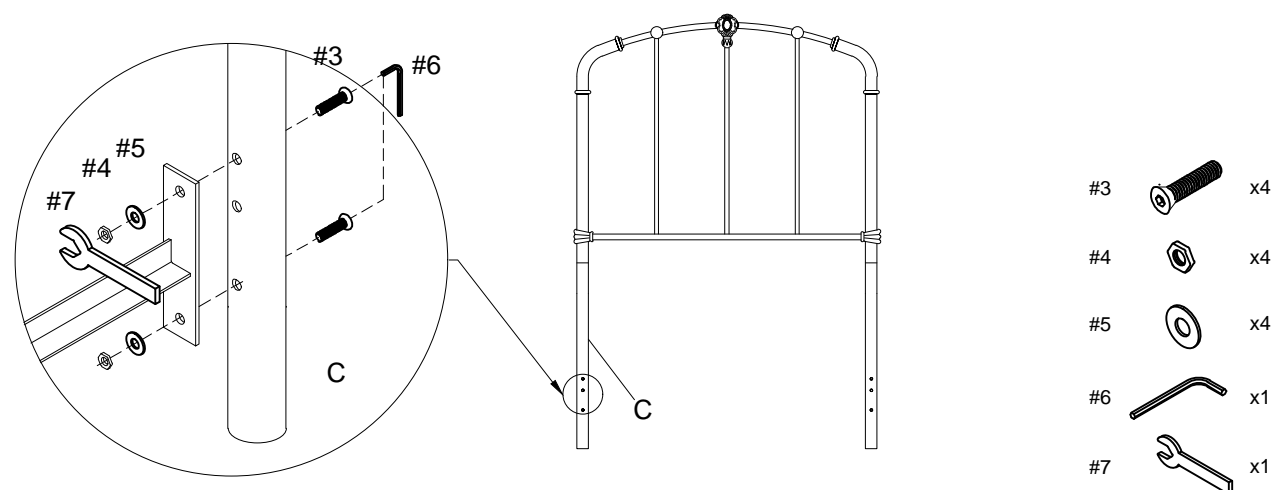

Step 3. Attach bed frame (*Not Included) to footboard panel (part B) using medium bolts (part #2), flat washers (part #5) and allen wrench (part #6).

NOTE: Please fully tighten all bolts at this time.

