






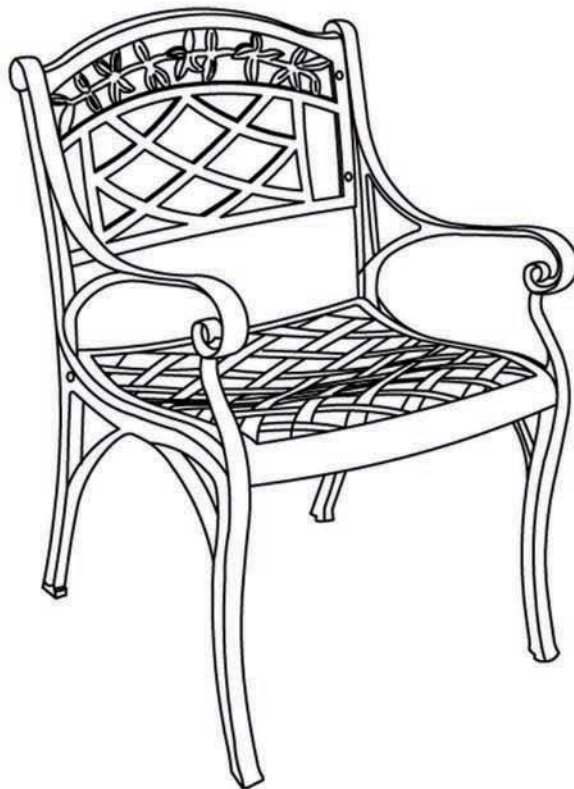











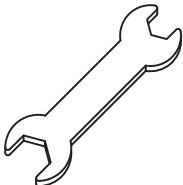

CAST ALUMINUM. ARM CHAIR
CO6101-BK




PARTS LIST

<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 
<p>Back 1 PC</p>	<p>Seat 1 PC</p>	<p>Left Side Frame 1 PC</p>	<p>Right Side Frame 1 PC</p>

HARDWARE LIST

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 	<p>5</p> 
<p>Phillips Heat Bolt (M6*30) 4 pcs</p>	<p>Spring Washer (M6) 4 pcs</p>	<p>Flat Washer (M6) 4 pcs</p>	<p>Nut (M6) 4 pcs</p>	<p>Nut Cap (M6) 4 pcs</p>
<p>6</p> 	<p>7</p> 	<p>8</p> 	<p>9</p> 	<p>10</p> 
<p>Bolt (M8*30) 4 pcs</p>	<p>Spring Washer (M8) 4 pcs</p>	<p>Flat Washer (M8) 8 pcs</p>	<p>Nut (M8) 4 pcs</p>	<p>Nut Cap (M8) 4 pcs</p>
<p>11</p> 	<p>12</p> 			
<p>Wrench (M6 & M8) 1 pc</p>	<p>Bolt Cap (M8) 4 pcs</p>			

Step 1: Attach Side Frame (C & D) to seat (B) With Bolts (Part #6), Flat Washers (Part #8), Spring Washers (Part #7) & Nuts (Part #9).Note - Do not tighten Nuts (Part #9) fully at this time.Cover M8X30 mm bolts (Part #6)with bolt caps (Part #12).

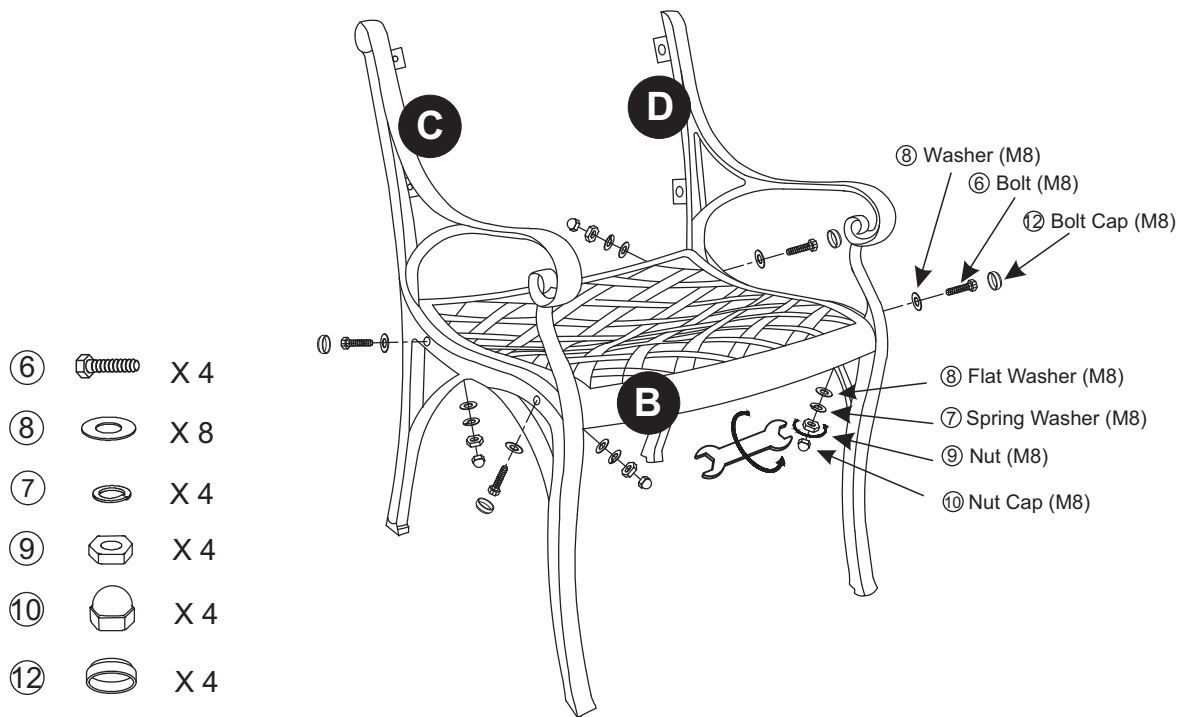

Step 2: Attach Back (A) to unit with Phillips Head Bolts (Part #1), Flat Washers(Part #3), Spring Washers (Part #2), and Nuts (Part #4). Tighten all bolts of the chair completely. Cover all Nuts with Nut Caps (Part #5).

