









CAST ALUM. LOVE SEAT

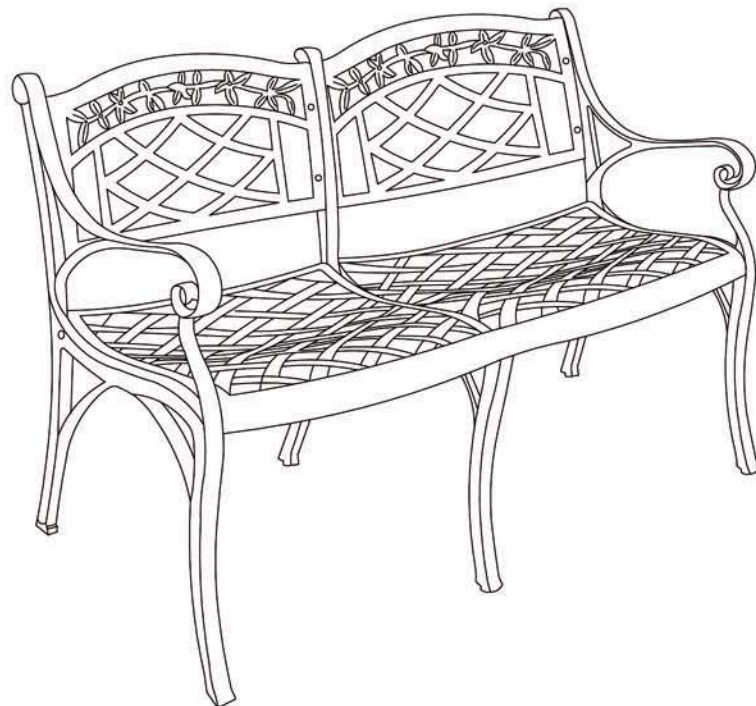









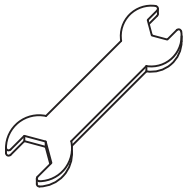


CO6104-BK




PARTS LIST

<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Back 2 PCS</p>	<p>Seat 2 PCS</p>	<p>Left Side Frame 1 PC</p>	<p>Middle Side Frame 1 PC</p>	<p>Right Side Frame 1 PC</p>

HARDWARE LIST

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 	<p>5</p> 
<p>Phillips Heat Bolt (M6*30) 8 pcs</p>	<p>Spring Washer (M6) 8 pcs</p>	<p>Flat Washer (M6) 8 pcs</p>	<p>Nut (M6) 8 pcs</p>	<p>Nut Cap (M6) 8 pcs</p>
<p>6</p> 	<p>7</p> 	<p>8</p> 	<p>9</p> 	<p>10</p> 
<p>Short Bolt (M8*30) 4 pcs</p>	<p>Spring Washer (M8) 6 pcs</p>	<p>Flat Washer (M8) 12 pcs</p>	<p>Nut (M8) 6 pcs</p>	<p>Nut Cap (M8) 6 pcs</p>
<p>11</p> 	<p>12</p> 	<p>13</p> 		
<p>Wrench (M6 & M8) 1 pc</p>	<p>Long Bolt (M8*45) 2 pcs</p>	<p>Bolt Cap (M8) 4 pcs</p>		

Step 1: Attach Frames (C,D&E) to Seats (B) With Short Bolts (Part #6), Long Bolts (Part #12), Flat Washers (Part #8), Spring Washers (Part #7) & Nuts (Part #9). Note- Long Bolts (Part #12) will be used to attach the Middle Frame (D) & Short Bolts (Part #6) will be used to attach the Left & Right Side Frames (C & E). Cover M8X30 mm bolts (Part #6) with bolt caps (Part #13). Note - Do not fully tighten bolts at this time.

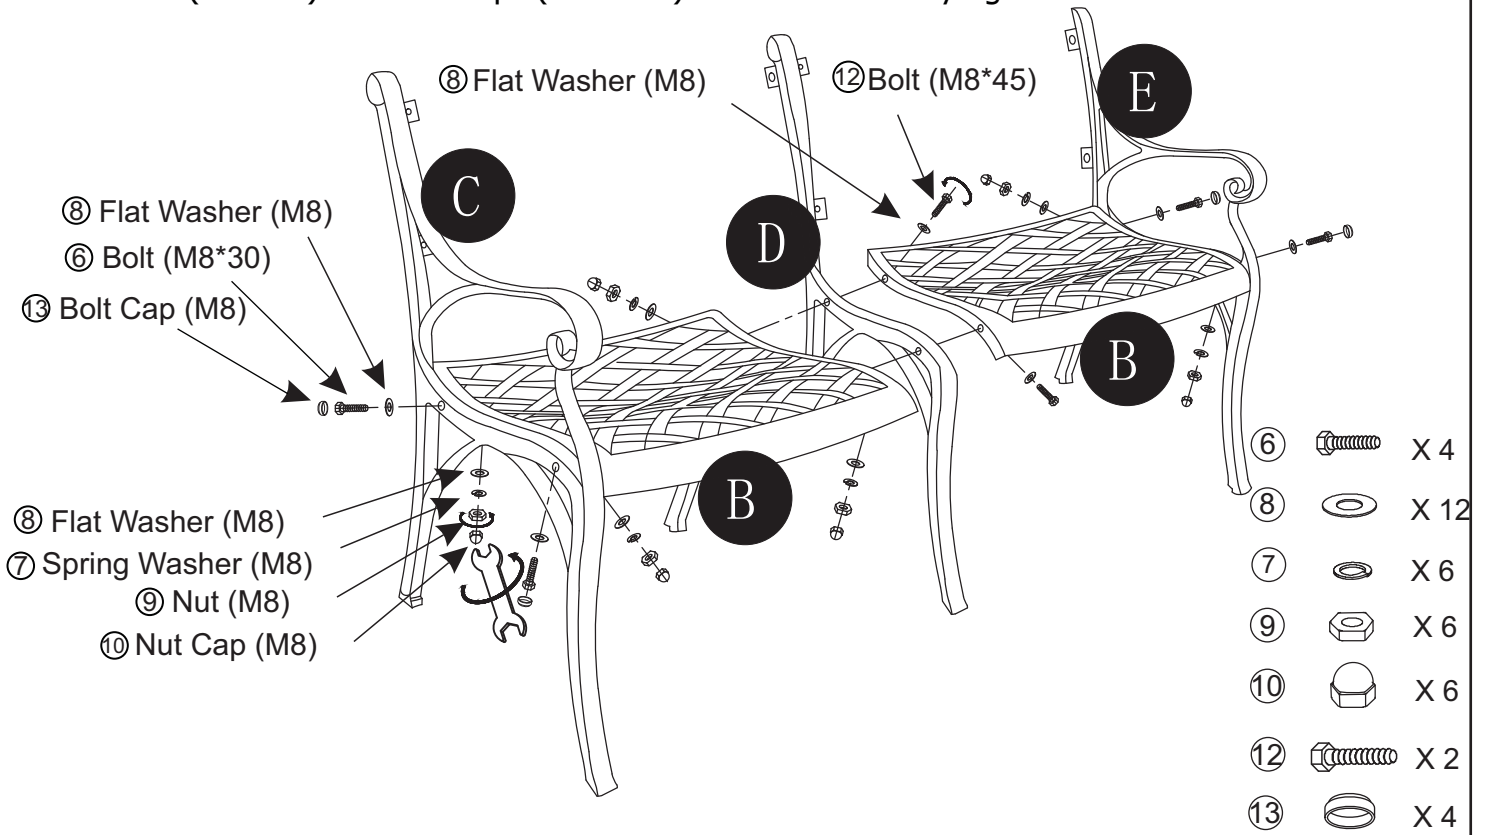

Step 2: Attach Back (A) to unit with Phillips Head Bolts (Part #1), Flat Washers (Part #3), Spring Washers (Part #2), and Nuts (Part #4). Tighten all bolts completely. Cover all Nuts (Part #'s 4) with Nut Caps (Part #'s 5).

