

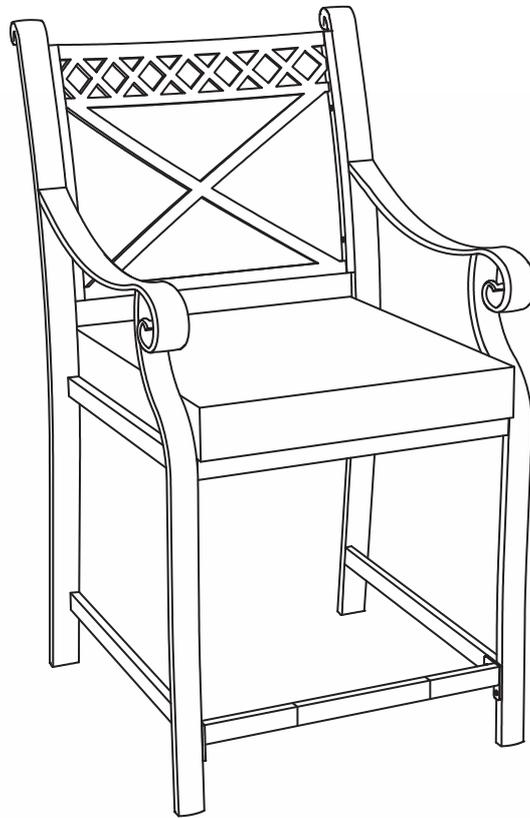


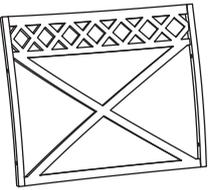


Cast Aluminum Bar Height Stool
CO6105




PARTS LIST

A 	B 	C 	D 	E 
Back Panel 1 PC	Seat Panel 1 PC	Left Arm 1 PC	Right Arm 1 PC	Foot Support 1 PC
F 				
Seat Cushion 1 PC				

HARDWARE LIST


#1 	#2 	#3 	#4 
M6X25mm Long Bolt 8 PCS	M6X15mm Short Bolt 4 PCS	M6mm Flat Washer 12 PCS	M6mm Allen Key 1 PC

EXTRA HARDWARE LIST

#1 	#2 	#3 
M6X25mm Long Bolt 2 PCS	M6X15mm Short Bolt 1 PC	M6mm Flat Washer 3 PCS


Step 1. Attach arms (part #C&D) to seat panel (part #B) using long bolts (part #1), washers (part #3) and allen key (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

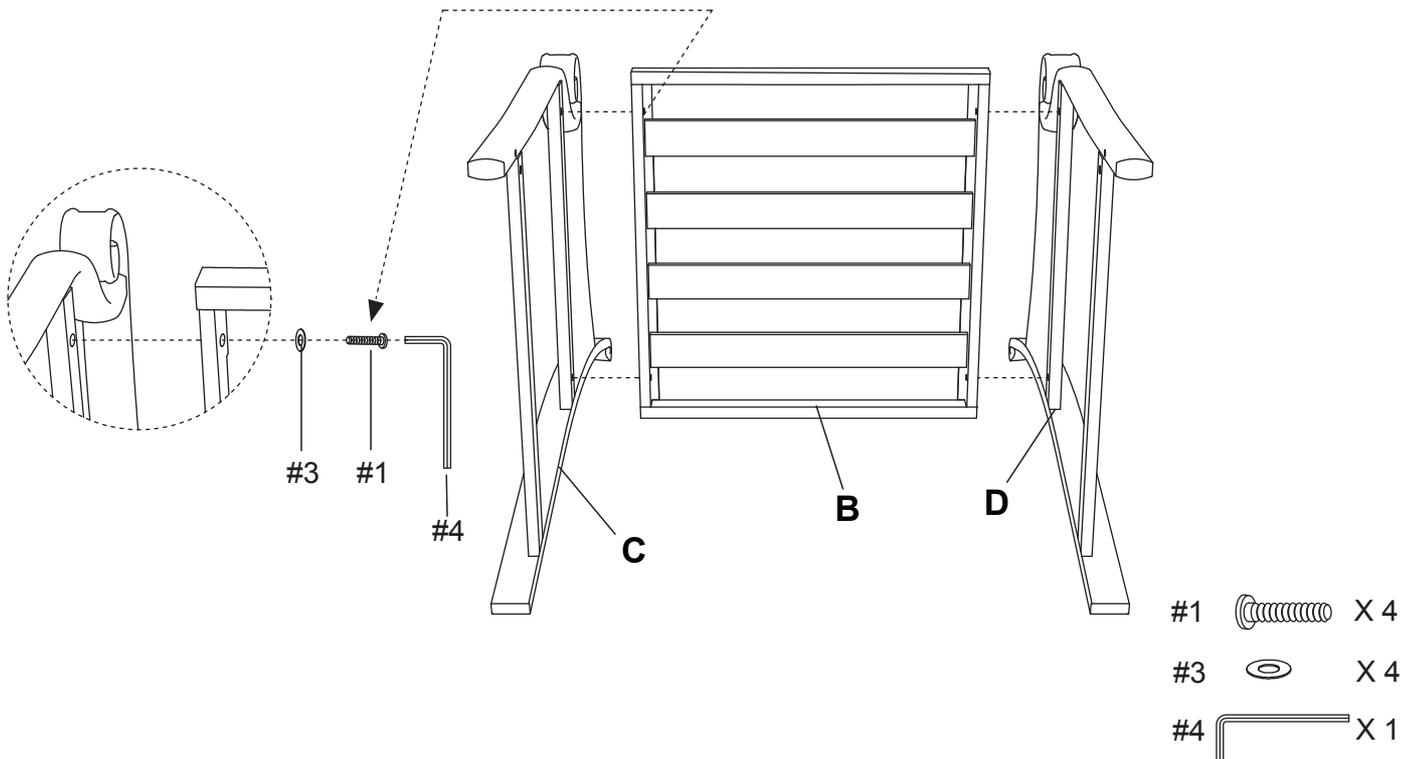


Step 2. Attach back panel (part #A) to arms (part #C&D) using long bolts (part #1), washers (part #3) and allen key (part #4)

NOTE: Please do not fully tighten bolts until unit is fully assembled.

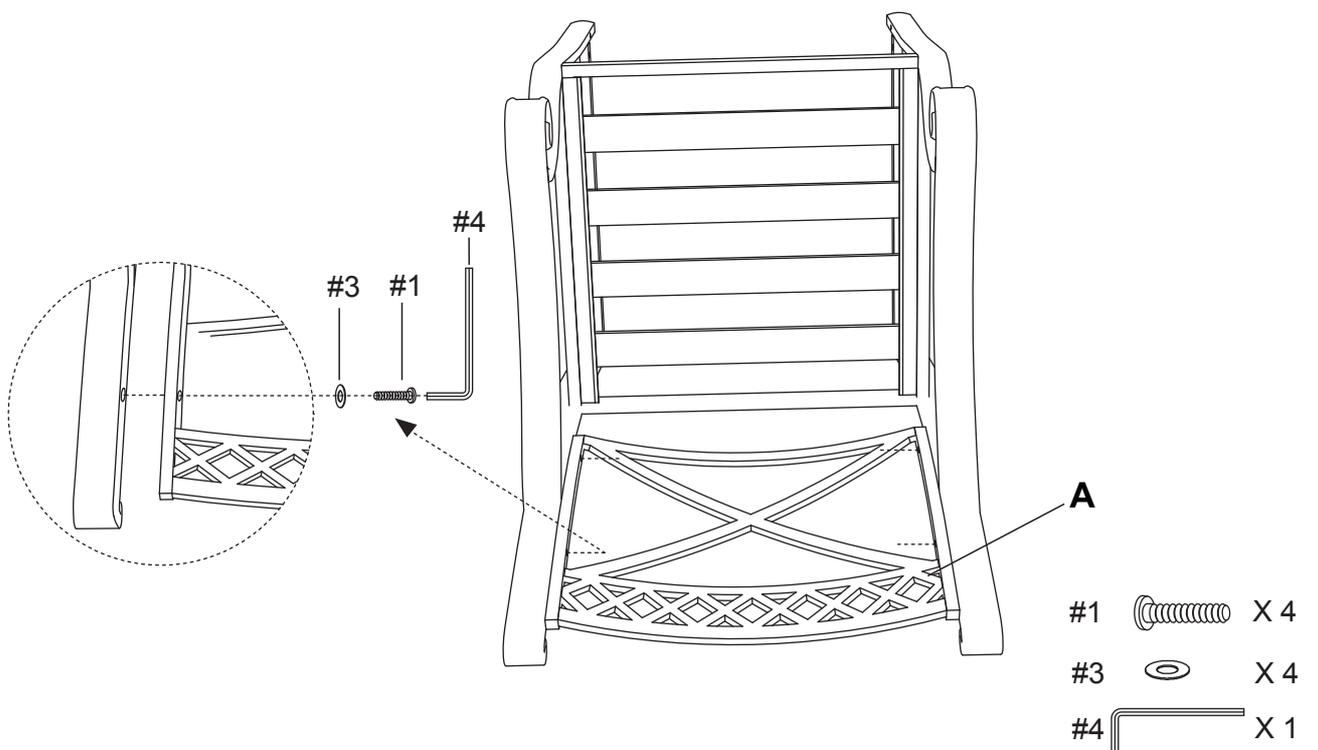

Step 3. Attach foot support (par #E) to front leg using short bolts (par #2), washers (part #3) and allen key (part #4)

NOTE: Please fully tighten all bolts at this time.

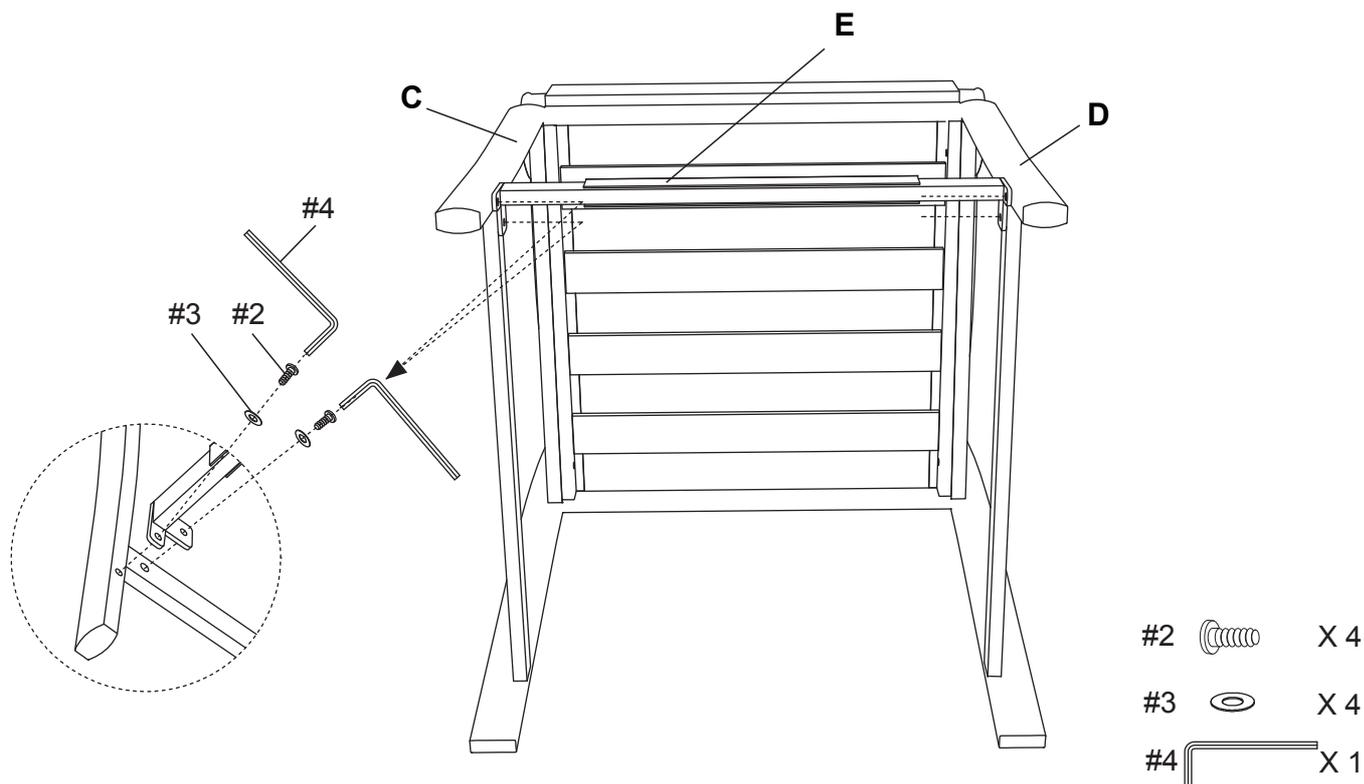

Step 4. Carefully turn the stool upright and place seat cushion (part #F) on the stool.

