


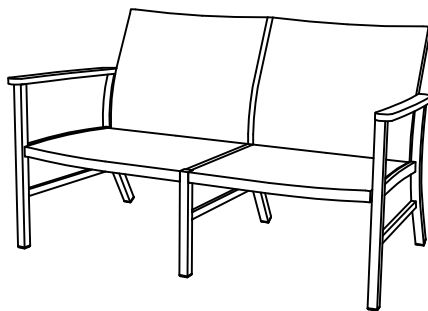
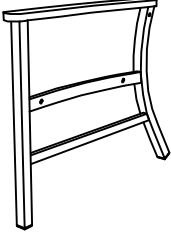
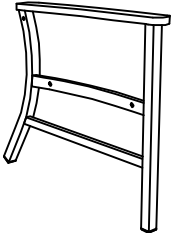


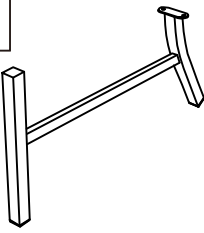



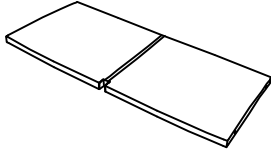


Outdoor Wicker Loveseat  
CO6241

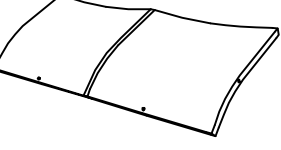

## PART LIST


<div data-bbox="81 143 129 192">#A</div> 	<div data-bbox="375 143 422 192">#B</div> 	<div data-bbox="668 143 716 192">#C</div> 	<div data-bbox="962 143 1010 192">#D</div> 	<div data-bbox="1256 143 1303 192">#E</div> 
Left Arm Panel 1 PC	Right Arm Panel 1 PC	Center Leg 1 PC	Seat Panel 1 PC	Back Panel 1 PC

## HARDWARE LIST

<div data-bbox="81 1122 129 1171">#1</div> 	<div data-bbox="375 1122 422 1171">#2</div> 	<div data-bbox="668 1122 716 1171">#3</div> 	<div data-bbox="962 1122 1010 1171">#4</div> 	<div data-bbox="1256 1122 1303 1171">#5</div> 
M6*20mm  Short Bolt 3 PCS (Extra 1)	M6*45mm  Medium Bolt 6 PCS (Extra 1)	M6*50mm  Long Bolt 2 PCS (Extra 1)	M6mm  Flat Washer 11 PCS (Extra 1)	M6mm  Allen Wrench 1 PC


Step 1. Lay left arm panel (part A) down on a flat surface, such as carpet as shown below. Attach back panel (part E) to left arm panel (part A) using medium bolt (part #2), flat washer (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolt until unit is fully assembled.

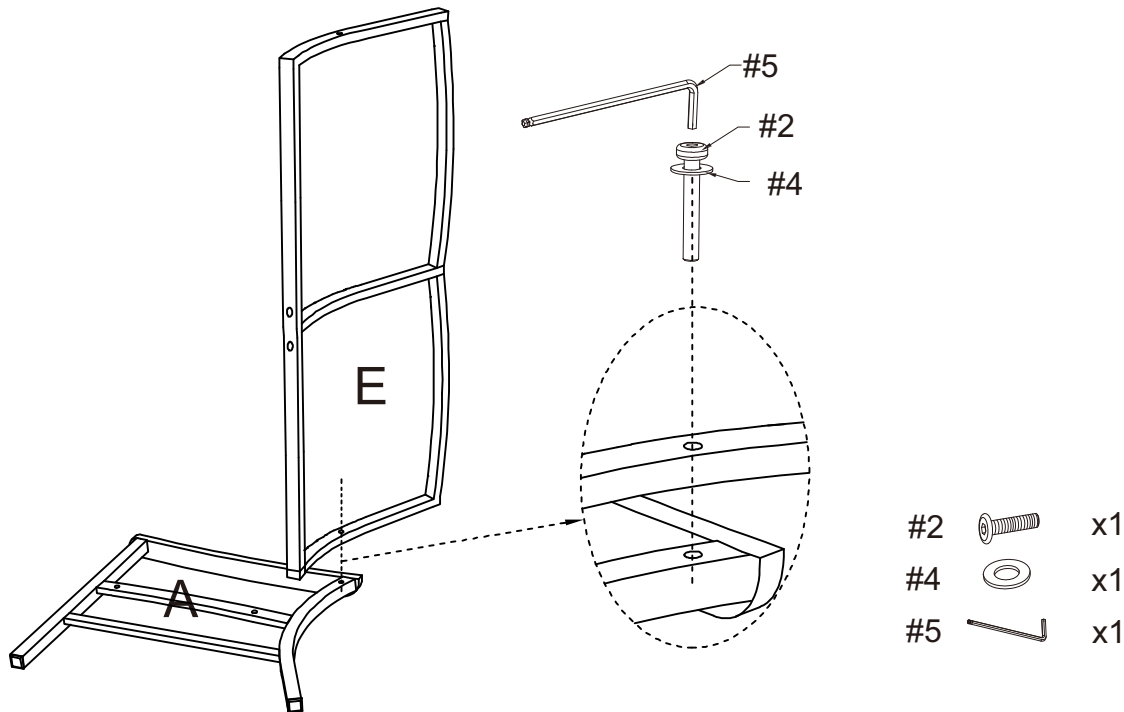


Step 2. Attach seat panel (part D) to left arm panel (part A) and back panel (part E) using medium bolts (part #2), long bolts (part #3), flat washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

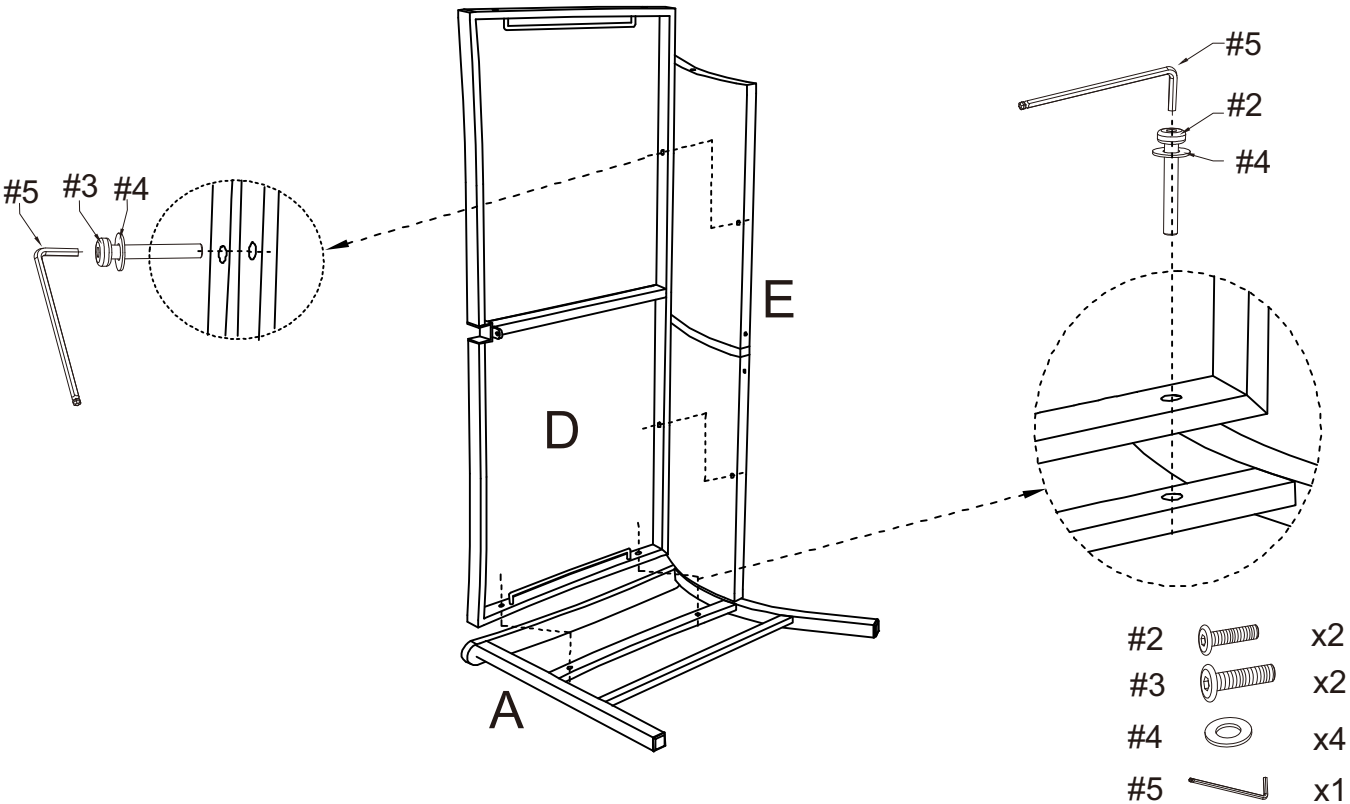


Step 3. Attach center leg (part C) to seat panel (part D) and back panel (part E) using short bolts (part #1), flat washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

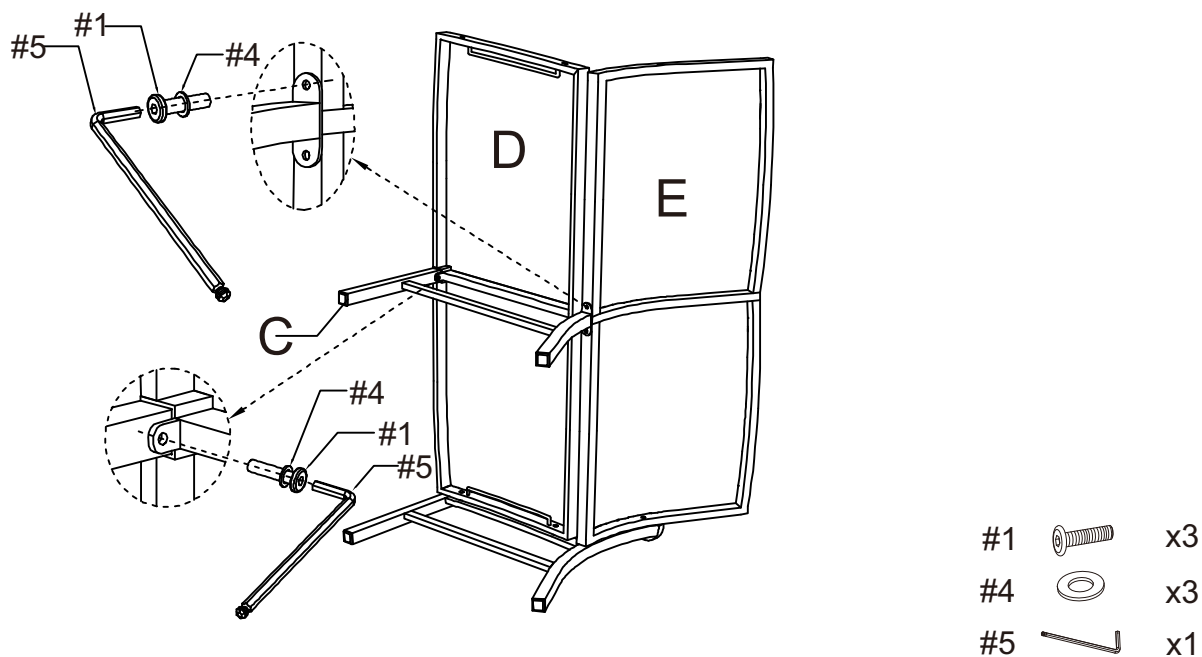

Step 4. Attach right arm panel (part B) to seat panel (part D) and back panel (part E) using medium bolts (part #2), flat washers (part #4) and allen wrench (part #5).

NOTE: Please fully tighten all bolts at this time.

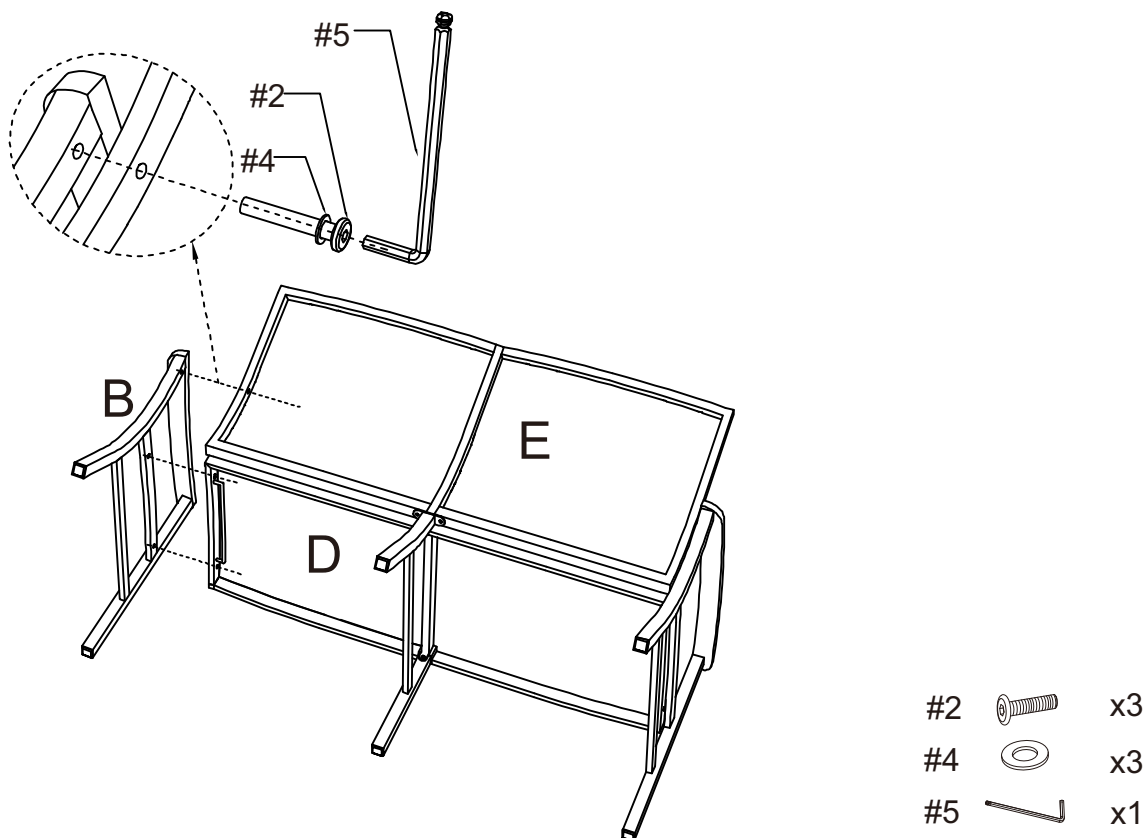

Step 5. Carefully turn the assembled loveseat upright on a flat surface.

