

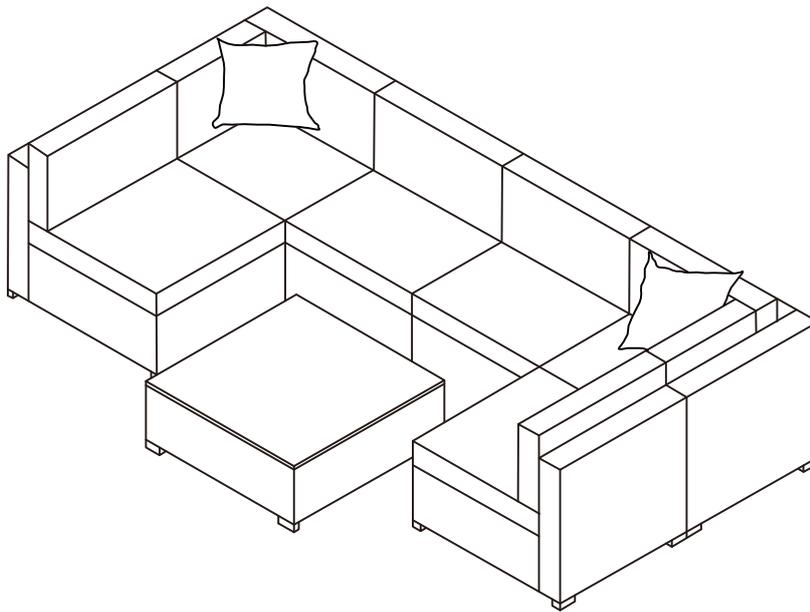











7 Piece Wicker Sofa Set
CO7181



PART LIST


A  (coffee table)	B  (coffee table)	C  (armless chair)	D  (armless chair)	E  (armless\corner chair and coffee table)
Wicker Top 1 PC	Side Panel 2 PCS	Seat Panel 4 PCS	Back Panel 4 PCS	Side Panel 12 PCS
F  (coffee table)	G  (corner chair)	H  (corner chair)	I  (corner chair)	J  (armless & corner chair)
Glass Top 1 PC	Seat Panel 2 PC	Back Panel 2 PCS	Arm Panel 2 PCS	Seat Cushion 6 PCS
K  (armless & corner chair)	L  (corner chair)	M 		
Long Back Cushion 6 PCS	Short Back Cushion 2 PCS	Pillow 2 PCS		

HARDWARE LIST

#1  M6*30mm	#2  M6*40mm	#3  M6*50mm	#4  M6mm	#5  M6mm
Short Bolt 44 PCS (Extra 4)	Medium Bolt 30 PCS (Extra 3)	Long Bolt 16 PCS (Extra 2)	Flat Washer 136 PCS (Extra 13)	Hex Nut 46 PCS (Extra 4)
#6  M6mm	#7  M6mm	#8 		
Allen Wrench 2 PCS	Wrench 2 PCS	Plastic Clip 10 PCS		


Step 1. Lay wicker top (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach side panels (part B) to wicker top (part A) using short bolts (part #1), flat washers (part #4) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

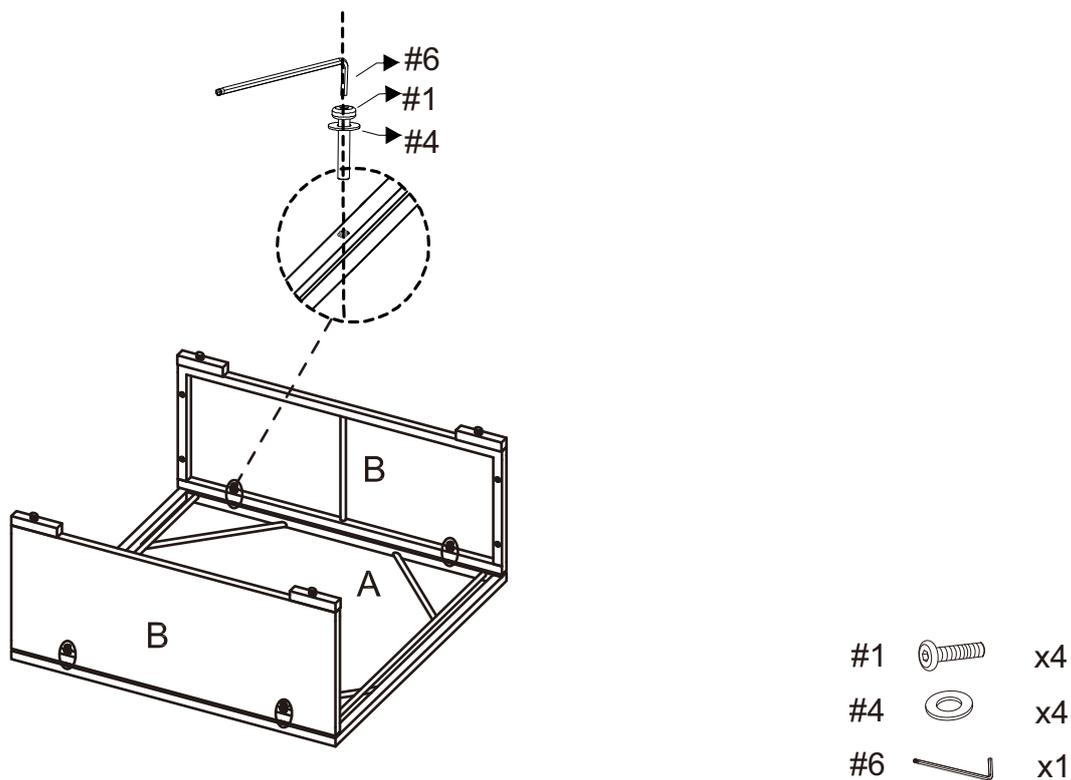


Step 2. Attach side panels (part E) to side panels (part B) and wicker top (part A) using short bolts (part #1), flat washers (part #4) and allen wrench (part #6).

NOTE: Please fully tighten all bolts at this time.

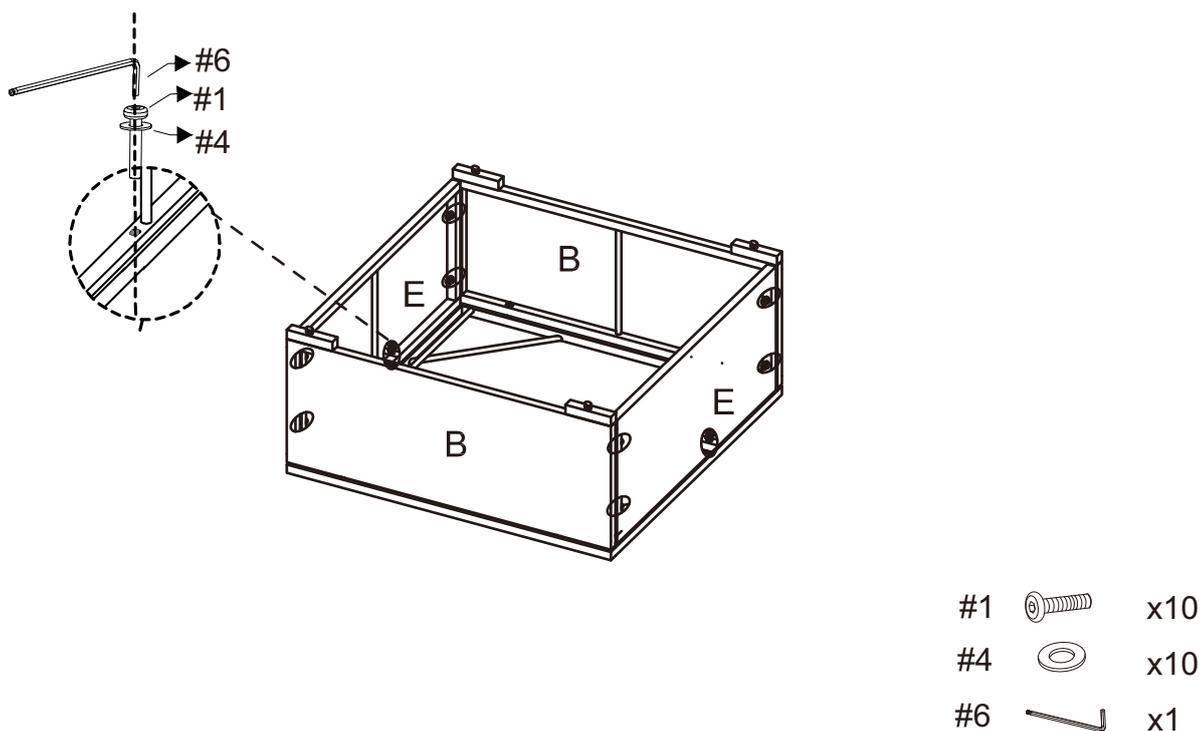


Step 3. Carefully turn unit upright. Place glass top (part F) on wicker top (part A).

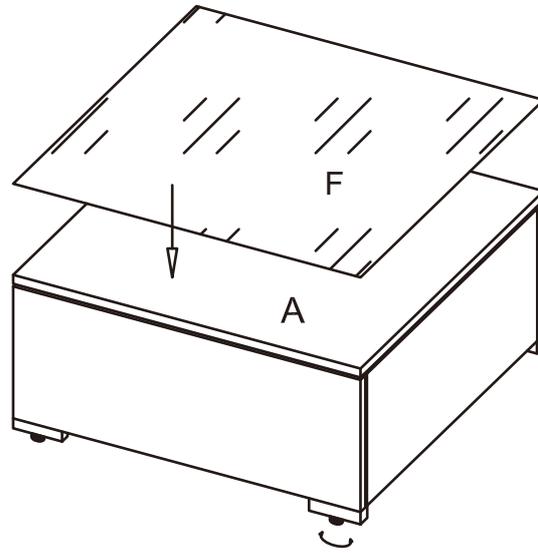


Step 4. Lay back panel (part D) upside down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part C) to back panel (part D) using long bolts (part #3), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

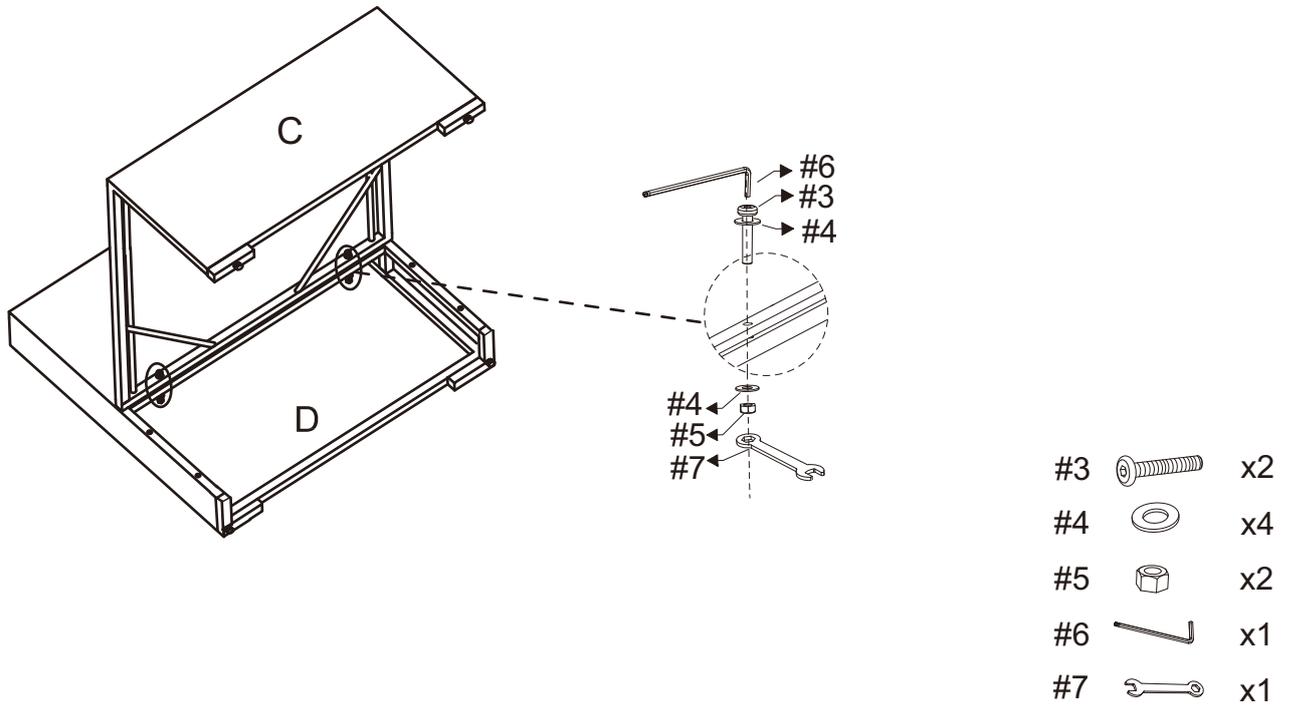


Step 5. Attach side panels (part E) to back panel (part D) and seat panel (part C) using short bolts (part #1), medium bolts (part #2), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).

NOTE: Please fully tighten all bolts at this time.

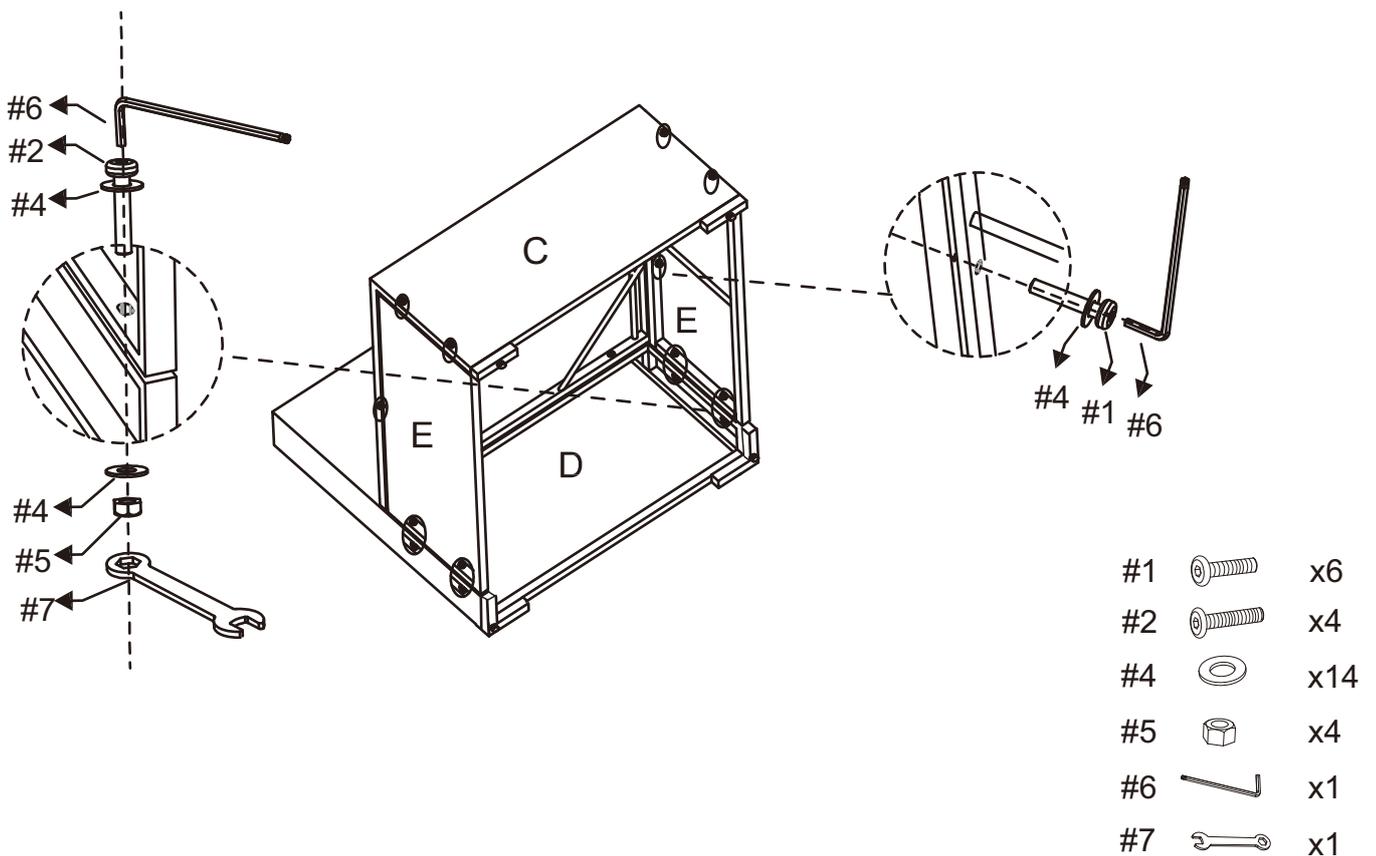


Step 6. Carefully turn unit upright. Add seat cushion (part J) and long back cushion (part K) as shown below. Repeat steps 4-6 to assemble remaining armless chairs.

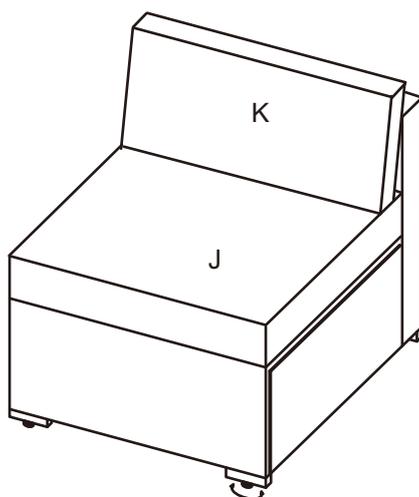

Step 7. Lay back panel (part H) upside down on a soft flat surface, such as carpet, as shown below. Attach arm panel (part I) to back panel (part H) using medium bolts (part #2), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

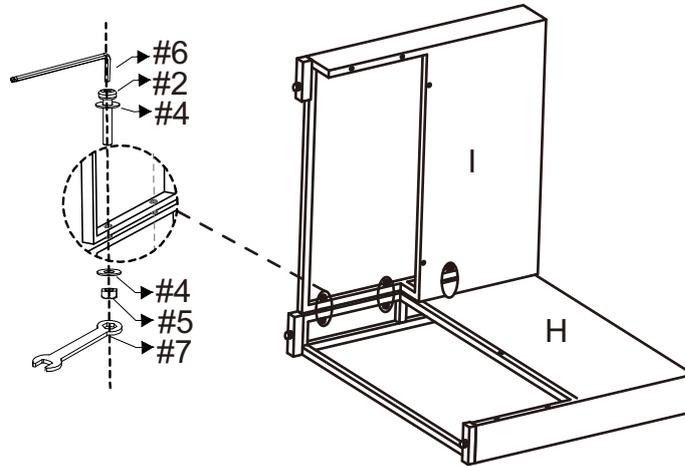

#2		x3
#4		x6
#5		x3
#6		x1
#7		x1

Step 8. Attach seat panel (part G) to back panel (part H) and arm panel (part I) using medium bolts (part #2), long bolts (part #3), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

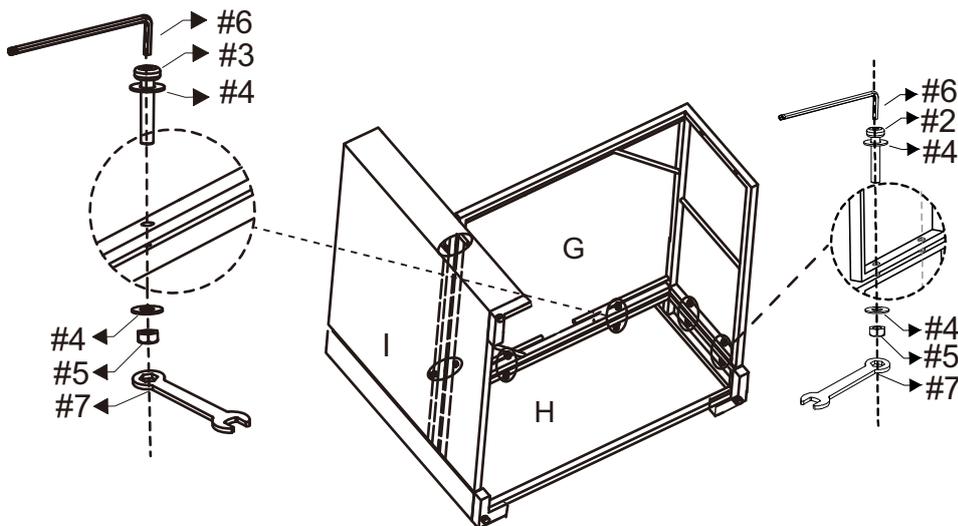


#2		x2
#3		x4
#4		x12
#5		x6
#6		x1
#7		x1

Step 9. Attach side panel (part E) to arm panel (part I) and seat panel (part G) using short bolts (part #1), medium bolts (part #2), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).


NOTE: Please fully tighten all bolts at this time.

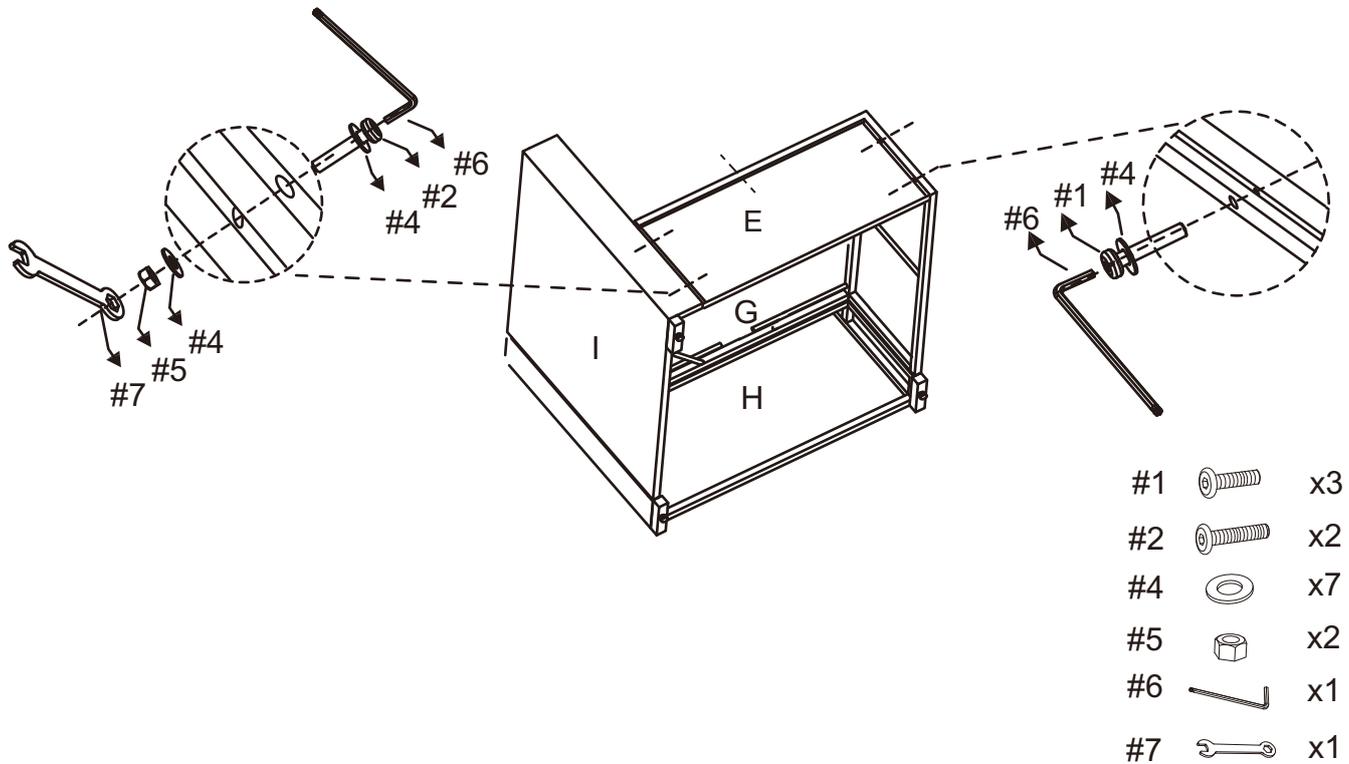

Step 10. Carefully turn unit upright. Add seat cushion (part J), long back cushion (part K) and short back cushion (part L) as shown below. Repeat steps 7-10 to assemble remaining corner chair.

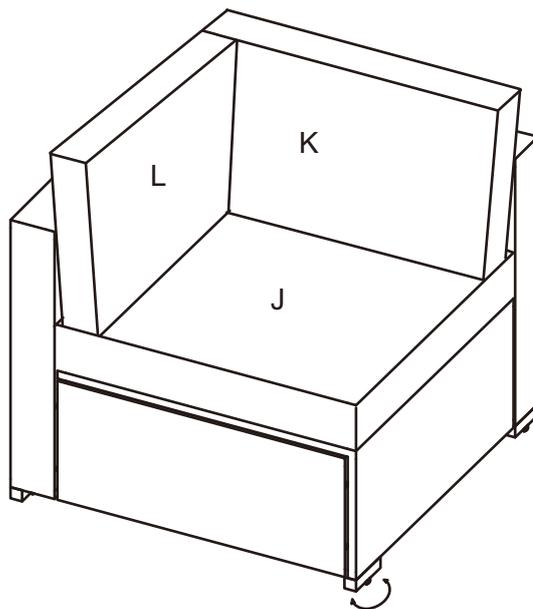

Step 11. Use plastic clips (part #8) to secure additional units together as shown.

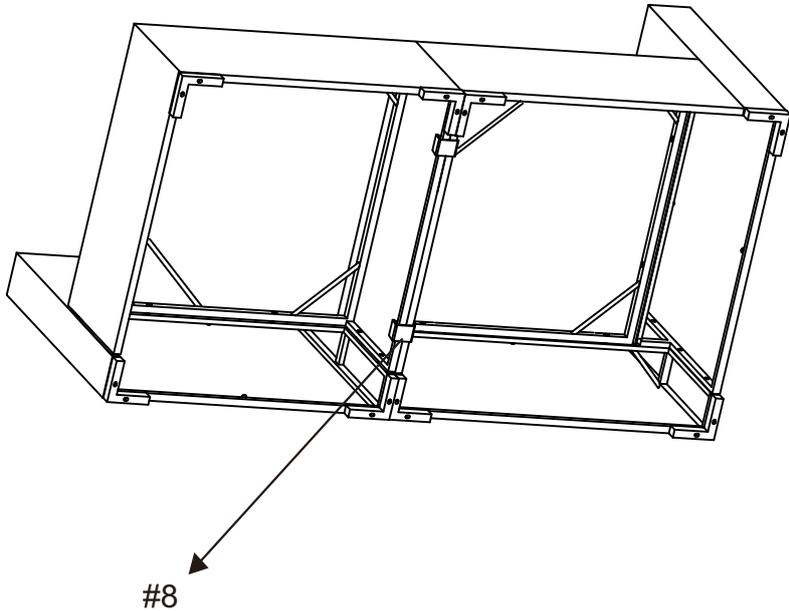

#8  x10

Step 12. Add pillows (part M) as shown below.

